


WK2 Rock Rails

Install Instructions

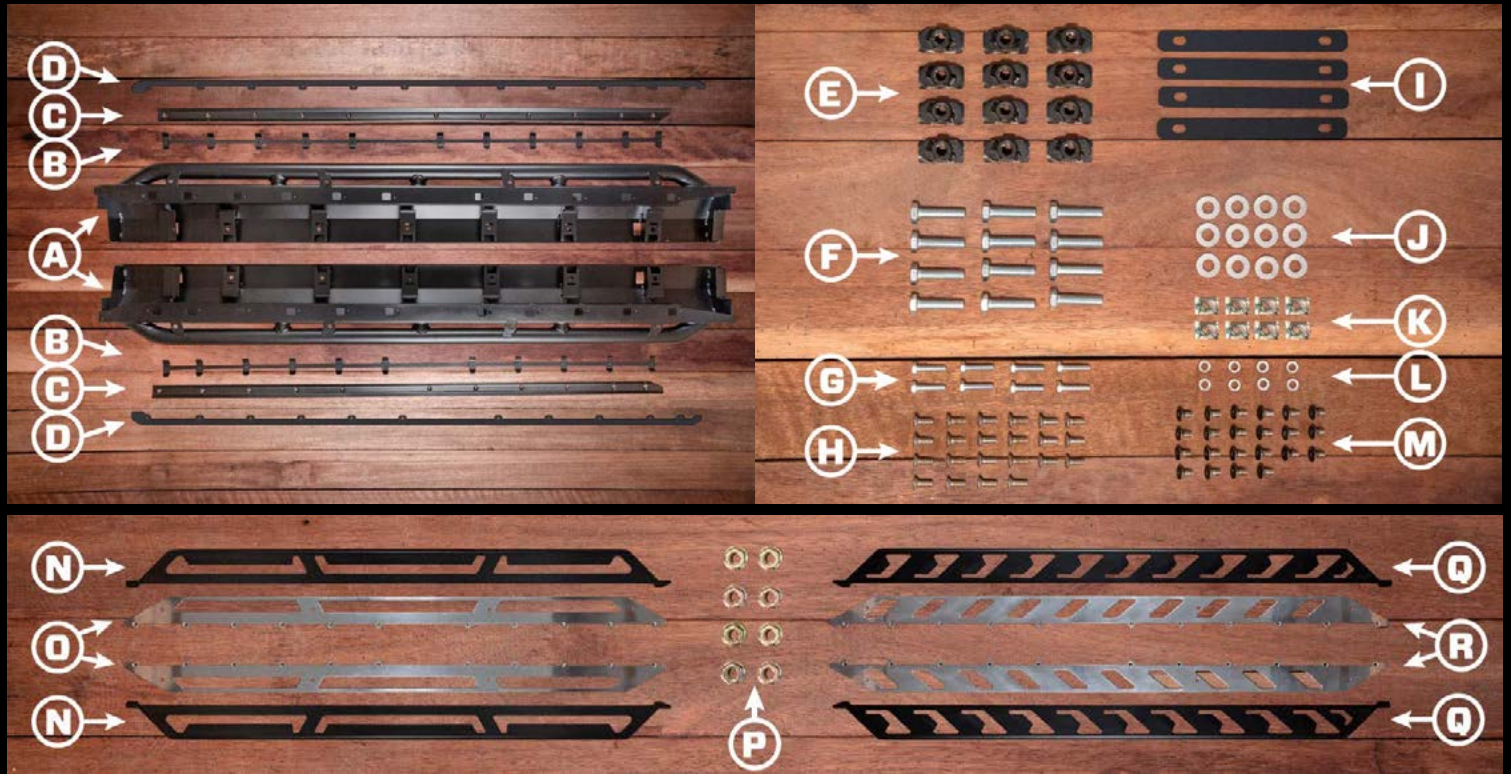

REF	QTY	DESCRIPTION	REF	QTY	DESCRIPTION
A	2	Rock Rail (Left + Right)	-	1	4g Anti-Seize Pouch
B	2	Clamping Rail (Left + Right)	-	1	Chief Products Shop Rag
C	2	Clamping Plate (Left + Right)			SAFARI THREE TREAD KIT
D	2	Spacer Plate (Left + Right) <i>Bare Bones and Non-Tread</i>	N	2	Step Tread (Safari Three)
E	12	Insert Nut	O	2	Tread Pattern (Safari Three)
F	12	M10 x 40mm 10.9 Bolts (Zinc)	P	8	Flanged Nut
G	8	M6 x 25mm 10.9 Bolts (Zinc)			TREK ELEVEN TREAD KIT
H	22	M6 x 16mm 8.8 Countersunk Hex Screw (Zinc)	Q	2	Step Tread (Trek Eleven)
I	4	Lower Fastening Plate	R	2	Tread Pattern (Trek Eleven)
J	12	M10 Wedge-Lock Extended Washer	P	8	Flanged Nut
K	8	M6 U-Nut (Zinc)			
L	8	M6 Wedge-Lock Extended Washer			
M	22	M6 x 10mm 8.8 Countersunk Hex Screw (Black Zinc)			

REQUIRED TOOLS

16mm Socket	16mm Wrench
13mm Socket	Punch Tool
10mm Socket	Hammer
Ratchet	Plastic Trim Tool
Ratchet Extension	Hex Key H4

NOTES

- Do not over-tighten fasteners.
- Photos are representative only. They may show prototype parts and be taken from multiple vehicles.

IMPORTANT

- PROPER INSTALLATION IS ESSENTIAL TO THE PERFORMANCE OF THIS PRODUCT.
- ONLY INSTALL THIS PRODUCT ON A 2011-2018 JEEP GRAND CHEROKEE.
- ONLY USE THE PROVIDED HARDWARE FOR INSTALLATION.
- DO NOT MODIFY THE STRUCTURE OF THIS PRODUCT IN ANY WAY.
- CHECK PRODUCT REGULARLY FOR DAMAGE. REPLACE IMMEDIATELY AT FIRST SIGN OF DAMAGE.
- CHECK FASTENER TIGHTNESS REGULARLY AND TIGHTEN IF REQUIRED.

Begin Rocker Panel Removal

WK2 Rock Rails

Install Instructions

1

Remove Plastic Clips.

1. Using a punch tool remove (5) OEM plastic clips.
2. Remove factory OEM fasteners at each end of the rocker panel (inside each wheel arch).



2

Unclip Rocker Panel.

1. Using a plastic trim tool unclip rocker panel from the body.

NOTE

This part is no longer required.



3

Remove OEM rubber plugs.

1. Remove (6) rubber plugs.

NOTE

On newer models these could be adhesive stickers.



WK2 Rock Rails

Install Instructions

4

Modify Body Tab.

- Using a hammer, bend the tab up located in front of the rear tyre.



Begin Installation

5

Install Insert Nuts.

- Using (1) Insert Nut [E] push into the oval shaped hole in the rocker panel nut first. Quarter turn Insert Nut so the rocker panel is sandwiched between the thick and thin metal tabs of the Insert Nut. Centre Insert Nut [E] in hole.

If insert nut is difficult to turn, thread M10 x 40mm Bolt [F] into insert nut and use a 16mm spanner to turn the insert nut into position [see 3rd image]. Remove Bolt when insert nut is in position.



6

Install M6 U-Nuts.

- Clip (4) M6 U-Nuts [K] onto (1) Rock Rail [A] (see inset photo). Align with holes (Red Circles).



WK2 Rock Rails

Install Instructions

7

Install Rock Rail.

1. Place (1) M10 Wedge-Lock Washer [J] on top (1) M10 40mm bolt [F]. Prepare (6) Bolt & Washer Combos.
2. With the doors open, place (1) Rock Rail [A] against the body.
3. Using the (6) Bolt & Washer combos loosely fasten the Rock Rail [A] to the Insert Nuts [E].

NOTE

You can use a flat head screw driver to hang the Rock Rails while fastening the hardware. You'll find a body alignment hole on the vehicle body side (see image insert).



8

Wheel-Well Liner Placement.

1. Tuck the front wheel-well liner between the Rock Rail [A] and body.
2. Do this again for the rear wheel-well liner.



9

Install Lower Fastening Plates.

1. Place (1) M6 Wedge-Lock Washer [L] on top (1) M6 25mm bolt [G]. Prepare (4) Bolt & Washer Combos.
2. Starting behind the front tyre, place (1) Lower Fastening Plate [I] against the body.
3. Pass (2) M6 Bolt & Washer combos through Lower Fastening Plate [I] and into U-Nut [K] on Rock Rail [A]. Finger tight.
4. Repeat the above steps for in front of the rear tyre (Second Photo).

NOTE

To install the forward most M6 bolt, you may need to bend the body reinforcement bracket out of the way slightly (Blue Square).



WK2 Rock Rails

Install Instructions

9

Install Clamping Rail.

1. With the doors still open, slide tabs of Clamping Rail [B] through the Rock Rails [A] and into the body.



IF YOU HAVE:

- Bare Bones or No-Tread Editions (**GO TO STEP 10**).
- Trek Eleven or Safari Three Tread Plates (**Go To Step 11**).

10 Bare Bones or No Tread Editions

Install Tread.

1. Place Spacer Plate [D] on top of Clamping Rail [B].
2. Using (11) M6 x 16mm Hex Screws [H] fasten Spacer Plate [D] to Rock Rail [A]. Install all of the bolts loosely. Then tighten evenly.

Skip to Step 13.

NOTE

Recommended M6 Bolt Torque = 14Nm (Dry) or 11Nm (Anti-Seize)



11 Trek Eleven or Safari Three Tread Plates

Install Tread Pattern.

1. Place Tread Pattern [O/R] on top of Clamping Rail [B] and Rock Rail [A].
2. Using (11) M6 x 16mm Hex Screws [H] fasten Tread Pattern [O/R] to Rock Rail [A]. Install all of the bolts loosely. Then tighten evenly.

Spacer Plate [D] is not required with Tread Plates.

NOTE

Recommended M6 Bolt Torque = 14Nm (Dry) or 11Nm (Anti-Seize)



WK2 Rock Rails

Install Instructions

12 Trek Eleven or Safari Three Tread Plates

Install Step Tread

1. Close both doors.
2. Lay Step Tread [N/Q] onto Tread Pattern [O/R] and Rock Rail [A]. Ensure studs on the back of Step Tread [N/Q] pass through the holes in Tread Pattern [O/R] and Rock Rail [A].
3. Using (4) Flanged Nuts [P] fasten Step Tread [N/Q] to Rock Rails [A]. Tighten until snug. Do not over-tighten.

NOTE

Recommended M8 Bolt Torque = 23Nm (Dry) or 18Nm (Anti-Seize)



13

Install Clamping Plate

1. Opening up the doors again, place (1) Clamping Plate [C] against Clamping Rail [B].
2. Using (11) M6 x 10mm Hex Screws [M] fasten Clamping Plate [C] to Clamping Rail [B]. Install all of the bolts loosely. Then tighten evenly.

NOTE

Recommended M6 Bolt Torque = 14Nm (Dry) or 11Nm (Anti-Seize)



14

Tighten M6 fasteners.

1. Tighten front M6 Lower Fastening Plate Bolts.
2. Tighten rear M6 Lower Fastening Plate Bolts.

NOTE

Recommended M6 Bolt Torque = 20Nm (Dry) or 16Nm (Anti-Seize)



WK2 Rock Rails

Install Instructions

15**Tighten M10 fasteners.**

1. Tighten (6) M10 fasteners.

NOTE

Recommended M10 Bolt Torque = 90Nm (Dry) or 74Nm (Anti-Seize)



Repeat Steps 1 - 15 for the other side.

WK2 Rock Rails are now fully installed.

MAINTENANCE

FASTENERS

- Check fastener tightness regularly and tighten if required. We recommend checking fasteners after every large off-road trip.

CORROSION PROTECTION

- After an off-road trip; rinse all mud, sand or debris off the product.
- After driving in salt water; rinse product thoroughly with fresh water.

EXTRA CARE

- If you're planning to drive in a salty environment; spray fasteners with WD40 or an equivalent.
- If you're planning to drive in a salty environment; spray product with Lanolin or an equivalent.
- Spray deep scratches (before they rust) with touch up paint to help inhibit corrosion.



SUPPORT

Find answers online.

www.chiefproducts.com.au/pages/support

Having troubles? Make sure you've downloaded the most recent version of these instructions from our website. We occasionally make updates.

www.chiefproducts.com.au/installation/wk2-rock-rails.pdf

If you need additional help, send us an email.

support@chiefproducts.com.au

SHARE

Looking to share epic photos of your WK2?

Send us your photos - Unboxing, Fully Installed, Painted-In-Mud or out Adventuring in some beautiful location. If you share with us, we'll share with our followers.

UPLOAD

www.chiefproducts.com.au/share

EMAIL

connect@chiefproducts.com.au

HASHTAG

#ChiefProducts #GrandAdventure