


Mecca Bathroom Accessories


ROBE HOOK

NR1982CH / NR1982MB / NR1982BN
NR1982GM / NR1982BG / NR1982BZ
NR1982MW

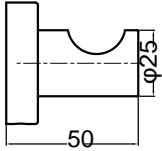


SINGLE TOWEL RAIL 600MM

NR1924CH / NR1924MB / NR1924BN
NR1924GM / NR1924BG / NR1924BZ
NR1924MW

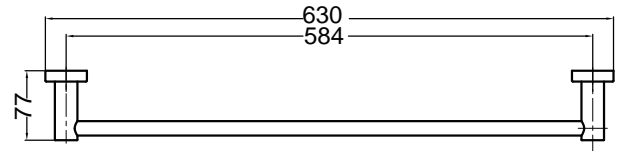


TOILET ROLL HOLDER

NR1986CH / NR1986MB / NR1986BN
NR1986GM / NR1986BG / NR1986BZ
NR1986MW

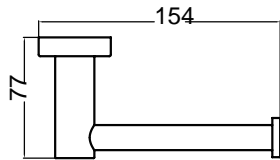


DOUBLE TOWEL RAIL 600MM

NR1924dCH / NR1924dMB / NR1924dBN
NR1924dGM / NR1924dBG / NR1924dBZ
NR1924dMW

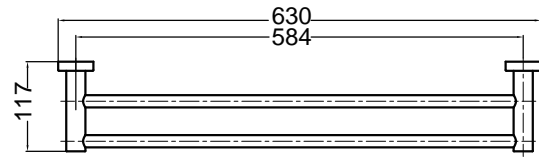


HAND TOWEL RAIL

NR1980aCH / NR1980aMB / NR1980aBN
NR1980aGM / NR1980aBG / NR1980aBZ
NR1980aMW

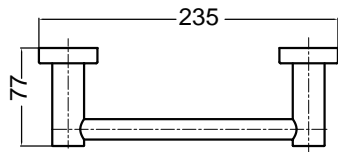


SINGLE TOWEL RAIL 800MM

NR1930CH / NR1930MB / NR1930BN
NR1930GM / NR1930BG / NR1930BZ
NR1930MW

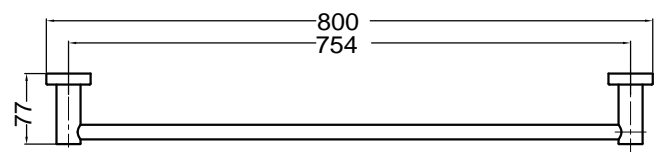


HAND TOWEL RING

NR1980CH / NR1980MB / NR1980BN
NR1980GM / NR1980BG / NR1980BZ
NR1980MW

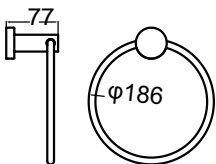


DOUBLE TOWEL RAIL 800MM

NR1930dCH / NR1930dMB / NR1930dBN
NR1930dGM / NR1930dBG / NR1930dBZ
NR1930dMW

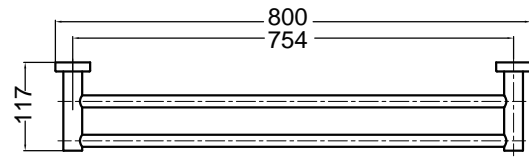


METAL SHELF

NR1987aCH / NR1987aMB / NR1987aBN
NR1987aGM / NR1987aBG / NR1987aBZ
NR1987aMW

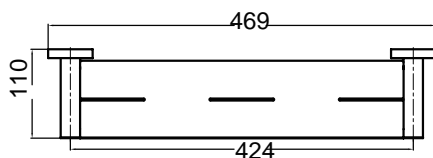


TOWEL RACK

NR1989CH / NR1989MB / NR1989BN
NR1989GM / NR1989BG / NR1989BZ
NR1989MW

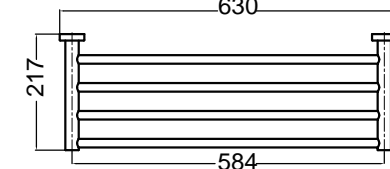


TOILET BRUSH HOLDER


NR1988CH
 NR1988MB
 NR1988BN
 NR1988GM
 NR1988BG
 NR1988BZ
 NR1988MW

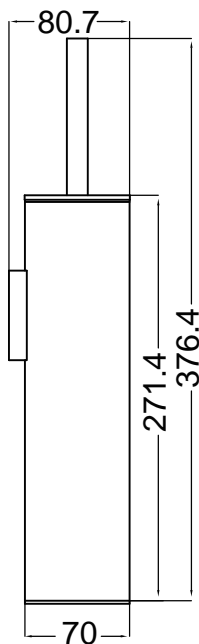

DOUBLE TOILET ROLL HOLDER
 NR1986dCH / NR1986dMB / NR1986dBN
 NR1986dGM / NR1986dBG / NR1986dBZ
 NR1986dMW

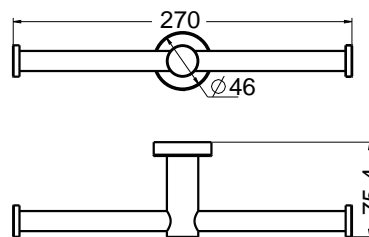


MEECA SOAP BOTTLE HOLDER
 NR1985CH / NR1985MB / NR1985BN
 NR1985GM / NR1985BG / NR1985BZ
 NR1985MW

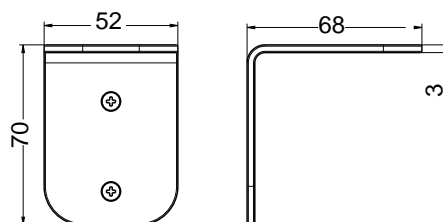


Installation Instruction



1. Put the fixing blocks (piece) over on the right place on the wall, and stay level, use marking pen through the holes of fixing block to mark out fixing spots on the wall. Then drill holes by electric hand drill with 6mm drilling bit on the spots.

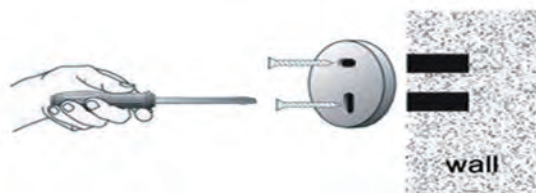


3. Put fixing block cover on the holes and fix firmly by expansion screws.

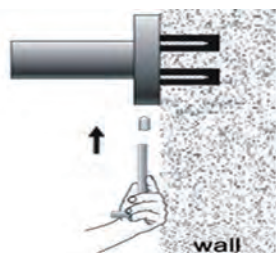

5. Screw grub screws into the base, make it against the fixing block tight and firm.



2. Put the expansion plugs into the wall by hammer.

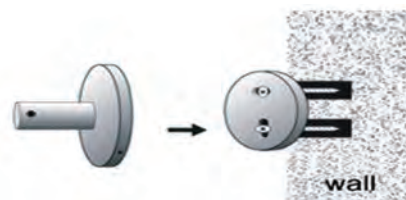


4. Put the base of bathroom accessory cover on the fixing blocks.

Available Colour



CHROME



BRUSHED BRONZE



MATTE BLACK



BRUSHED NICKEL



GUN METAL



BRUSHED GOLD



MATTE WHITE