


New Mecca Bathroom Accessories


ROBE HOOK

NR2382CH / NR2382MB / NR2382BN
NR2382GM / NR2382BG

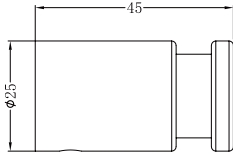


SINGLE TOWEL RAIL 600MM

NR2324CH / NR2324MB / NR2324BN
NR2324GM / NR2324BG

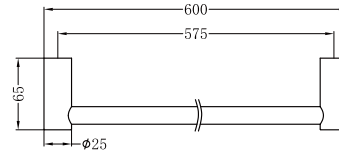


SINGLE TOWEL RAIL 800MM

NR2330CH / NR2330MB / NR2330BN
NR2330GM / NR2330BG

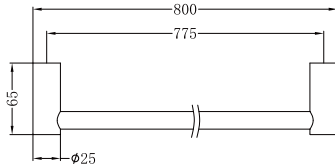


DOUBLE TOWEL RAIL 600MM

NR2324dCH / NR2324dMB / NR2324dBN
NR2324dGM / NR2324dBG

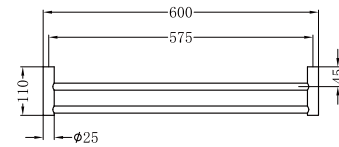


DOUBLE TOWEL RAIL 800MM

NR2330dCH / NR2330dMB / NR2330dBN
NR2330dGM / NR2330dBG




METAL SHELF

NR2387aCH / NR2387aMB / NR2387aBN
NR2387aGM / NR2387aBG

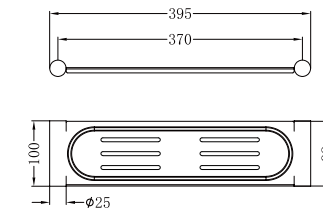


SOAP DISH HOLDER

NR2381CH / NR2381MB / NR2381BN
NR2381GM / NR2381BG

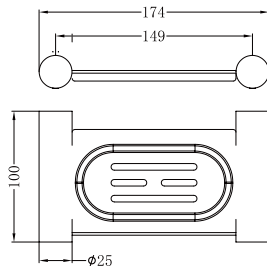


TOILET ROLL HOLDER

NR2386CH / NR2386MB / NR2386BN
NR2386GM / NR2386BG

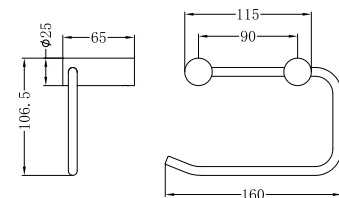


HAND TOWEL RAIL

NR2380CH / NR2380MB / NR2380BN
NR2380GM / NR2380BG

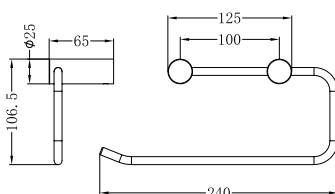

TOWEL RING

NR2380aCH / NR2380aMB / NR2380aBN
NR2380aGM / NR2380aBG

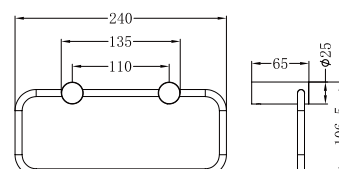

Available Colour



CHROME



MATTE BLACK



BRUSHED NICKEL




GUN METAL



BRUSHED GOLD


Installation Instruction

1

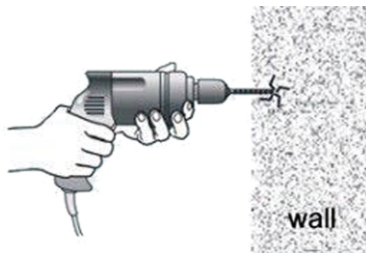


1. Put the fixing blocks (piece) over on the right place on the wall , and stay level, use marking pen through the holes of fixing block to mark out fixing spots on the wall. Then drill holes by electric hand drill with 6mm drilling bit on the spots.

02

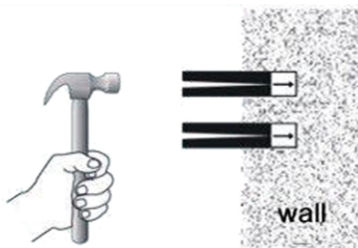


2. Put the expansion plugs into the wall by hammer.

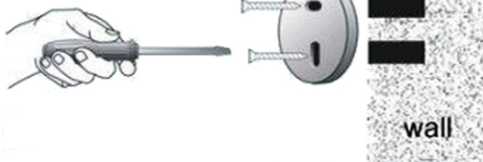


3. Put fixing block cover on the holes and fix firmly by expansion screws.

04

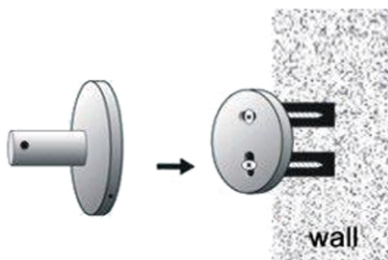

4. Put the base of bathroom accessory cover on the fixing blocks.

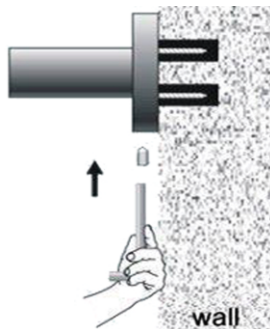

5. Screw grub screws into the base, make it against the fixing block tight and firm.