



## **Artus Shower Door Installation Instructions**

## **DOOR & RETURN**

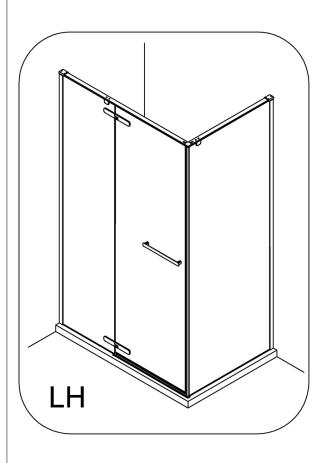


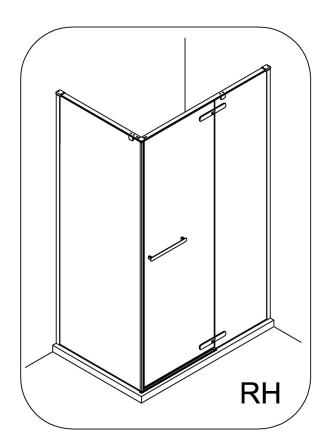


#### **IMPORTANT:**

- Before commencing installation please read these instructions thoroughly
- It is very important that the shower base or floor is level to achieve the optimum installation. Failing to have a level tray or floor will compromise the final result


### **Door Components**

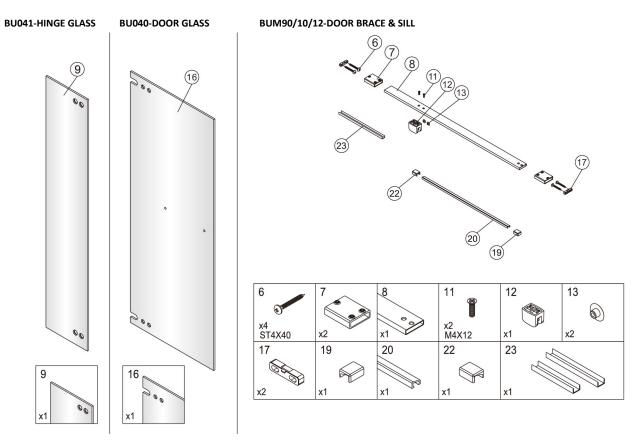


N:B - For 1000mm & 1200mm Door sets there are two of Item 23 supplied, the shorter of the profiles is used **only on Alcove Tile Door Sets** while the longer profile is used on all other Door sets.

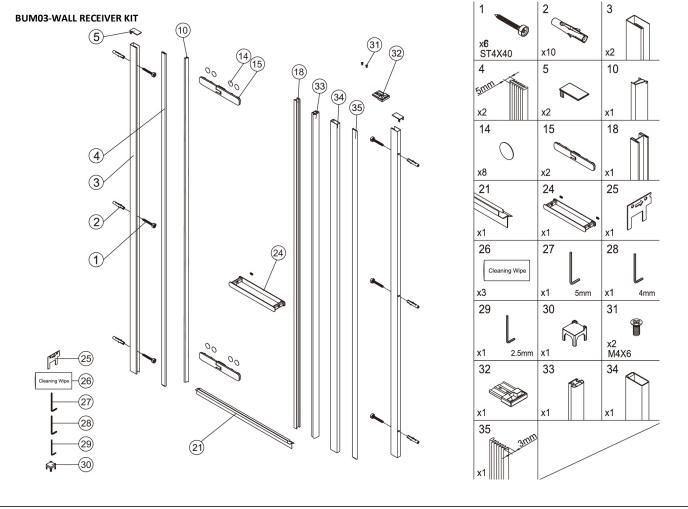

# **Return Panel Components BUM02-CNR POST** BUR90/10- RETURN GLASS BUR90/10- RETURN BRACE & SILL (40) (41) (52) 40 12 13 x4 M4X6 x2 M4X12 x1 x2 51 50 **Tools Required**

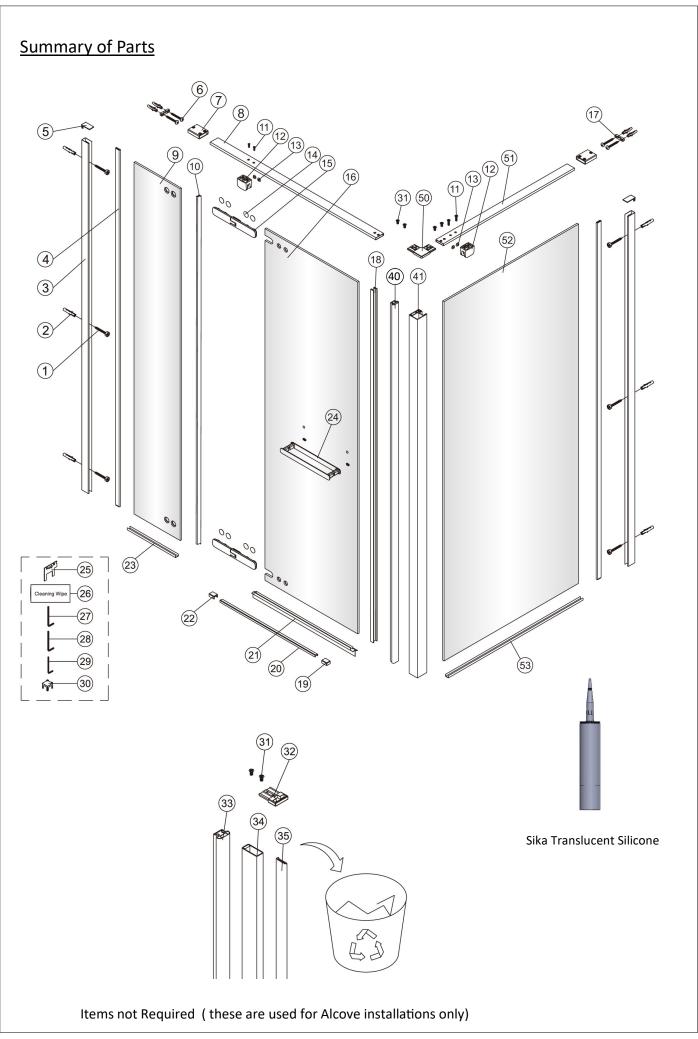

## **Specifications and Set Out**

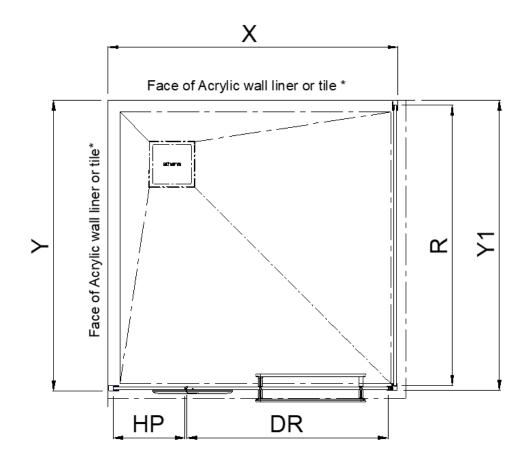

Note: \* Maximum permissible Tile Thickness when Installing on Athena SlateForma Shower Tray = 10mm


## Specifications


| Door Set       | Hinge Panel Glass Dimension | Door Glass Dimension | Return Glass Dimension |
|----------------|-----------------------------|----------------------|------------------------|
|                | НР                          | DR                   | R                      |
| 900 x 900mm    | 215mm                       | 600mm                | 836mm                  |
| 1000 x 1000mm  | 274mm                       | 640mm                | 936mm                  |
| 1200 x 900mm   | 474mm                       | 640mm                | 836mm                  |
| 1200 x 1000 mm | 474mm                       | 640mm                | 936mm                  |

## Set out - Measured from Wall Liner or Tile face

| Door Set       | Dimension X           | Dimension Y         | Dimension Y1             |
|----------------|-----------------------|---------------------|--------------------------|
| 900 x 900mm    | 865 + 3.0 / - 3.0 mm  | 865 + 3.0 / - 3.0mm | MAKE SAME AS DIMENSION Y |
| 1000 x 1000mm  | 965 + 3.0 / - 3.0 mm  | 965 + 3.0 / - 3.0mm | MAKE SAME AS DIMENSION Y |
| 1200 x 900mm   | 1165 + 3.0 / - 3.0 mm | 865 + 3.0 / - 3.0mm | MAKE SAME AS DIMENSION Y |
| 1200 x 1000 mm | 1165 + 3.0 / - 3.0 mm | 965 + 3.0 / - 3.0mm | MAKE SAME AS DIMENSION Y |

Fig 1

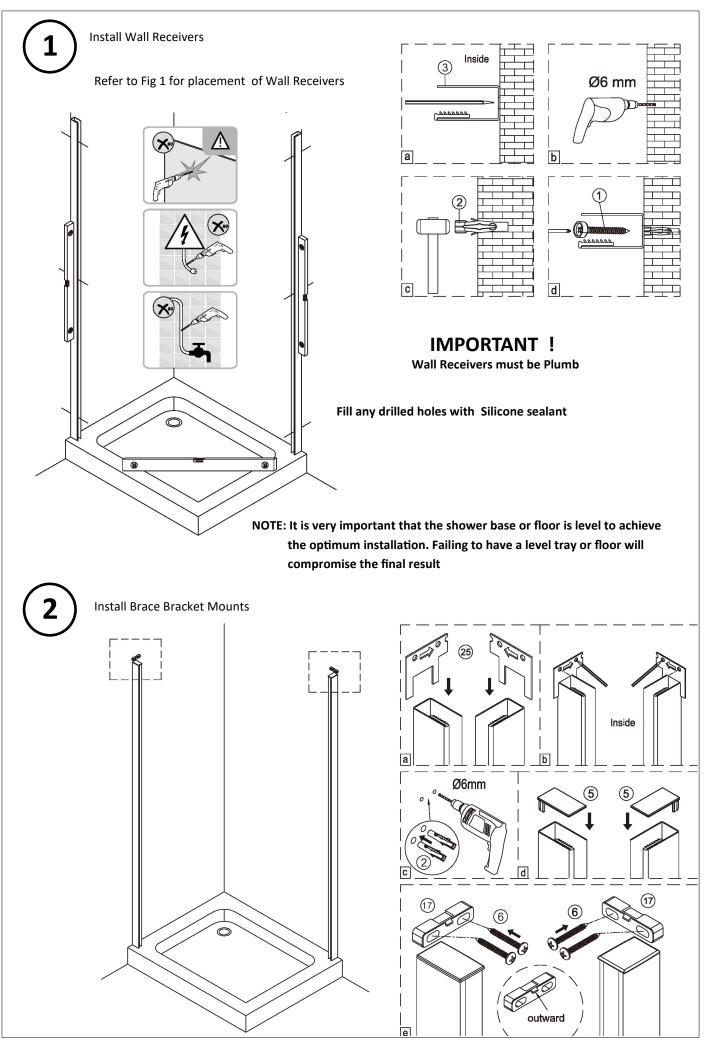


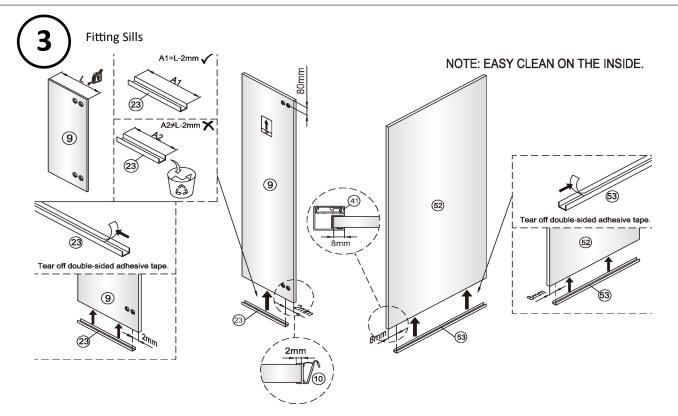



N:B - For 1000mm & 1200mm Door sets there are two of Item 23 supplied, the shorter of the profiles is used **only on Alcove Tile Door Sets** while the longer profile is used on all other Door sets.



Temporarily hold Hinge & Return Panels in place with glazing wedge

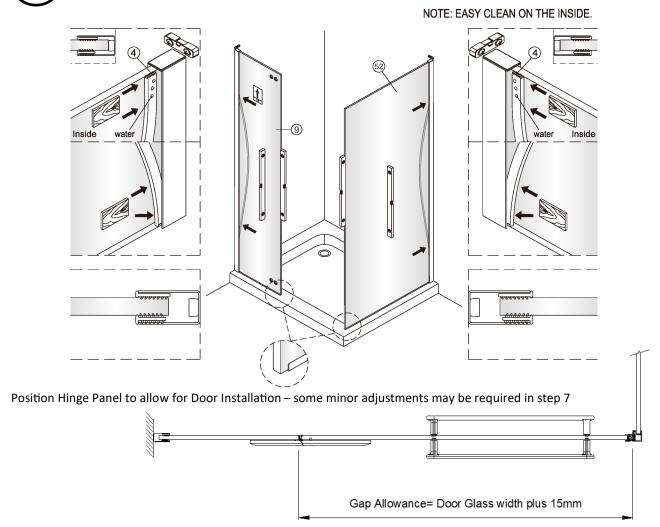

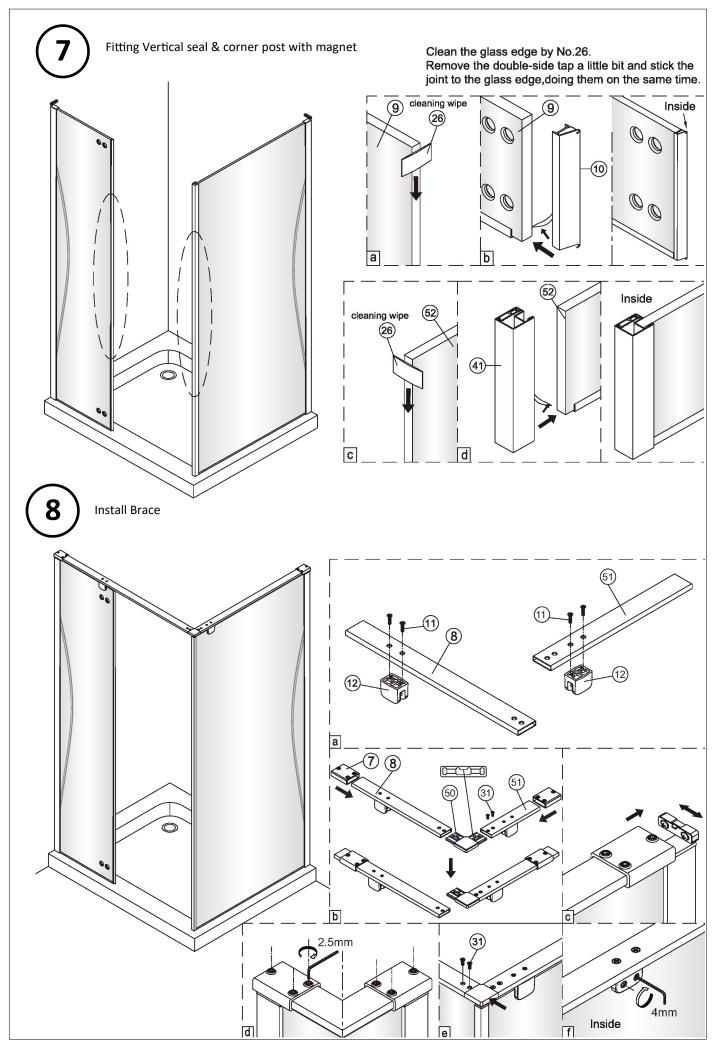


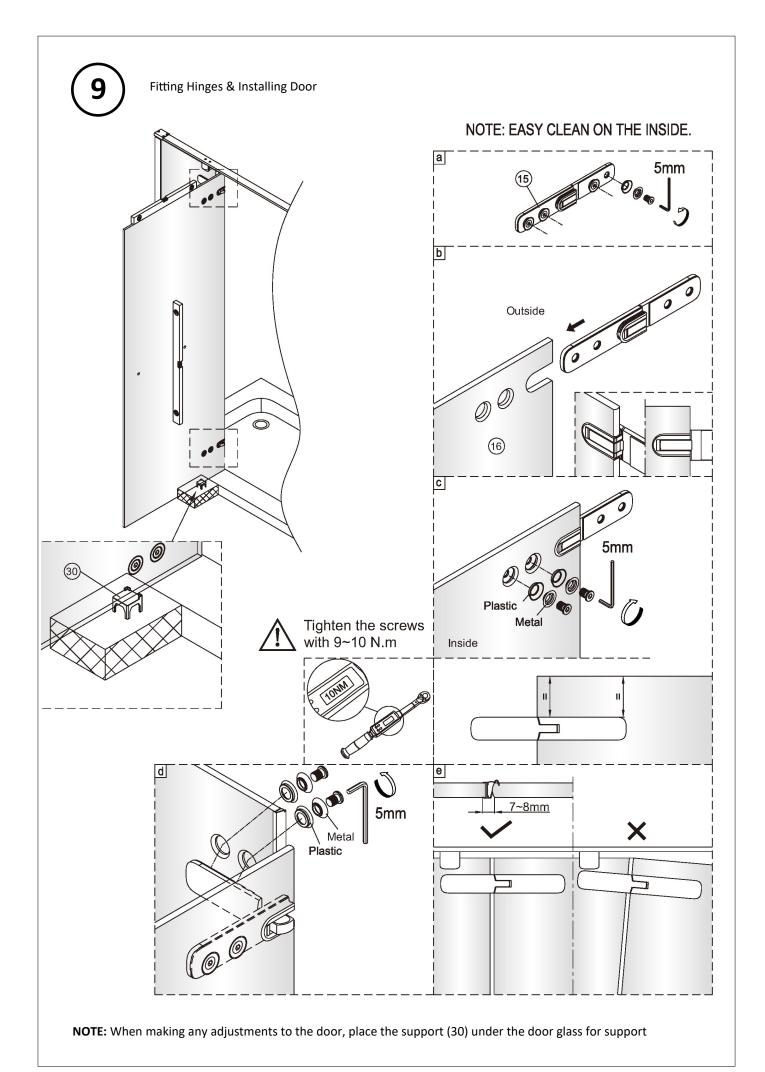



#### Attach Door Magnet

#### Two magnets are supplied with the kit Use MAGNET 40 for the Door & Return Installation

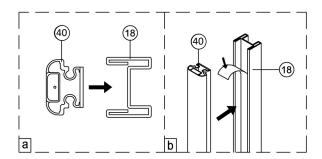

Clean the glass edge by No.26. Remove the double-side tap a little bit and stick the joint to the glass edge,doing them on the same time.

