

## REECH STEP LADDER


by C.F. Møller

Instruction


Please note!

The supplied screws and raw plugs are intended for brick wall only. If the product is to be mounted on other wall types, screws and raw plugs must be changed to match the correct wall type.


- ① Position the bracket in a minimum height of 30 cm from the floor.

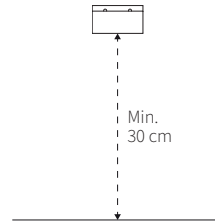

- ② Place the bracket on the wall, in the wished position, and make markings on the wall through the two holes.

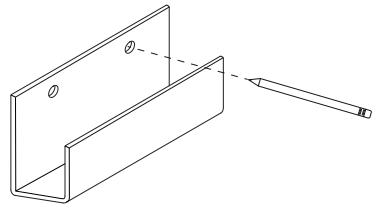

- ③ Remove bracket and drill a 6 mm hole in each of the two markings.

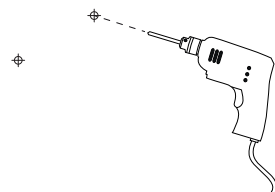


# GEJST

- ④ Insert rawlplugs in both holes.



- ⑤ Fasten bracket on the wall with the two screws.

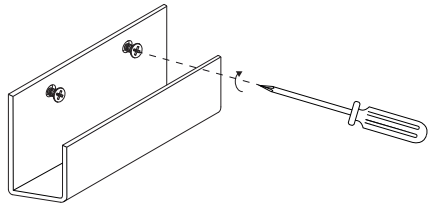

- ⑥ Place Reech on the bracket.

