



# Instructions

Lakeside Cottage -  
Chalet Au Bord De L'eau

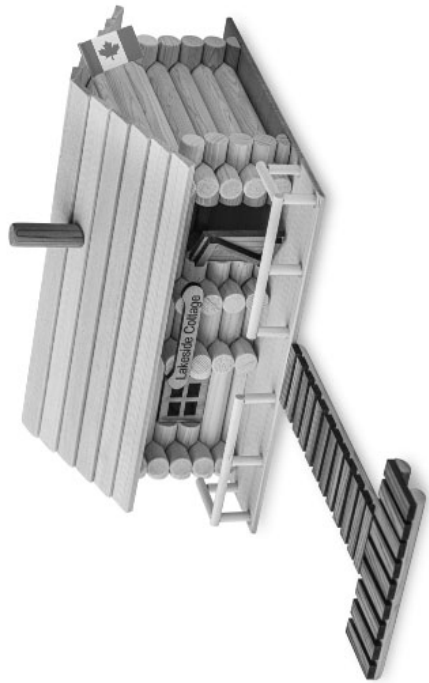

Instructional Videos and more at [logcabintoy.com](http://logcabintoy.com)

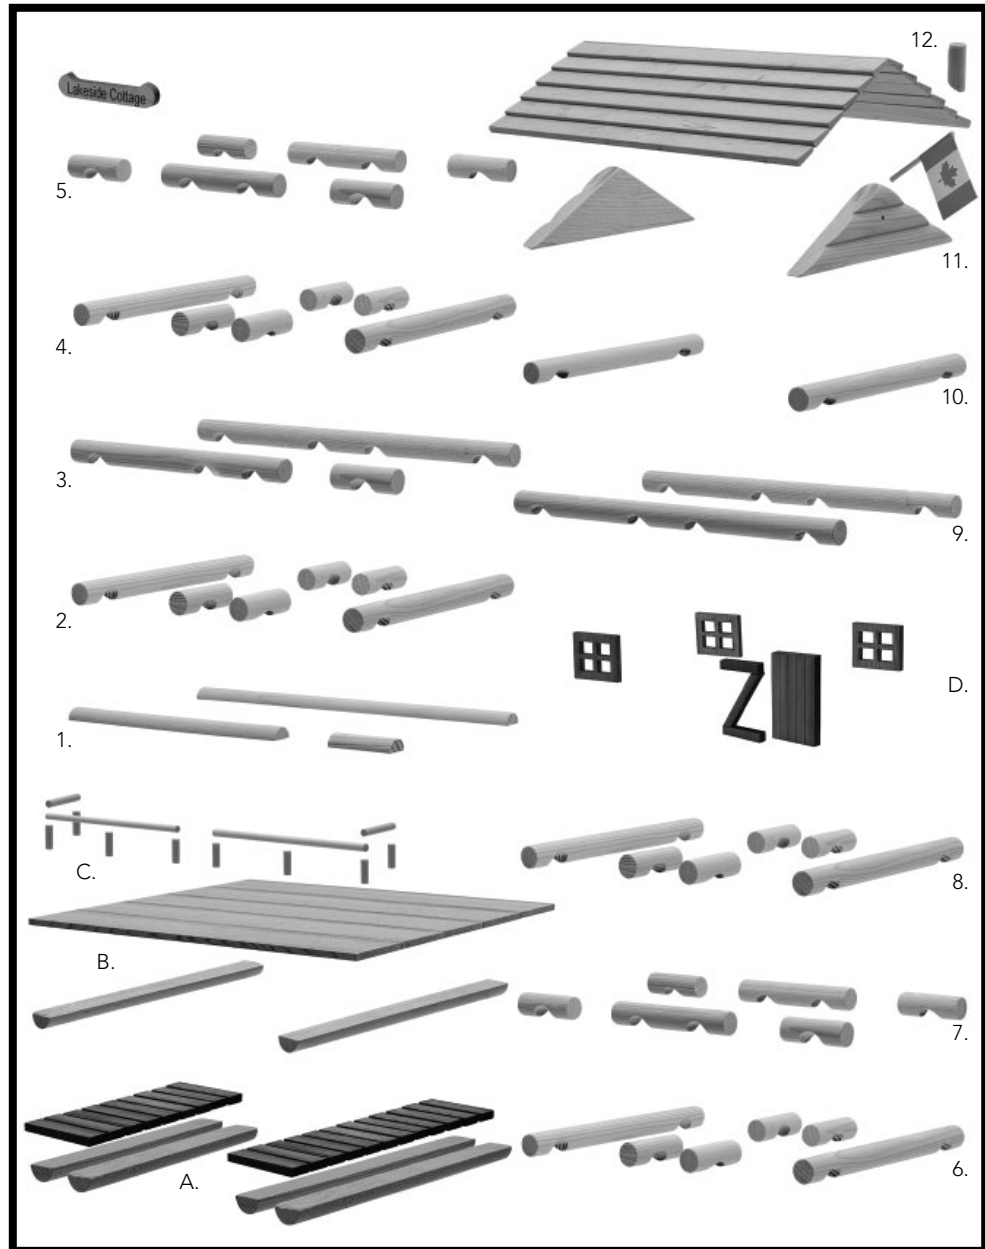

- (10) 2-notch logs (14.3cm) rondins à 2 encoches
- (3) 4-notch logs (21.1cm) rondins à 4 encoches
- (1) 3-notch logs (14.3cm) rondins à 3 encoches
- (4) 2-notch logs (7.5cm) rondins à 2 encoches
- (25) 1-notch logs (3.6cm) rondins à 1 encoche
- (1) flag & toothpick / drapeau et cure-dent
- (8) railing posts / poteaux de garde-corps
- (5) floor planks / planches de plancher
- (3) door braces / entretoises de porte
- (1) half-logs (21.1cm) demi-rondins
- (5) half-logs (14.3cm) demi-rondins
- (21) dock planks / planches de quai

- (2) half-logs (10.5cm) demi-rondins
- (1) half-logs (3.6cm) demi-rondins
- (12) shingles / bardeaux de toit
- (2) railings (3.3cm) garde-corps
- (2) railings (8.4cm) garde-corps
- (1) chimney / cheminée
- (3) windows / fenêtres
- (2) gables / pignons
- (1) sign / panneau
- (1) door / porte
- (1) glue / colle

Tips: Use a flat surface for assembly and have a damp rag on hand to wipe excess glue off the parts and surface. A carpenter square, sandpaper and tweezers can also be useful. Read through these instructions before gluing anything and consider a "dry-run" build before gluing. Just stack the logs on top of each other without using glue to get an idea of how it works. Sort the cabin logs and hardware by type so they are easy to find. Keep the better looking side of each part to the outside so it is more visible after the cabin is assembled.

1. Clip the pointy ends of the toothpick and glue and fold the flag around one end.  
 2. Glue the 3 door braces to the door. Cut a piece of paper the length of the door and 1.5cm wide. With the door lying good side up on the work surface, glue the hinge paper to the edge on the hinge side of the door. Let dry. Once dry, fold the paper hinge back against the thin edge of the door. The flap that this creates will be glued to the ends of the logs in the doorway to create a hinge effect.

3. Line up the two 10.5cm and two 14.3cm half-logs parallel to each other flat-side up. Arrange the dock planks evenly from end to end to create two pontoon docks, one with 9 planks and one with 12 planks. (Step A)  
 4. Using a thin bead of glue, attach the edges of the floor planks together to create a base. Glue the flat side of two 14.3cm half logs across the floor planks of the base. Ensure the half logs are touching each floor plank, are evenly spaced and positioned 1 cm away from the sides of the base. (Step B) Set aside to dry.

5. Arrange the roof shingles into two 6-shingle panels with the thin edges touching the thick edges. Run a fine bead of glue along the thin edge of one shingle, join this to its neighbour-ing thick edge. Repeat for all. Use the flat work surface and square edge to line them up. Let dry.  
 6. Place the 3 remaining half-logs flat-side down on the work surface. (Step 1) This is the foundation layer.

\* For subsequent steps, before placing each log dab a drop of glue into each notch.  
 7. Place layer two on top of layer one. (Step 2) Hint: Use another (21.1cm) 4-notch log to help position the 2nd row correctly. It is important to keep things square.  
 8. Repeat this process in the order shown in the diagram. Use the door and windows to ensure that the openings are the correct size and are square but don't glue them on until the walls have dried. Tweezers are helpful to hold the doors and windows.  
 9. After the walls have dried, glue the windows into the gaps made by the alternating log layers and glue the door hinge to the doorway.

10. Spread a small amount of glue along the grooved bottom edge of the gables, place them on top of the top logs, and ensure they are sitting straight up-and-down in line with the walls below. Make sure the log side of the gables faces outwards. Allow the glue to fully dry.

11. Run a thin bead of glue down the top side of the gables and attach the two roof panels. Line up the thin edge of the roof panels at the ridge and square this with the top of the walls on both sides. Let dry.  
 12. When all the glue is dry, flip the base over and glue the cabin to the rear of the base. Leave enough space at the front for the porch railings. Build the railings around the porch. (Step C)  
 13. Insert the flag into the hole in the gable, glue on the sign, and glue the chimney onto the roof.

1. Attachez les extrémités pointues du cure-dent et de la colle et pliez le drapreau autour qu'il soit plus visible une fois la cabine assemblée.  
 2. Collez les 3 entretoises de porte à la porte. Découpez un morceau de papier de la longueur de la porte et de 1,5 cm de large. Avec la porte bien placée sur la surface de travail, collez le papier de charnière sur le bord du côté de la charnière de la porte. Laissez sécher. Une fois sèche, repliez la charnière en papier contre le bord fin de la porte. Le rabat que cela créera sera collé aux extrémités des bûches dans l'embrasure de la porte pour créer un effet de charnière.

3. Alignez les deux demi-bûches de 10,5 cm et deux de 14,3 cm parallèlement l'une à l'autre, côté plat vers le haut. Disposez les planches de quai uniformément d'un bout à l'autre, côté plat vers le haut. Disposez les bords de deux demi-bûches de 14,3 cm sur les planches pour créer une base. Collez le côté plat de deux demi-bûches de 14,3 cm sur les planches et un avec 9 planches et un avec 12 planches. (Étape A)  
 4. À l'aide d'un mince cordon de colle, attachez les bords de planches de plancher ensemble pour créer deux quais de ponton, un avec 9 planches et un avec 12 planches. (Étape B) Mettez de côté pour sécher.

5. Disposez les bardeaux de toit en deux panneaux de 6 bardeaux, les bords fins touchant les bords épais. Passez un fin cordon de colle le long du bord mince d'un bardeau, joignez-le à son bord épais voisin. Répétez pour tous. Utilisez la surface de travail plate et le bord carré pour les aligner. Laissez sécher.  
 6. Placez les 3 demi-bûches restantes côté plat vers le bas sur la surface de travail. (Étape 1) Ceci est la couche de base.  
 \* Pour les étapes suivantes, avant de placer chaque tampon de bûche, une goutte de colle dans chaque encoche.

7. Placez la couche deux au-dessus de la couche un. (Étape 2) Conseil: utilisez une autre bûche à 4 crans (21,1 cm) pour aider à positionner correctement la 2e rangée. Il est important de garder les choses en ordre.  
 8. Répétez ce processus dans l'ordre indiqué dans le diagramme. Utilisez la porte et les fenêtres pour vous assurer que les ouvertures sont de la bonne taille et sont carrées, mais ne les collez pas tant que les murs n'ont pas séché. Les pinces sont utiles pour maintenir les portes et les fenêtres.

9. Une fois les murs secs, collez les fenêtres dans les espaces créés par les couches de bûches orientées vers l'extérieur. Laissez la colle sécher complètement.  
 11. Passez un mince cordon de colle sur le dessus des pignons et fixez les deux panneaux de toit. Alignez le bord mince des panneaux de toit au niveau de la crête et placez-le avec les au-dessus des deux bûches supérieures et assurez-vous qu'elles sont droites de haut en bas, alignées avec les murs en dessous. Assurez-vous que le côté rondin des pignons est le haut des murs des deux côtés. Laissez sécher.  
 12. Lorsque toute la colle est sèche, retournez la base et collez la cabine à l'arrière de la base. Laissez suffisamment d'espace à l'avant pour les balustrades du porche. Construisez les balustrades autour du porche. (Étape C)  
 13. Insérez le drapreau dans le trou du pignon, collez l'enseigne et collez la cheminée sur le toit.