



Upholstered panels

Installation instructions

GENERAL INFORMATION ABOUT PRODUCT AND INSTALLATION

- Upholstered panels should be installed with glue or hook and loop fastener.
- Do not install the panels on a wall covered with wallpaper, architectural concrete or structural plaster; the wall should be smooth, non-flaking and provide adequate adhesion.
- The product is intended for indoor use only; it should not be installed in humid rooms such as kitchens or bathrooms
- After unpacking, check each panel for quality defects (fabric damage, significant differences in colour).
- Pilling is a natural process and it is impossible to fully eliminate it.
- Due to technological reasons, the shade of the fabric may differ from the catalogue sample.
- It is inevitable that dye will migrate from fabrics with intense and dark colours onto light ones.
- If the fabric is caught, yarn may be pulled out.


CARE AND STAIN REMOVAL

- Once in a while, clean the surface with a gentle upholstery cleaner and with a vacuum cleaner, using the soft bristle attachment.
- Remove surface stains using a damp sponge with a diluted gentle detergent.
- Intense scrubbing and strong detergents, such as bleach or washing powder, may damage the surface of the panel or lead to discoloration.
- Do not wet clean. Do not iron. Do not bleach


Installation with glue




- 1** Before installing, clean the wall from dirt, e.g. with a cloth soaked with an alcohol-based cleaning agent.

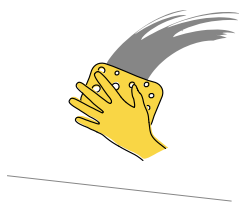


- 2** Arrange the panels on the floor according to the selected pattern.

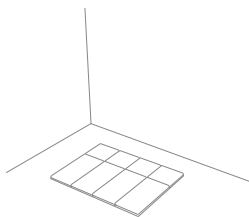


- 3** Draw a horizontal and vertical line using a level. Make sure that the lines do not extend beyond the installation area.

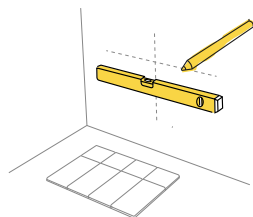


- 4** Apply the Vilo glue on chosen spots on the back of the panel - in the middle and in the corners.

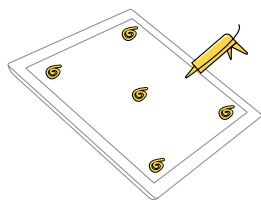


- 5** Place the first panel on the wall at the starting point for the pattern.

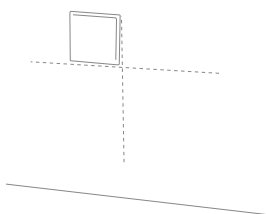

- 6** Continue gluing, arranging panels in accordance with the selected pattern.

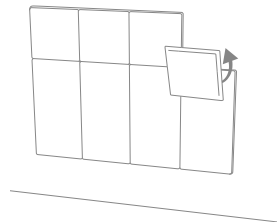

- 7** Press each panel to the wall. Remember that the time to modify the arrangement of the panels is limited (due to the curing speed).



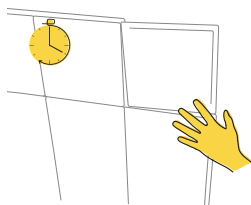


Use dedicated Vilo glue and enjoy quick change.




Installation with hook and loop fastener



- 1** Before installing, clean the wall from dirt, e.g. with a cloth soaked with an alcohol-based cleaning agent.
- 2** Arrange the panels on the floor according to the selected pattern.
- 3** Draw a horizontal and vertical line using a level. Make sure that the lines do not extend beyond the installation area.

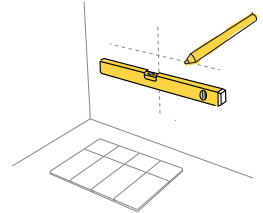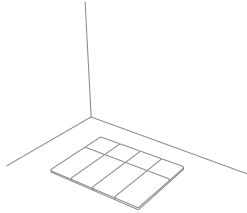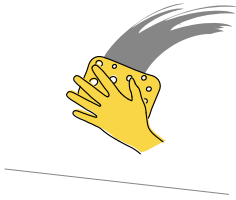


- 4** Cut the hook & loop tape into strips of 5-6 cm in length. Attach both parts of the tape, remove the protective film from one side of the tape and stick to the back of the panel.
- 5** Remove the protective film from the outside of the tape.
- 6** Place the first panel on the wall at the starting point for the pattern.

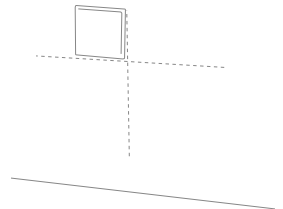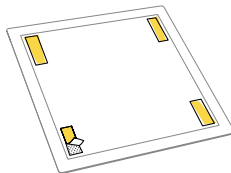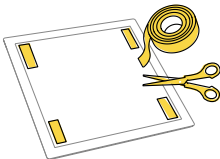

Follow the instructions on the tape package.










- 7** Glue the panels to the wall at a designated place. Press each panel to the wall.

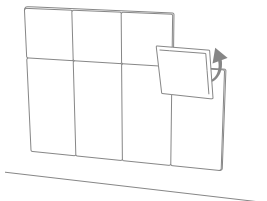

Do you have any doubts?

Visit www.vilohome.com and follow the installation video for our Upholstered panels.

Arrangement suggestions

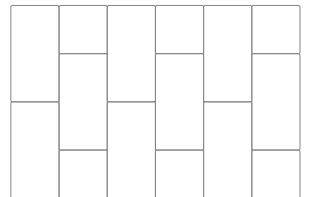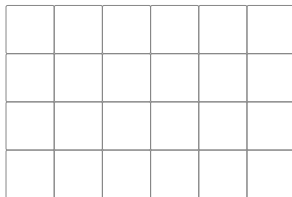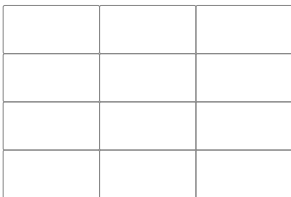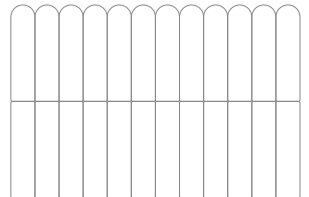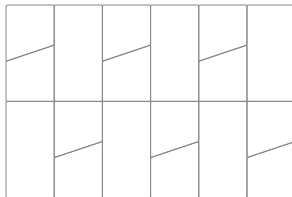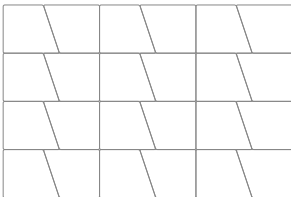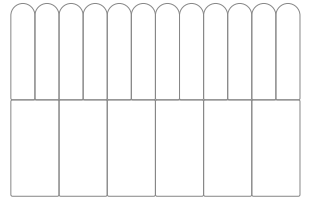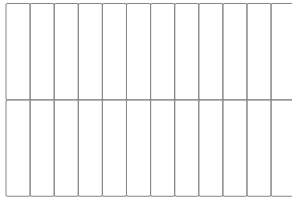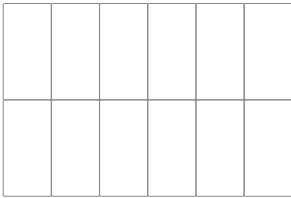

Profile VOX Sp. z.o.o. sp. k.

ul. Gdyńska 143

62-004 Czerwonak

tel. +48 (61) 812 10 01

Polska / Poland

www.vilohome.com