












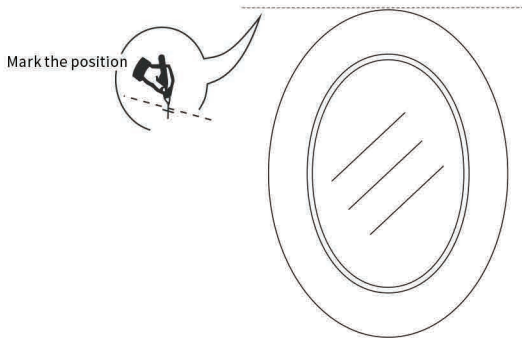
BELLATERRA HOME

Fine Hand-Crafted Wood Bathroom Vanities

MODEL: 808301


TOOL LIST (NOT INCLUDED)			PARTS LIST (INCLUDED)		
					
Tape Measure	Pencil	Electric Drill	Screw (3pcs)	Anchor (3pcs)	12" Wall Mounting Clip
					
Drill Bit	Screwdriver	Spirit Level			

Using a tap measure, check the location where the mirror is to be installed. Place the mirror on the wall in the area chosen. (Two people are needed for this task). Position the mirror at the desired height in the center of the location. With Pencil mark a line on the very top edge of the arch.




STEP 1

Measure how far the 12" Hanging Clip is away from the top of the mirror.

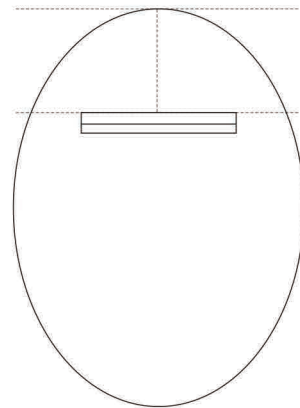


STEP 2

From the line made on the wall, using a tap rule, measure down the distance from STEP 2 and mark the spot on the wall with a line.

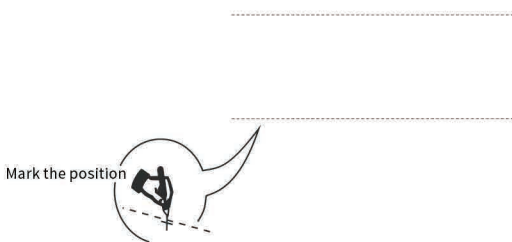

STEP 3

From this spot, position the 12" Hanging Clip. Mark the locations for the screw holes at the bottom of the clip, using the level to make sure the clip is level and straight. Set the clip and level aside. Use the Drill and 3/16" Drill Bit-Pre Drill the holes for the wall anchors.

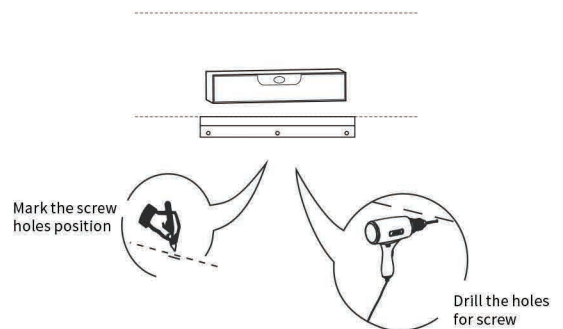

STEP 4

Licensed professional installation is recommended. These instruction are for mounting into studs or other in-wall reinforcement, drywall alone is not sufficient to support wall-hung vanities. Other installation techniques may require a licensed professional.

NOTE: SINK STYLE, SHAPE, FAUCET HOLES, CUTOUT ON TOP, VANITY MAY VARY FROM THE PICTURE ABOVE. INSTRUCTIONAL PURPOSE ONLY.




BELLATERRA HOME

Fine Hand-Crafted Wood Bathroom Vanities


MODEL: 808301

Insert the anchor into the screw hole for reinforcement.

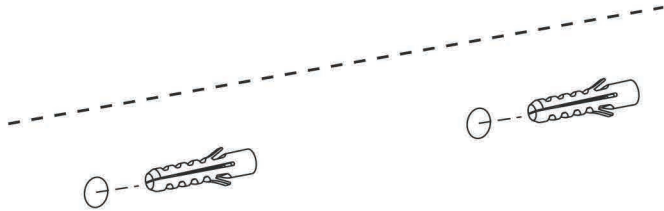


STEP 5

Reposition the 12" Clip and secure the wall with the screws provided. Check the level again to determine that the clip is straight and level.

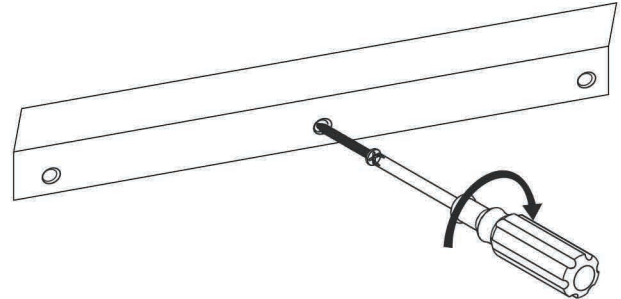


STEP 6

Carefully place the mirror with the mounting plate onto the installed wall clip.

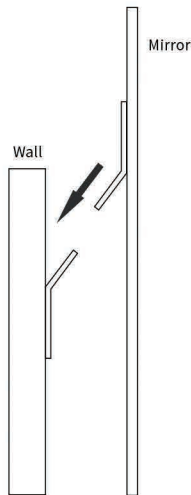

STEP 7

Mirror can be adjusted side to side by gently sliding the mirror along the clip until it's centered.

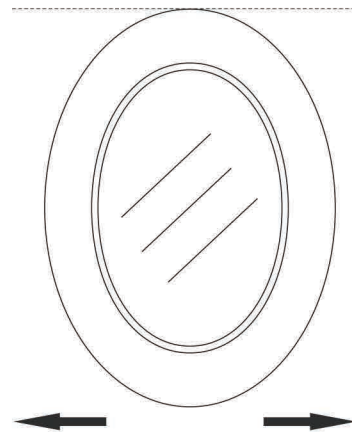

STEP 8

Licensed professional installation is recommended. These instructions are for mounting into studs or other in-wall reinforcement, drywall alone is not sufficient to support wall-hung vanities. Other installation techniques may require a licensed professional.

**NOTE: SINK STYLE, SHAPE, FAUCET HOLES, CUTOUT ON TOP, VANITY MAY VARY FROM THE PICTURE ABOVE.
INSTRUCTIONAL PURPOSE ONLY.**

Professional installation is recommended.
www.bellaterra-home.com

Bellaterra Home LLC, All Rights Reserved 2018