
## INSTALLATION GUIDE

ITEM NO.: WH5148-BR LEGION FURNITURE

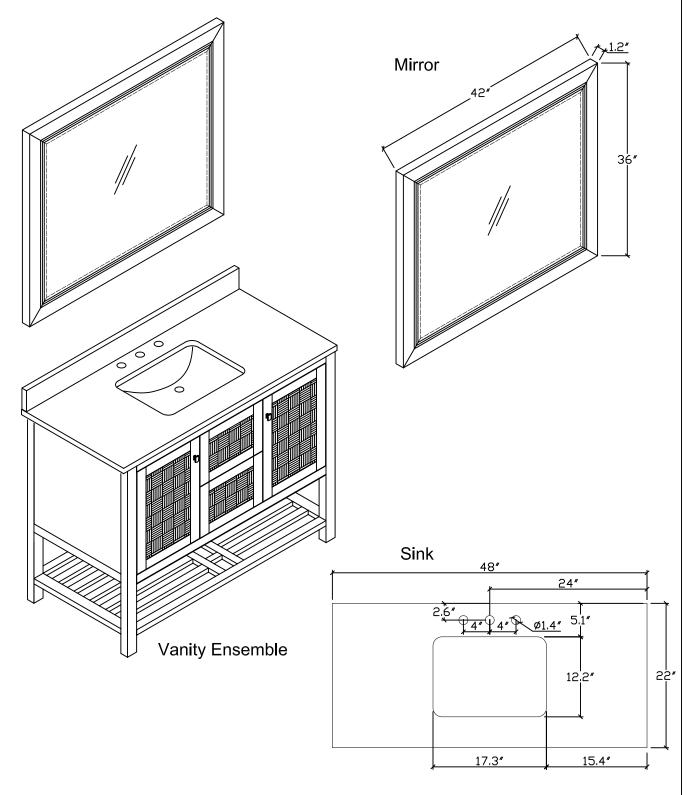


Note: All dimensions and specifications are approximate and subject to change without notice.


# INSTALLATION GUIDE

ITEM NO.: WH5148-BR LEGION FURNITURE



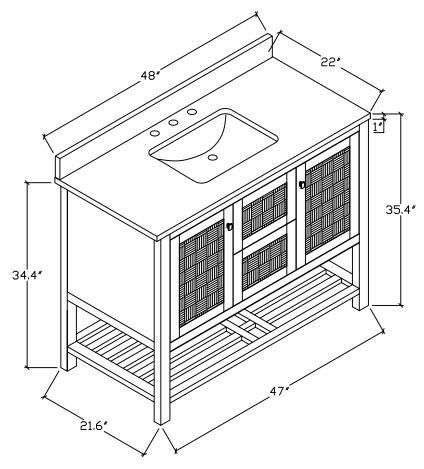

Vanity Back

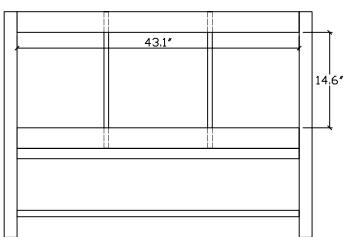

#### MIRROR INSTALLATION INSTRUCTION

TOOLS FOR ASSEMBLY




Mark the measured distance on the wall using a level

Measure the distance between the brakets on the back of the mirror




WALL

Once position is marked, drill 2 holes and insert anchors if stud is not available

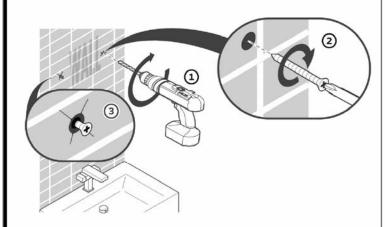


IMPORTANT:

CONSULT AN EXPERT FOR THE PROPER SCREWS/BOLTS TO USE WHEN ATTACHING TO VARIOUS WALL CONSTRUCTIONS. SCREWS PROVIDED **DO NOT ATTACH** TO ALL WALL CONSTRUCTION TYPES.

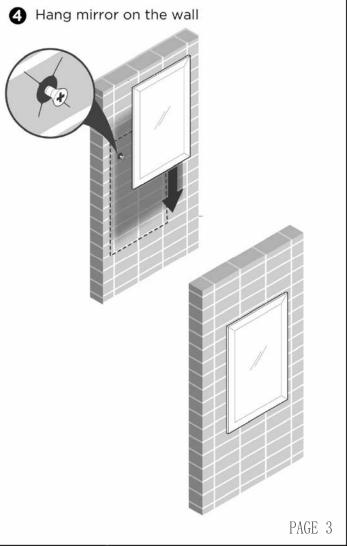

## INSTALLATION INSTRUCTONS

1. Apply a bead of silicone on the top of the cabinet and place the sink on top

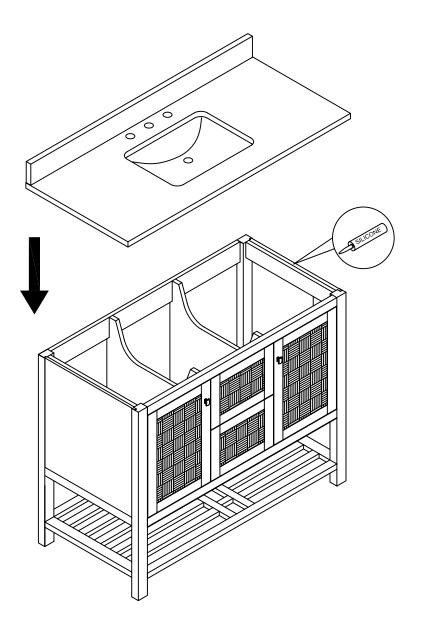


### IMPORTANT:

Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

### **P-TRAP & POP-UP**

### **INSTALLATION INSTRUCTIONS**


Your item may appear slightly different from the illustration.

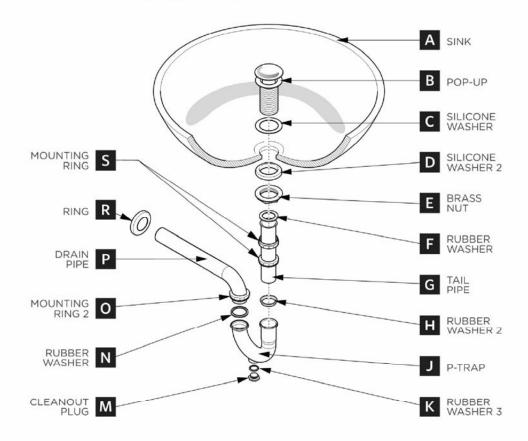


### **POP-UP INSTALLATION**

OR

### FOR SINKS WITHOUT OVERFLOW

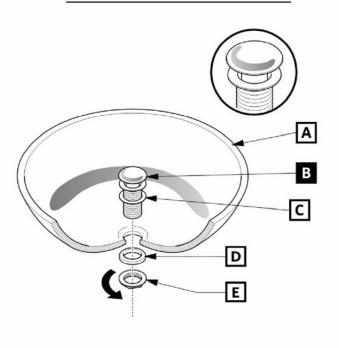

#### FOR SINKS WITH OVERFLOW

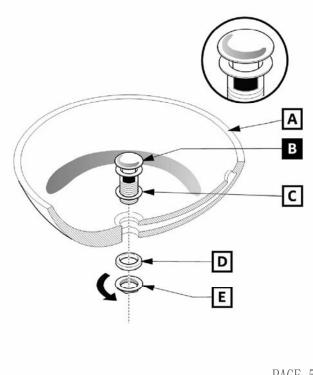

PAGE 5

