

Part Number HM063-3

GARADOR


Additional Lock Kit for Canopy Doors

Parts List: -

	Ref. Number
Adjustable Locking Bars	2492
Latch Assembly L/H	2790
Latch Assembly R/H	2791
Latch Keep L/H	4983
Latch Keep R/H	4984
Panel Pivot Bolts	227
6.3/19 Drive Screws (Steel Frame)	220
M6x50mm Coachscrews (Timber Frame)	1743

Quantity Tools Required: -


2 Off	10mm Spanner / Socket
1 Off	6mm Allen Key
1 Off	3mm Allen Key
1 Off	4.5mm Drill (timber frame)
1 Off	3.5mm Drill (steel frame)
2 Off	
6 Off	
6 Off	

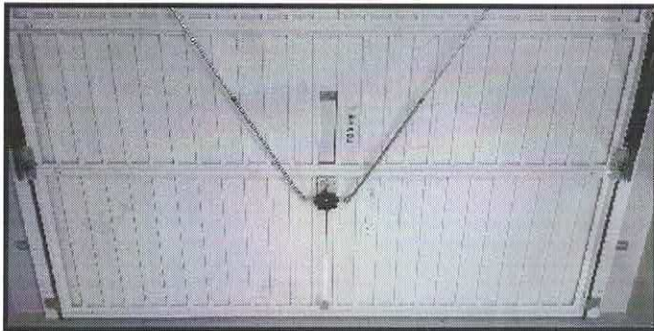

Rear view of standard canopy door before any additional locking is fitted.




Locate latch spigot into relevant hole in boundary chassis from inside and then insert and tighten panel pivot bolts from outside.

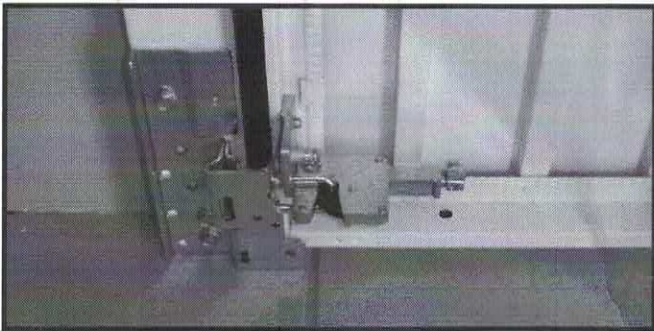


Remove current security bracket. Then fix latch keep to the side frame using 3 number 10mm drive screws (2 removed from existing bracket)



Slide the locking bar onto the lug on the back face of the latch.
(Once located it should slide freely)

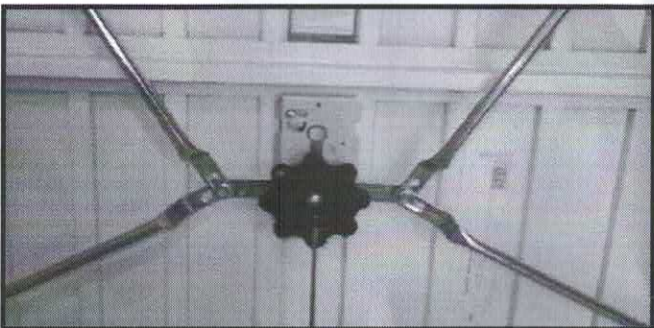

Secure the other end of the locking bar to the relevant side of the lock body arm by unscrewing the current 10mm drive screw and refixing with both bars attached.

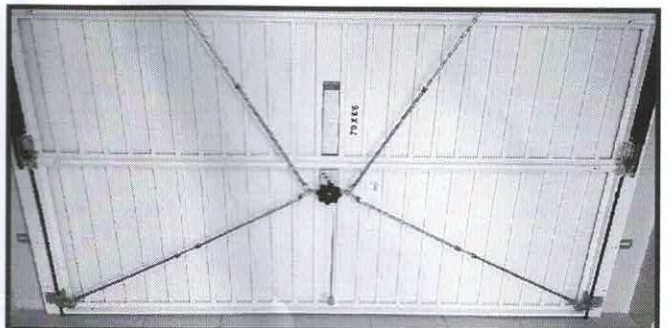

Rear of door once additional locking fixed.
IMPORTANT - Adjust rods and test from inside to ensure new locking works correctly!