

Part Number HM063-4

GARADOR

Additional Lock Kit for Retractable Doors


Parts List: -

| | | |
|--|-----------|-------|
| Telescopic Locking Bars | | 2 Off |
| Canopy Latch Assembly | (1161005) | 2 Off |
| Latch Keeper Assembly | (186000) | 2 Off |
| 10mm Hex Head Drive Screws | (1041019) | 8 Off |
| M6x50 Hex Head Fixings* (OH-SCW-16385) | | 4 Off |


Tools Required: -

| |
|--------------------------|
| 10mm Spanner / Socket |
| 3mm Allen Key |
| 3.5mm Drill bit & drill* |


*Only Required For Timber Frame

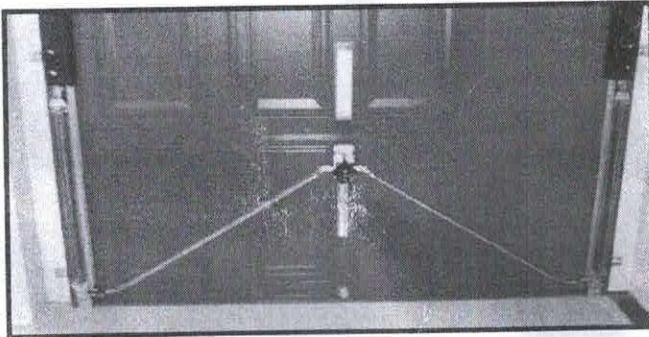


Rear view of standard retractable door before any additional locking is fitted.

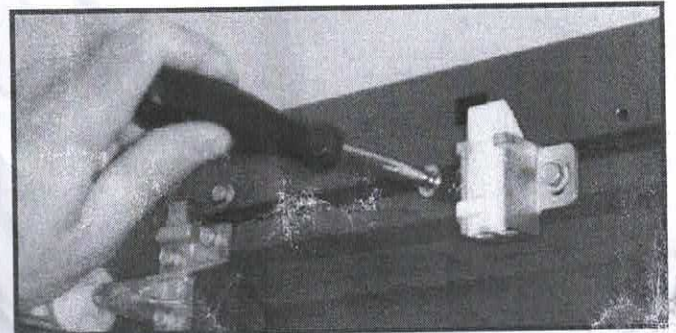


Fix both latches onto panel using 10mm hex head drive screws in pre-punched holes. (Left hand side shown above)

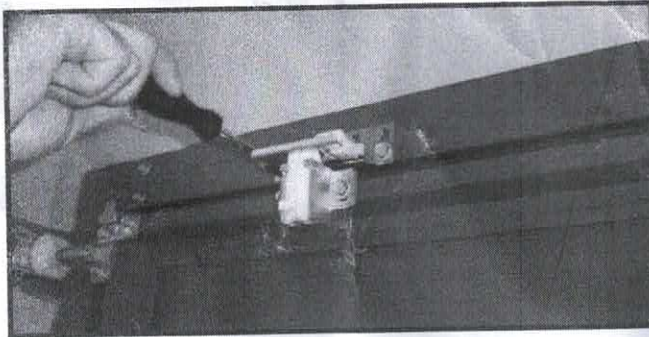


Fix both latch keepers (steel frame version shown) in pre-punched hole with drive screws. Fitting to timber frame offer up latch keeper in centre of latch and fix.

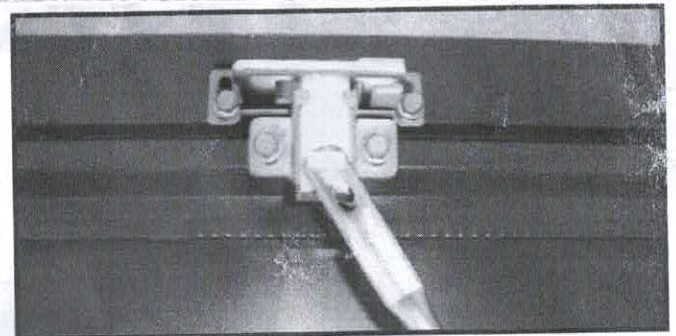

Slide the locking bar onto the lug on the front face of the nylon latch and adjust to length. (Once located it should slide freely)

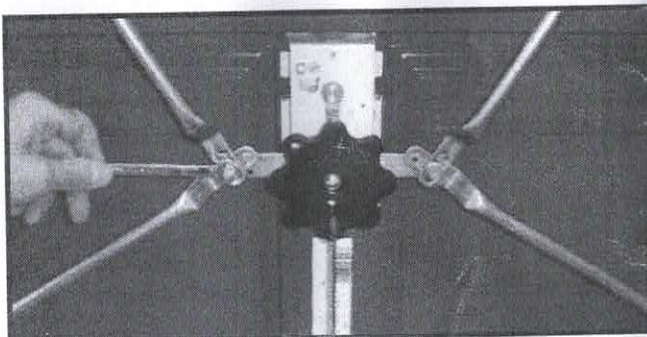

Secure the other end of the locking bar to the relevant side of the lock body arm by unscrewing the current 10mm drive screw and refixing with both bars attached.

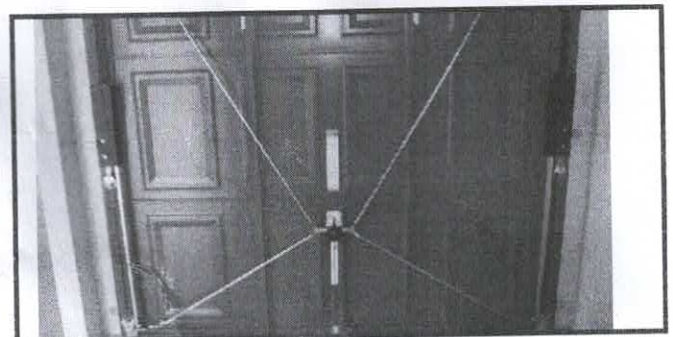

Rear of door once additional locking fixed.
IMPORTANT - Adjust rods and test from inside to ensure new locking works correctly!

