


# FITTING INSTRUCTIONS FOR LOCKS WITH LOCKING BARS

## STEP 1 LOCK HANDLE

The door lock handle should be fitted approximately 5ft from the top of the door depending upon the style of the door. The handle is normally fitted in the vertical position, it may, depending upon door style, be fitted in the horizontal position. Drill the 3 holes as shown.

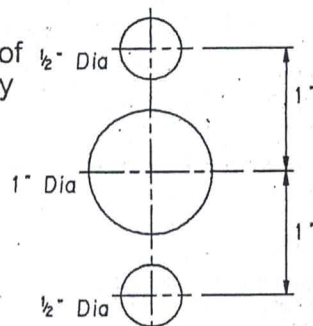

**CHECK MEASUREMENTS CAREFULLY BEFORE DRILLING.**

## STEP 2

Lock the door handle with the handle in line with the backplate. Insert handle into door from outside.

Locate inner locking mechanism over lock handle spindle as shown with the internal release button to the left.


Insert fixing bolts through back plate and into external handle.

## STEP 3

Fit locking bar guides approximately  $\frac{3}{8}$ " 10mm in from edge of weatherstrip and in line with centre of lock handle.

Insert locking bars through guides with chamfered edge against weatherstrip. Push rivet through hole in - internal handle, - locking bar, - washer - and secure with split pin.

NOTE: on some doors it may be necessary to cut locking bars to length required.

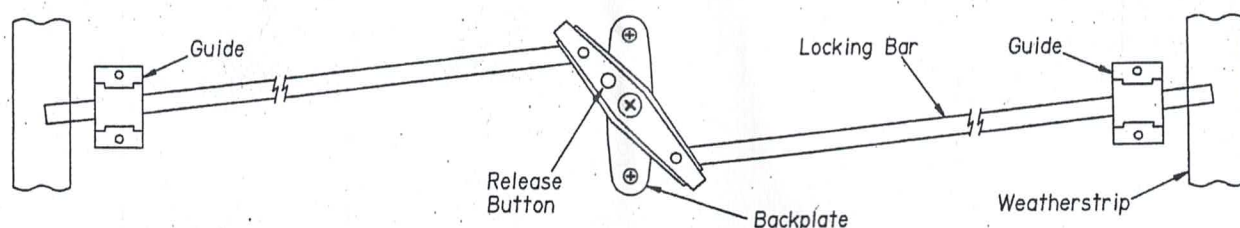

Oil all Joints and Guides

**OIL ALL JOINTS AND GUIDES**