

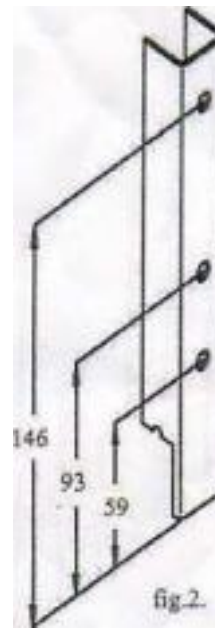


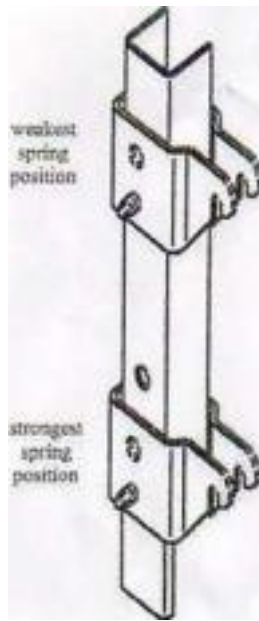

C-Type Anchor Bracket Fitting Instructions

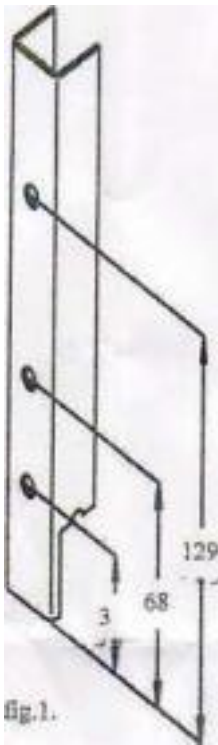

To fit a new Spring anchor to old C-Type Track

Left Hand Track Detail (viewed from inside garage).

Drill 3 holes 6mm Dia.(as per dimensions shown in fig.1.) centrally along the track.

Slide the new bracket onto the track and secure in position with a No. 14 x 40mm Hex Head self-tapping screw.(screwed from the door side through the bottom clearance hole into the tapping hole of the bracket). The bracket damps to the track

Right Hand Track Detail Right Hand Track Detail (viewed from inside garage).

Drill 3 holes 6mm Dia.(as per dimensions shown in fig.2.) centrally along the track.

Slide the new bracket onto the track and secure in position with a No. 14 x 40mm Hex Head self-tapping screw (screwed from the door side, through the top clearance hole into the tapping hole of the bracket). The bracket clamps to the track

WARNING

Use gloves to protect your hands whilst un-tensioning or tensioning springs.