




GARAGE DOOR SPARES

TM

## HENDERSON PREMIER CABLES FITTING INSTRUCTIONS

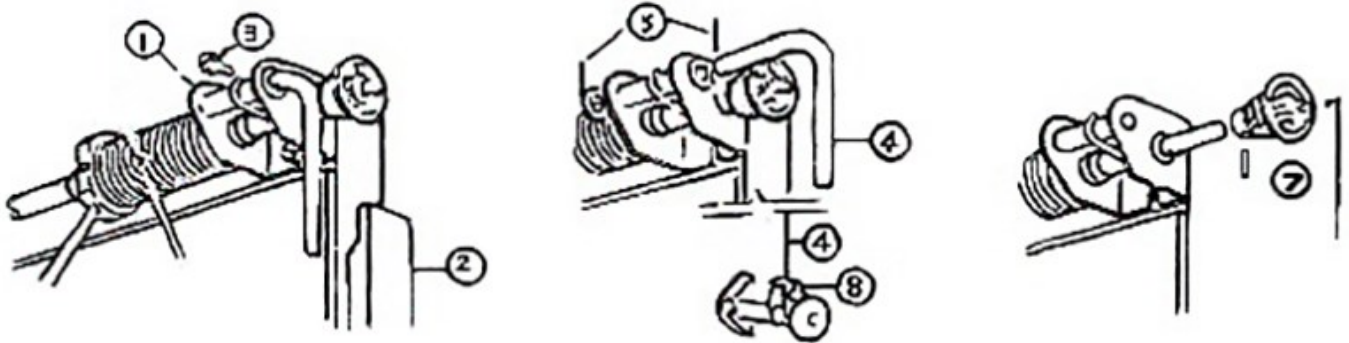

### SAFETY NOTES:

The spring is under tension. Please follow instructions carefully to avoid injury.

Wear protective gloves and eye protection. Two persons may be required for this operation.

### **Important:**

BOTH cables must be replaced as the spare cables may be a different length to the originals. If only the broken cable is replaced the door may not operate correctly.

### STEP 1

Using toggle bar or screwdriver in plug A, rotate shaft to ease spring pressure

### STEP 2

Insert crook pin into right hand head bracket (1) and secure door within openings

### STEP 3

Remove side jamb channels (2) and head bracket bolts (3)

### STEP 4

Remove door arms (4) from head bracket and door by withdrawing split pins (5)

### STEP 5

Detach free crimped end of cable (6.) from roller spindle clip (8)

#### STEP 6

Remove and discard cables and cones by driving hollow pin (7) from cone and shaft, using a hammer

#### STEP 7

Replace cones ensuring that white cone is on the left hand side and black cone on the right hand side

#### STEP 8

Ensure that cones are correctly fitted by checking that cable fixing points on cones are aligned with each other

#### STEP 9

Fix cones using new hollow pins and hammer

#### STEP 10

Refit the spring assembly and head brackets then replace door arm jamb channels by reassembling in reverse order

#### STEP 11

Refit new cable by clipping into cone and roller spindle clips (8)

#### STEP 12

Ease spring pressure using toggle bar and remove crook pin

#### STEP 13

Allow spring to take up slack, ensuring that cables are in the outer groove, run down behind the cone and that roller spindle clips (8) are in position.