


# **INSTALLATION INSTRUCTION**

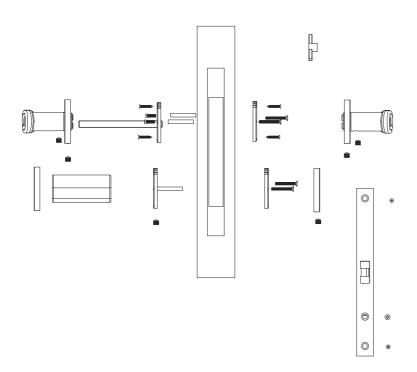



SGS










### 94/99 SERIES ACCESSORIES

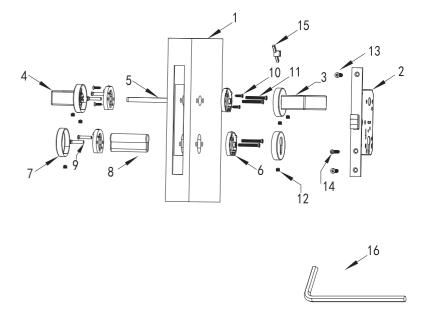


NO.	Description	Qty
1	Door	1 PC
2	Mortise Lock	1 PC
3	Right Handle on Rose	1 PC
4	Left Handle on Rose	1 PC
5	Spindle	1 PC
6	Mounting Kit	4 PCS
7	Escutcheon	2 PCS
8	Cylinder	1 PC

NO.	Description	Qty
9	Studs	4 PCS
10	Wood Screws (M3*12)	4 PCS
11	Connecting Screws	4 PCS
12	Allen Screws ( M6*8 )	6 PCS
13	Wood Screws ( M4*20 )	2 PCS
14	Cylinder Screw ( M5*65 )	1 PC
15	Locating Piece	1 PC
16	Allen Wrench	1 PCS

### Install Process


## \*Note: If you have selected 'key-alike' when purchasing, your key-alike cylinders will be in separate white boxes in your shipment. Use these cylinders when installing, rather than the ones in the Handle Box.

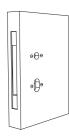

 Follow the Installation Specification and drill the holes for the mortise, cylinder and door handles.




2.Install the mortise with the wood screws.

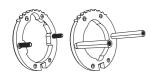


3. Install the connecting screws and studs through the mounting kit.



4.Install the mounting kit into the left handle, insert the spindle and stabilize the Allen screw with Allen wrench.



5.Install the left door handle onto the mortise lock and adjust the position.

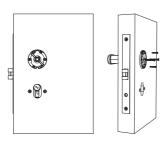


6.Install the right side's mounting kit and locating piece, adjust the position and stabilize with connecting screws and wood screws.


### Install Process







8. Take out the left handle and stabilize the left mounting kit with wood screws.

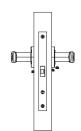

 Install the left handle and right handle, stabilize the escutcheons and spindle with Allen screws.



10.Install the connecting screws and studs through the mounting kit.




11.Insert the cylinder.




12.Install the mounting kits into the cylinder.



13.Install the connecting screws.

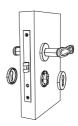

14. Install the escutcheons onto the door.

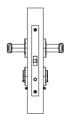

15.Install the Allen screws in escutcheons with Allen wrench.



16. Install the cylinder screw.