

Installationsanleitung für Spoiler

Anleitung

Bitte beachten sie die Hinweise, um eine lange Produktlebensdauer zu ermöglichen.

Dauer (für einen durchschnittlichen Verbraucher)

- 15-25 Minuten
- **Wir empfehlen die Anbringung von einer Fachwerkstatt durchführen zu lassen!**

Benötigte Werkzeuge / Hilfsmittel:

- Reinigungsvorgang: Bitte reinigen Sie den Kofferraumdeckel zuvor in der Waschanlage grob
- Im zweiten Schritt muss für eine gute Haftung des Spoilers die Heckklappe mit Reiniger an den Andruckstellen gereinigt werden.
- Klebestreifenband
- Die Anbringung sollte in einer temperierten Garage erfolgen und nach dem Anbringen ca. 12 Stunden in einer warmen Umgebung verbleiben.
- Wie auch bei dem originalen Tesla Spoiler sind Waschstraßen mit diesem Spoiler zu meiden.
- **Außerdem muss der Spoiler je nach Land auch eingetragen werden. Für Deutschland ist eine Eintragung nicht möglich!**
- **Nutzung von spezial Fahrzeugkleber wird empfohlen.**

Installationsanleitung für Spoiler

Hinweise:

Überprüfen Sie den Verpackungsinhalt:

Inhalt ein Spoiler sowie Reinigungstücher

- **Schritt 1:** Reinigen Sie die Flächen wie in der Rubrik Hilfsmittel beschrieben
- **Schritt 2:** Nach der Reinigung des Kofferraumdeckels wird des Spoilers mit Hilfe des Klebestreifenbands ausgerichtet. (hierzu am besten das Video unseres Youtube bekannten) [Welches Sie hier aufrufen können ansehen.](#)
- Schritt 3 Falls Sie den Vorgang ohne Video durchführen möchten klemmen Sie zwei Papiere an beide Seiten der Kofferraumkante und orientieren den Spoiler an beiden Seiten.



- **Schritt 4**
Die roten Klebestreifen auf der inneren Seite langsam abziehen (siehe Bild) und den Spoiler daraufhin mehrmals an allen Stellen fest andrücken



- **Schritt 5** Mit dem Klebeband den Spoiler fixieren und weiter andrücken

Installationsanleitung für Spoiler

Instructions

Please follow the instructions to ensure a long product life.

Duration (for an average consumer)

- 15-25 minutes
- **We recommend that the installation be carried out by a specialist workshop!**

Required tools / resources:

- Cleaning procedure: Please clean the boot lid roughly in the car wash beforehand.
- In the second step, the tailgate must be cleaned with cleaner at the pressure points to ensure good adhesion of the spoiler.
- Adhesive tape
- The installation should be carried out in a temperature-controlled garage and should remain in a warm environment for approx. 12 hours after installation.
- As with the original Tesla spoiler, car washes should be avoided with this spoiler.
- **In addition, the spoiler must also be registered depending on the country. Registration is not possible for Germany!**
- **Use of special vehicle adhesive is recommended.**


Installationsanleitung für Spoiler

Notes:

Check the contents of the package:

Contents a spoiler and cleaning cloths

- **Step 1:** Clean the surfaces as described in the section Tools
- **Step 2:** After cleaning the boot lid, align the spoiler with the help of the adhesive tape. (for this, it is best to watch the video of our Youtube friend). Which you can view here.
- **Step 3** If you want to do the procedure without a video, clamp two pieces of paper to both sides of the boot edge and orientate the spoiler on both sides.

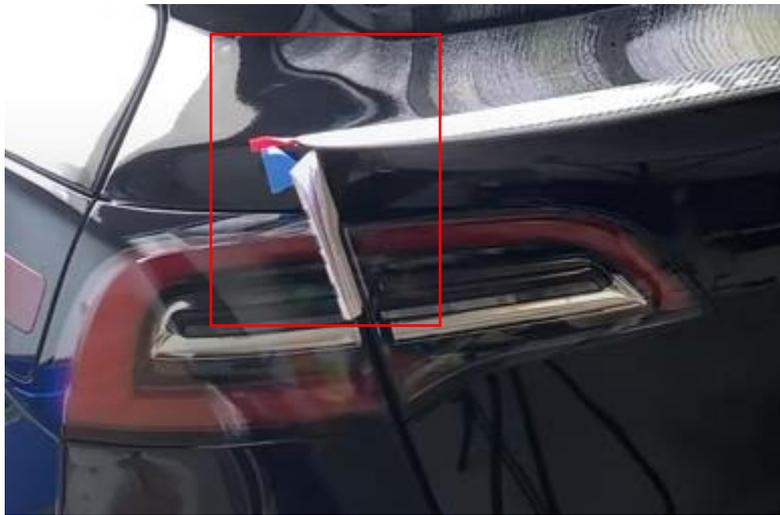

- **Step 4**
Slowly peel off the red adhesive strips on the inner side (see picture) and then press the spoiler firmly in all places several times.



- **Step 5** Fix the spoiler with the adhesive tape and press on further