



Installationsanleitung für Trunk Organizer

Anleitung

Bitte beachten sie die Hinweise, um eine lange Produktlebensdauer zu ermöglichen.

Dauer (für einen durchschnittlichen Verbraucher)

- 2-5 Minuten

Benötigte Werkzeuge / Hilfsmittel:

-Keine

Hinweise:

Überprüfen Sie den Verpackungsinhalt:

Es sollten 4 – einzelne Teile im Paket sein.


1x Organizer links

1x Deckel link

1x Organizer rechts

1x Deckel rechts

- **Schritt 1:** Organizer Ausrichten: Die spitze Kante zeigt immer aus dem Kofferraum heraus (siehe Bild 1).
- **Schritt 2:** Den Organizer einsetzen: Dazu diesen bis nach ganz unten im Fach drücken (ansonsten entstehen Knicke wie in Bild 2)

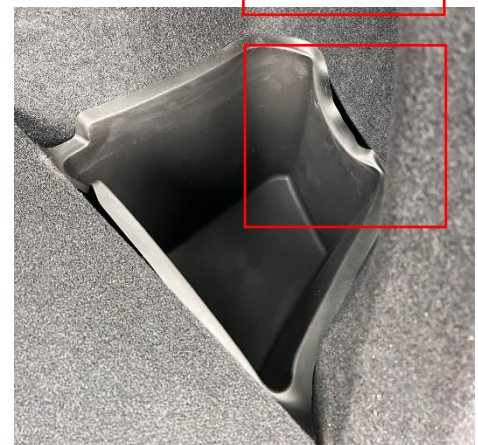



Installationsanleitung für Trunk Organizer

Instructions

Please follow the instructions to ensure a long product life.

Duration (for an average consumer)

- 2-5 minutes

Required tools / aids:

-None

Hints:

Check the package contents:

There should be 4 - individual parts in the package.

1x organizer left


1x cover left

1x organizer right

1x cover right

- Step 1: Organizer alignment: The pointed edge always points out of the trunk (see picture 1).

- Step 2: Insert the organizer: To do this, press it all the way down in the compartment (otherwise kinks will form as in picture 2).

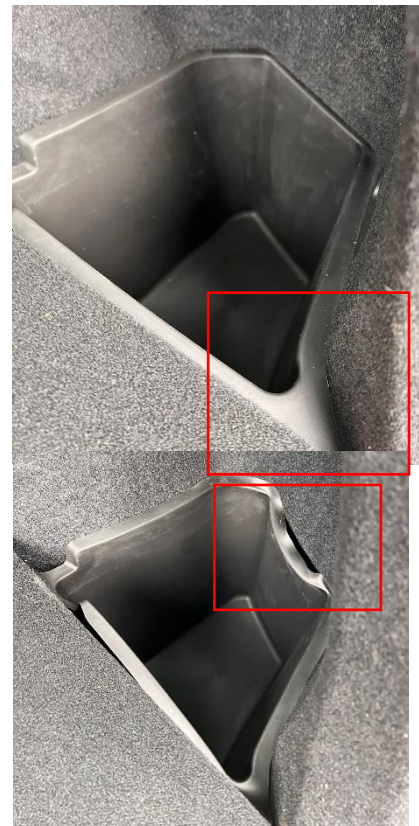




Installationsanleitung für Trunk Organizer

Notes:

Check the contents of the package:

Contents a spoiler and cleaning cloths

- **Step 1:** Clean the surfaces as described in the section Tools
- **Step 2:** After cleaning the boot lid, align the spoiler with the help of the adhesive tape. (for this, it is best to watch the video of our Youtube friend). Which you can view here.
- **Step 3** If you want to do the procedure without a video, clamp two pieces of paper to both sides of the boot edge and orientate the spoiler on both sides.

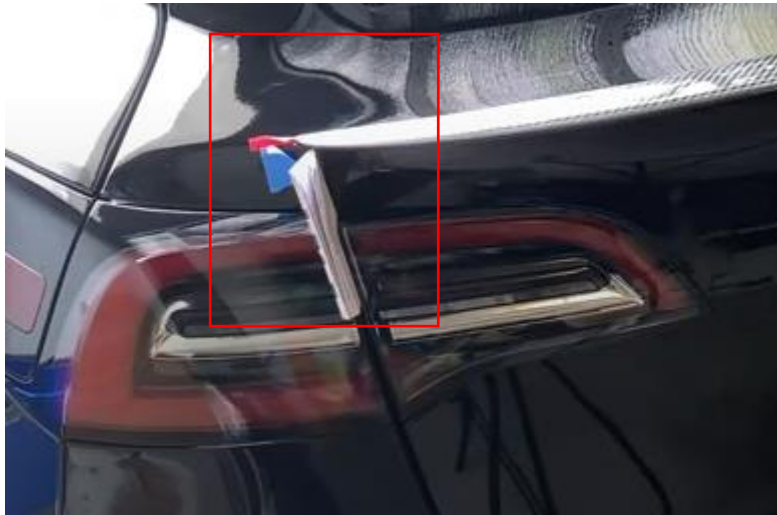

- **Step 4**
Slowly peel off the red adhesive strips on the inner side (see picture) and then press the spoiler firmly in all places several times.



- **Step 5** Fix the spoiler with the adhesive tape and press on further