


Sur-Ron Rear Fender Installation

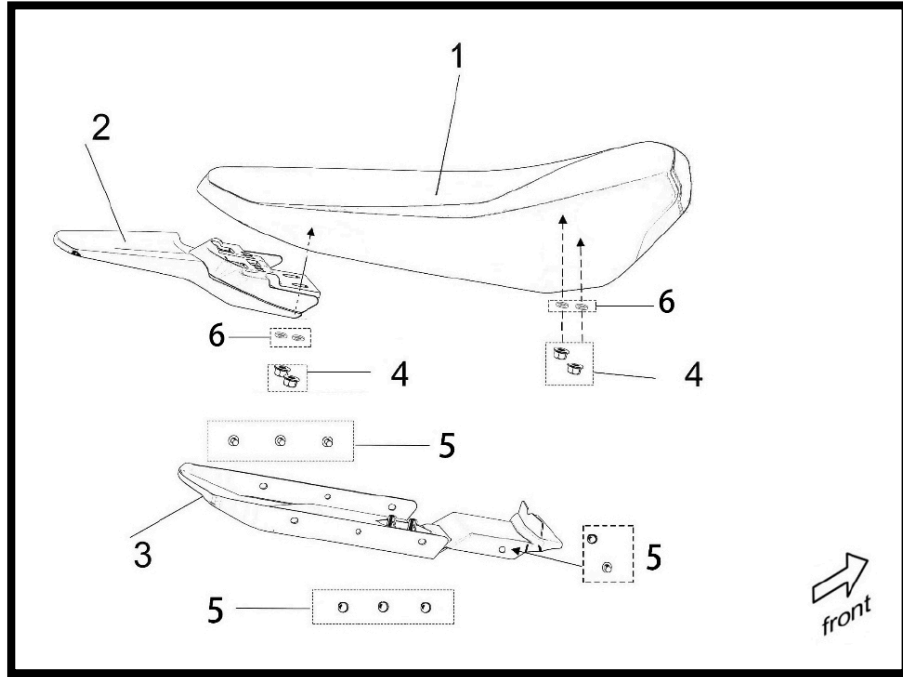


Step 1. Using a small screwdriver or razorblade, remove 8 inner fender mounting pins (Component 5 in diagram) and remove inner fender (3).



Step 2. Remove the four seat mounting nuts (4) and washers (7). Remove original fender.

Step 3: Place new fender as shown and make sure it is pressed tightly against the frame.

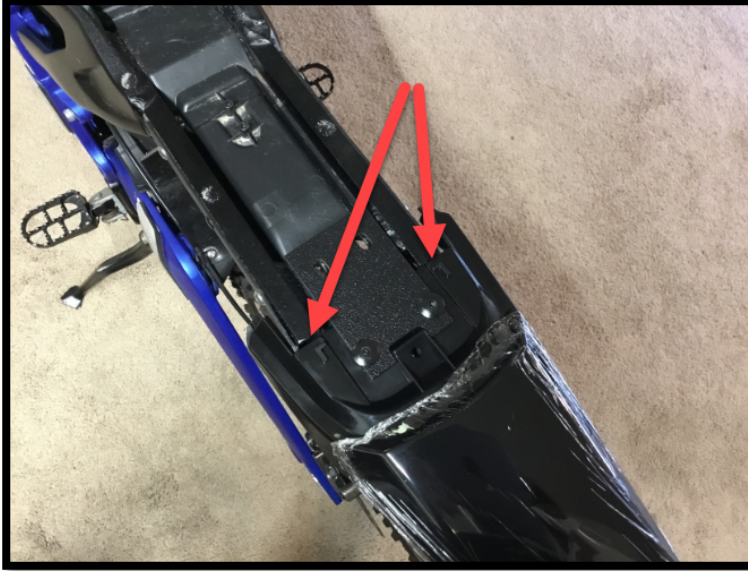

Step 4: Install seat (1), seat mounting washers (7) and seat mounting nuts (4).

Step 5: Tighten all seat mounting nuts (4) while holding fender firmly towards the



Seat mounting nuts (4) torque to 6lbft.

