


# Aluminium Light Guard for Honeycomb Blind

#65101-11796-C



Difficulty: ★☆☆☆☆

## Install Light Guard (Optional for IM)


Please install the light guard after installation of the blind is completed.

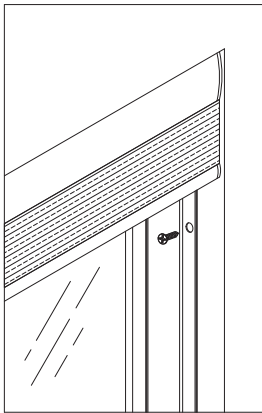

With light guard at back

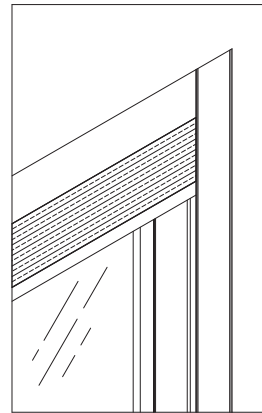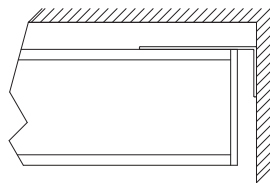

With light guard at front and back

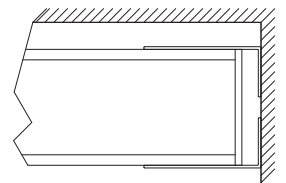

a. The light guard is to be placed at back of the shade at left & right side. If further light leakage minimisation is required, please install the second set of light guards at front of the shade at left & right side. (Not available for Cordless, Cordless TDBU, Cordless Day & Night)


Place the light guard vertically towards the bottom window frame. To avoid scraping, leave a 2mm gap between fabric stack and light guard. And then mark out the location with a pencil.

Remove the double sided tapes on the narrow side of the light guard and carefully paste the light guard to the window frame in position.

b. Aluminium light guard will be spliced in middle when blind length is equal to or greater than 1200mm.



c. For better fixing the aluminium light guard to the window, use 18.5mm flat head screw to secure the light guard through the pre-drilled hole.

There will be 2 pre-drilled holes on each piece of light guard.

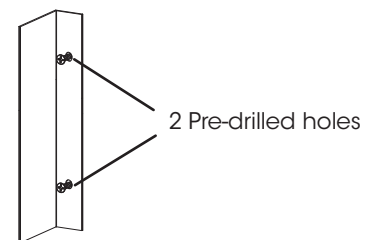

When light guard sliced into 2pcs, firstly paste one piece of light guard vertically towards the bottom window frame, and paste the other piece of light guard above the first one, the edges must be carefully aligned.

To avoid the edges from scraping the fabric, use the protective sticker to completely cover the joint of the two pieces of light guard on both front and back sides of light guard as diagram on the right.

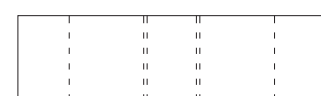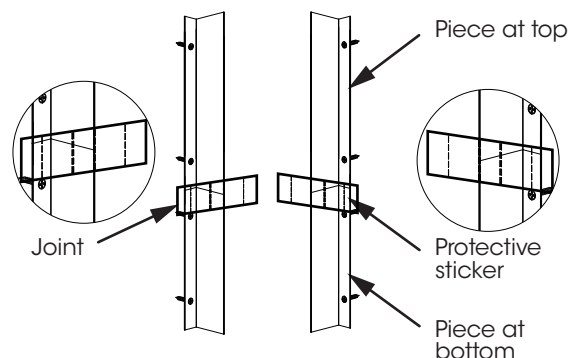

Protective sticker