
### How to install your

Smm

# Cordless (Roller Blinds with Raceway) #65101-40160-G



Difficulty: ★☆☆☆☆

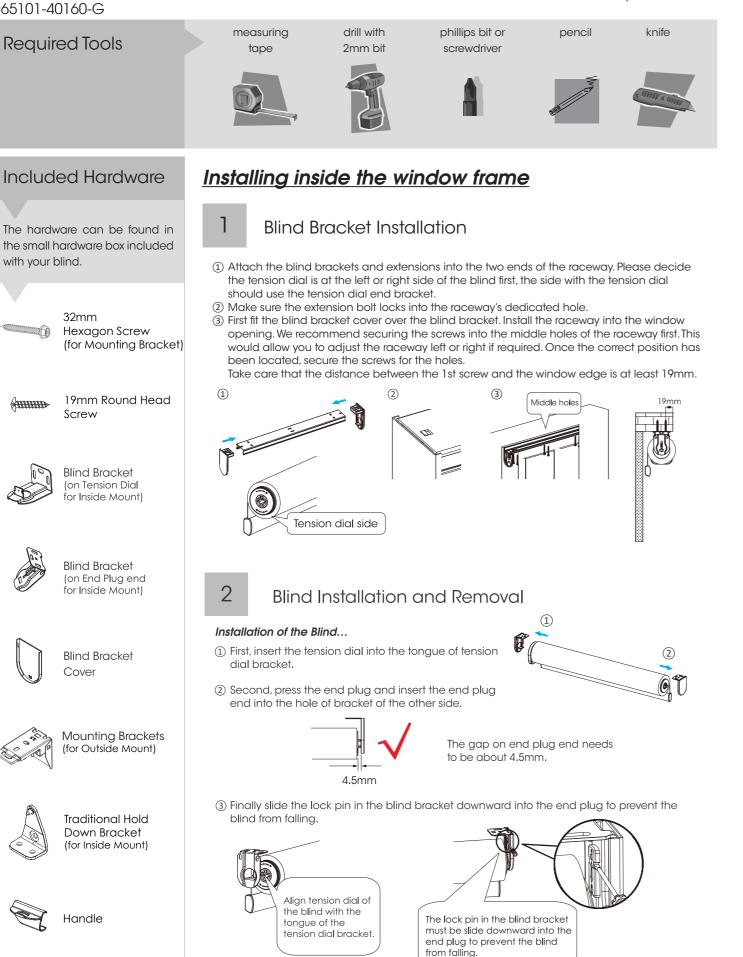


How to install your Cordless (Roller Blinds with Raceway)

## #65101-40160-G

Installation continued... Blind Installation Tips...

#### Removal of the Blind...

③ Finally remove blind from mounting bracket.



# Installing outside the window frame



2


① Measure 75mm in from top left and top right of where the blind will sit, and mark where the

- screws will go. (2) When installing the mounting bracket, the distance from the bracket's mounting hole to the edge of the window frame should be at least
- 19mm. ③ Make sure all brackets line up with each other


hexagon screws for the installation. (4) If more brackets are supplied, space them

evenly between the first two brackets.

Before installing the shade into the mounting brackets, please locate the lock pin in the shade bracket on the end plug side. Slide the pin downward into the end plug to prevent the shade from falling.



Insert the back edge of the raceway into the back plastic part of the bracket, and then turn the raceway upwards so that the front rib of the raceway snaps into the bracket.





### Difficulty: ★ ☆ ☆ ☆ ☆

After blind is installed into blind brackets, use a level to check if the fabrics roll is horizontal; if not, please adjust the position of blind brackets to keep the fabrics roll level.




The blind needs to be leve

① Use a tool to push the lock pin on end plug bracket upward. 2 Use tool to draw back the end plug from bracket.




## Blind Bracket Installation

- horizontally. Each bracket will require two 32mm

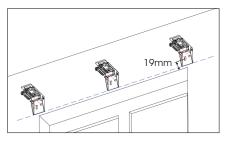

# Blind Installation and Removal







#### How to install your


# Cordless (Roller Blinds with Raceway) #65101-40160-G


Installation continued...

Difficulty: ★☆☆☆☆

### Removal of the Blind....

① Use a tool to push back the front or back plastic part of the brackets. (2) Turn the back side of the raceway downward so that it detaches from the bracket. ③ Finally remove the raceway by pulling downward from the brackets.

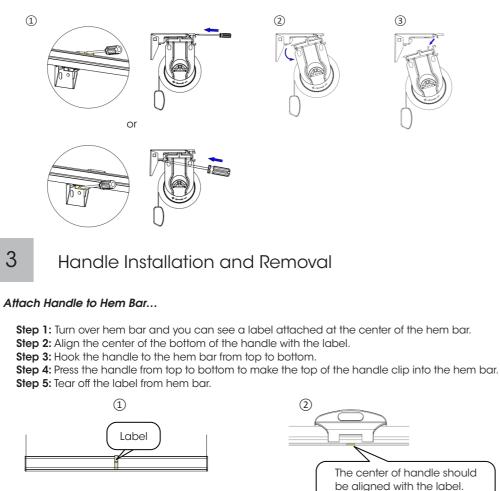

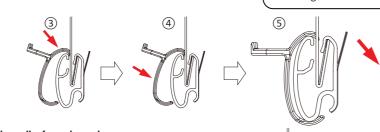

#### Remove handle from hem bar... Use straight screwdriver to pry the bottom of handle from hem bar and then the handle can be removed.

## Feedback?

We would love to know how you went with your installation...


4

Please write a review on our website at..






Use 19mm round head screw to secure each bracket

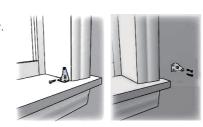

How to install, operate and maintain your Cordless (Roller Blinds with Raceway) #65101-40160-G

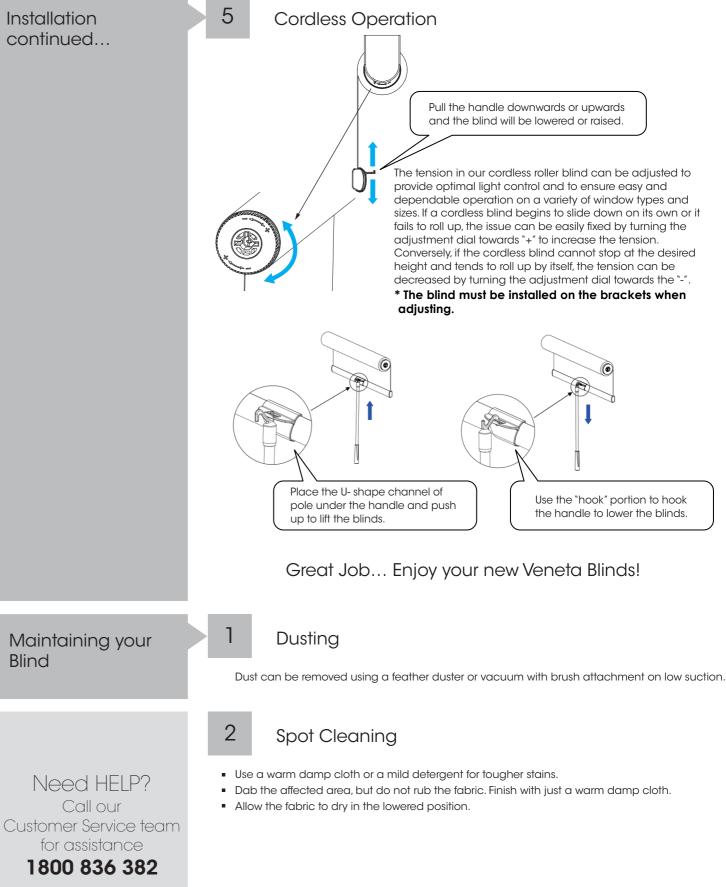



Difficulty: ★☆☆☆☆