
For information about other American International automotive accessories visit our website at:

http://www.aius.net

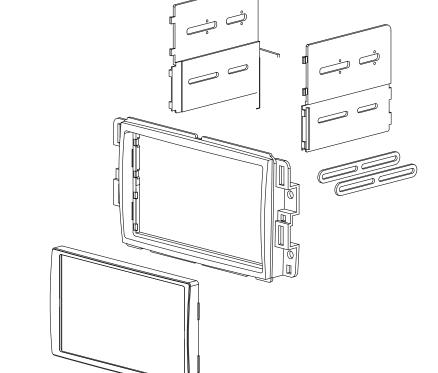

American

International

Car Stereo Installation Kits & Accessories



WWW.AIUS.NET

2500 East Francis Street Ontario, CA 91761, U.S.A. USA Sales (800) 336-6500 Canada Sales (888) 922-3006

CUSTOMER HELP LINE USA 800-323-4329 • Canada 800-245-8777

2007-13 SILVERADO

VEHICLE APPLICATIONS

2008-12 ENCLAVE

2006-11 LUCERNE

2007-09 EQUINOX

2008-14 EXPRESS

2006-13 IMPALA

2007-13 AVALANCHE

2012-14 CAPTIVA SPORT

Buick

Chevrolet

2014 SILVERADO HD

2007-14 SUBURBAN

2006-07 MONTE CARLO

2007-14 TAHOE 2009-12 TRAVERSE

GMC

2007-12 ACADIA 2008-14 SAVANA VAN

2007-13 SIERRA 2014 SIERRA HD

2007-14 YUKON/DENALI/XL

Hummer

2008-09 HUMMER H2

Pontiac

2007-09 TORRENT

Saturn 2007-09 OUTLOOK 2008-09 VUE Suzuki 2007-09 XL-7

2006-11 BUICK LUCERNE

DASH DISASSEMBLY AND RADIO REMOVAL INSTRUCTIONS

- 1. Carefully remove the trim bezel from around the Radio/climate control and remove.
- 2. Remove the (3) 9/32 screws securing the climate control module to the sub-dash, pull module forward and lower the module out of the way.
- 3. Remove the (4) 9/32 screws securing the radio to the sub-dash, pull the radio forward, disconnect the attached harnesses and antenna lead and remove radio.

2006-13 CHEVROLET IMPALA / 2006-07 MONTE CARLO

DASH DISASSEMBLY AND RADIO REMOVAL INSTRUCTIONS

- 1. Starting from the top, Carefully pull outward on the Radio/Climate control trim bezel to release.
- 2. Pull Radio/Climate control trim bezel forward, disconnect the attached harness from the back edge of the bezel and remove bezel.
- 3. Loosen the (2) 9/32 screws securing the climate controls to the sub-dash and pull climate control module slightly forward to allow the radio to be lifted up and out.
- 4. Remove the (4) 9/32 screws securing the radio to the sub-dash.
- 5. Carefully pull radio forward, disconnect all wire harnesses and antenna lead and remove radio.

2007-13 CHEVROLET AVALANCHE/SILVERADO 2007-14 CHEVROLET SUBURBAN/TAHOE
2014 CHEVROLET SILVERADO HD 2007-13 GMC DENALI/YUKON/SIERRA /2014 GMC SIERRA HD

DASH DISASSEMBLY AND RADIO REMOVAL INSTRUCTIONS

- 1. Carefully remove the trim bezel from around the radio and climate controls.
- Loosen the (2) 9/32 screws securing the dual +12 volt receptacle module and pull module forward slightly.
- 3. Loosen the (2) 9/32 screws securing the climate control module and pull the module forward slightly.
- 4. Remove the (4) 9/32 screws securing the radio to the sub-dash, pull radio forward and upward to clear the climate control module.
- 5. Disconnect all wire harnesses and the antenna lead and remove radio.

NOTES:

7

NOTES:	

2007-09 CHEVROLET EQUINOX 2007-09 PONTIAC TORRENT

DASH DISASSEMBLY AND RADIO REMOVAL INSTRUCTIONS

- 1. Slide shift handle base ring down and remove (torx head #10) screw
- 2. Slide upward and remove shift handle.
- 3. Pull back and remove plastic cover located under window switches (directly in front of parking brake)
- 4. A/C vents, radio bezel, shift knob console and window switches are all one piece.
- 5. Starting at the window switch section lift up and unclip entire panel. Start at the bottom and work up
- 6. Disconnect all plugs from panel and remove completely.
- 7. Remove (4) 9/32 screws securing factory radio in place.
- 8. Disconnect radio harnesses and remove

2008-11 BUICK ENCLAVE 2009-12 CHEVROLET TRAVERSE 2007-12 GMC ACADIA 2008-09 SATURN OUTLOOK

DASH DISASSEMBLY AND RADIO REMOVAL INSTRUCTIONS

- Using a panel removal tool, carefully unfasten the radio/climate control trim panel, disconnect the attached wire harness and remove the entire radio trim/ Climate control panel.
- 2. Remove the (4) 9/32 screws securing the radio to the sub-dash.
- 3. Carefully pull the radio forward, disconnect all attached harnesses and antenna lead and remove radio.

2008-14 CHEVROLET EXPRESS VAN 2008-14 GMC SAVANNAH VAN

DASH DISASSEMBLY AND RADIO REMOVAL INSTRUCTIONS

- 1. Remove the (2) 10mm bolts from below the drivers knee panel under steering column and remove the panel.
- 2. Remove the (2) 10mm bolts from the panel below passenger side dash airbag and remove the panel.
- 3. Unclip and remove the radio and instrument cluster panel. (Completely removing this panel may not be necessary to get to the radio).
- 4. Remove (4) 9/32" bolts securing the radio to the sub-dash.
- Carefully pull the radio forward, disconnect all attached harnesses and antenna lead and remove radio.

DASH DISASSEMBLY AND RADIO REMOVAL INSTRUCTIONS

- Carefully press in on the sides of the shifter boot to release it from the shifter trim panel.
- 2. Lift the shifter boot up to access the Allen wrench screw securing the shifter knob to the shift lever. Loosen the Allen wrench screw and remove the shifter knob.
- 3. Remove the (1) torx screw from the shifter trim panel. Using a panel removal tool, carefully unsnap the shifter trim panel.
- 4. Disconnect the attached harnesses and remove the trim panel.
- 5. Using a panel removal tool, carefully unclip the radio trim bezel. Unplug and remove the panel.
- 6. Remove the (4) 9/32" screws securing the radio to the sub-dash.
- 7. Carefully pull the radio forward, disconnect all attached harnesses and antenna lead and remove radio.

2008-09 HUMMER H2

DASH DISASSEMBLY AND RADIO REMOVAL INSTRUCTIONS

- 1. Carefully unclip the Radio/Climate Control trim bezel including the A/C vents.
- 2. Disconnect all attached harnesses and remove bezel assembly.
- 3. Remove the (4) 9/32" screws securing the Climate controls to the sub-dash, disconnect the attached harnesses and remove the Climate Controls.
- 4. Remove the (4) 9/32 screws securing the radio to the sub-dash.
- 5. Disconnect all attached wire harnesses and antenna lead and remove radio.

2008-09 SATURN VUE/ 2012-14 CAPTIVA SPORT

DASH DISASSEMBLY AND RADIO REMOVAL INSTRUCTIONS

- 1. Carefully unclip and remove the trim panel above the top of the radio trim panel
- 2. Remove the (2) Phillips screws from under panel removed in step 1.
- 3. Carefully unclip and remove the radio trim/ Vent assembly.
- Carefully unclip and remove the trim panel surrounding the shifter knob including the climate controls.
- 5. Remove the (4) 9/32 screws securing the radio to the sub-dash
- 6. Disconnect all attached harnesses and antenna lead and remove radio.

KIT ASSEMBLY INSTRUCTIONS

Double DIN Mount Applications

- 1. Attach the left and right side brackets to the main frame. See figure C below.
- 2. Attach (1) ISO Spacer to the inside of upper section on both Left & Right mounting brackets as shown in Fig. A. (See note #2 below)
- 3. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible or hardware included with kit.
- 4. Slide radio component forward or backward for desired look and tighten screws.

NOTE: #1 - ISO trim ring (optional) must be used in place of after-market radio's trim rings. For ISO mount applications, mount after-market radio components to side brackets using screws provided with radio when possible or hardware included with kit. #2 - Spacers must read upright (This side up for DBL ISO install).

