






Part # 11509.13

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 844-270-0593 | www.Omix-ADA.com

Front Tube Doors, JL Wrangler

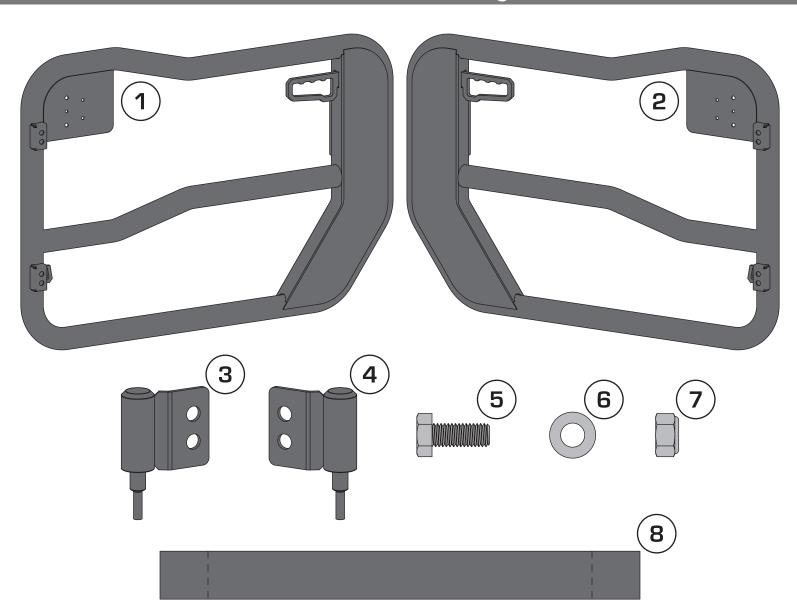

Components

- 1. Tube Door Left
- 2. Tube Door Right
- 3. Hinge Pin Left
- 4. Hinge Pin Right

- (1) 5. M8 Bolt
- (1) 6. M8 Washer
- (2) 7. M8 Lock Nut
- (2) 8. Check Strap

- (10)
- Chook Stran

OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649

FOR WARRANTY OR TECH CONCERNS EMAIL: webmaster@omixsupport.com








460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 844-270-0593 | www.Omix-ADA.com

Front Tube Doors, JL Wrangler


1. Remove doors from vehicle as instructed in factory supplied user manual.



Door removal may require assistance from another person.

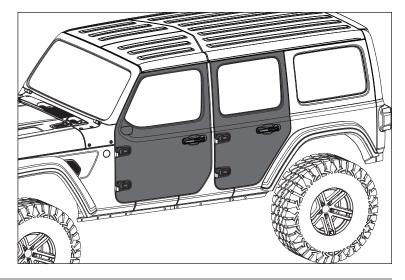


2. Loosely install Hinge Pins on Tube Doors using supplied M8 hardware.

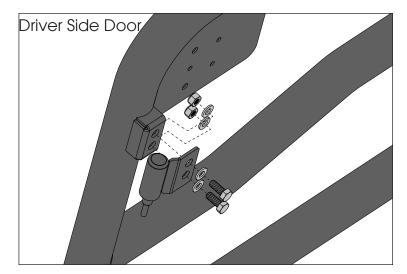

3. Using caution, slowly insert Tube Door in door hinges and reinstall factory door nuts.



Tube Door installation may require assistance from another person.

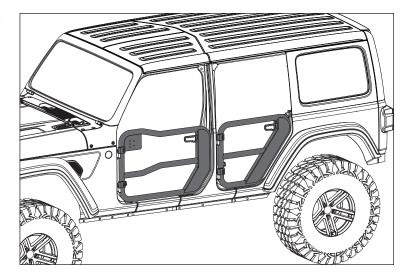








460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 844-270-0593 | www.Omix-ADA.com


Front Tube Doors, JL Wrangler

4. Close Tube Door and tighten Hinge Pin hardware. Install Check Strap and cycle Tube Door open and closed to ensure Hinge Pins are properly aligned and fully seated in door hinge.



If door does not close after Hinge Pin alignment, loosen two M6 bolts securing latch box to door. Adjust latch box position until door closes properly.

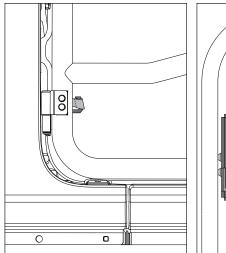

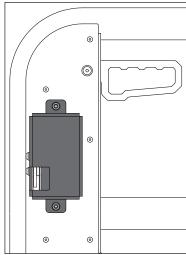

5. If desired, install mirrors on Tube Doors.

NOTE: Rugged Ridge offers the following mirror options for use with Rugged Ridge Front Tube Doors for JL

11002.23 - JL Tube Door Mirror Kit
Installs in yellow holes
11025.1x - TJ/JK Quick Release Mirrors
Installs in red holes
11025.2x - JL Trail Mirrors
Installs in windshield hinge

