




## Slatpanel® | Exterior Composite Slat Wall Panels




### 1. Simple to install

- Quick and easy-to-install
- Simple to conceal fixings
- Easy to cut to size

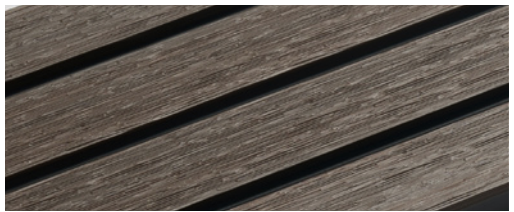


### 2. Looks like real wood

- PVC featuring a 3D wood grain
- Tried and tested product design
- Create a natural look with ease

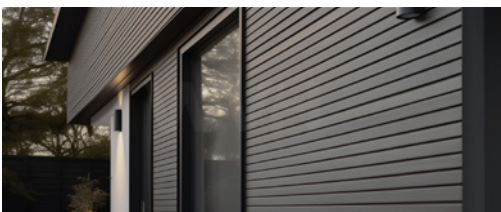

### 3. Sleek, modern design

- Four color ways available
- 4-sided capping technology
- On-trend slat look

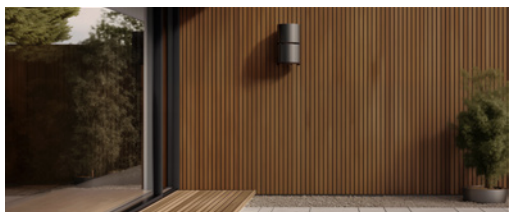

### 4. All-weather product

- Waterproof, polymer coating
- Suitable for exteriors and interiors
- Low maintenance

### Colors available:



Slatpanel® | Black Wood Effect |  
Exterior Composite Slat Wall Panels



Slatpanel® | Oak Wood Effect |  
Exterior Composite Slat Wall Panels



Slatpanel® | Grey Wood Effect |  
Exterior Composite Slat Wall Panels




Slatpanel® | Walnut Wood Effect |  
Exterior Composite Slat Wall Panels

# Panel dimensions

Sizes 94.69"(H) x 7.56"(W) x 1.02"(D)  
144.31"(H) x 7.56"(W) x 1.02"(D)

Surface 3D Wood Grain

The Exterior Composite Slat Wall Panels features a 3D wood grain surface, which brings a touch of nature to your space. The tongue-and-groove assembly is easy to install and ensures a neat finish, with no visible fixings.

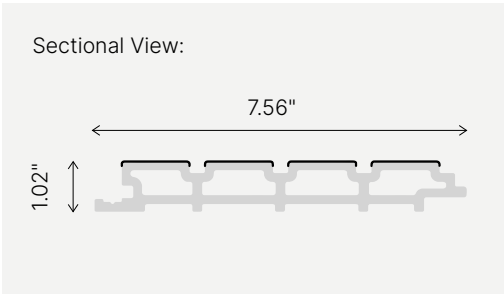

# Installation Instructions

Tools needed:




Circular Saw



Tape Measure




Impact Drill



Level




Electric Drill




Joist




SS410 Screw



Color Screw



Expansion Screw

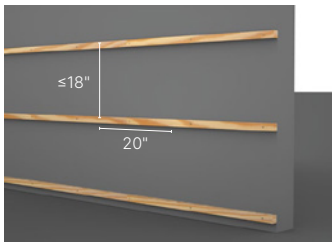


Step 1.

First, fix the joists at a 18" interval to the wall with expansion screws. The spacing between two adjacent screws should be 20".




Step 2.

Fix the first piece of wall cladding board on the joists with coloured screws. Note that the screws should be installed in the slot of the tongue.

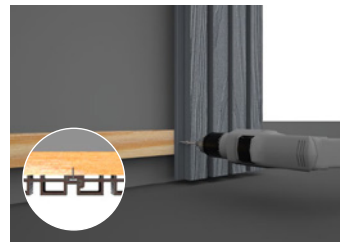


Step 3.

Secure the cladding board completely by using self-drilling screws to fix it to the joists. The screws should be installed in the groove of the cladding.

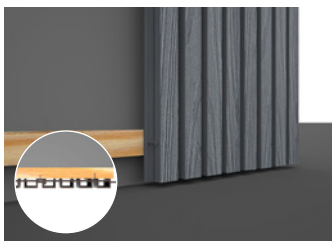


Step 4.

Join the second piece of cladding board to the first one. Fix it to the joists with self-drilling screws.

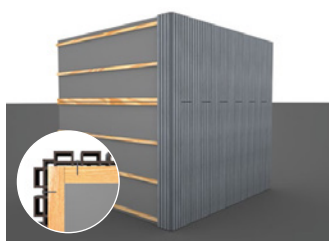

Step 5.

To properly finish the corner, the joists are to be flush with each other respectively and fix them with screws.

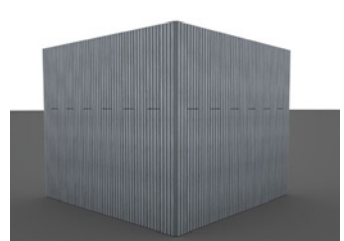

Step 6.

Finish the installation by getting the rest installed in the same manner.

Need help? Contact us:

Call: (302) 216-6177

Email: [sales@thewoodvenerhub.com](mailto:sales@thewoodvenerhub.com)

Customer service hours:

Monday to Friday, 9am — 5pm EST

[thewoodvenerhub.com](http://thewoodvenerhub.com)