




MIRROR SHOOTER DITCH LIGHT BRACKETS INSTALLTION

2013-2017 Subaru Crosstrek

2012-2016 Subaru Impreza

2015-2017 Subaru Impreza WRX/STI

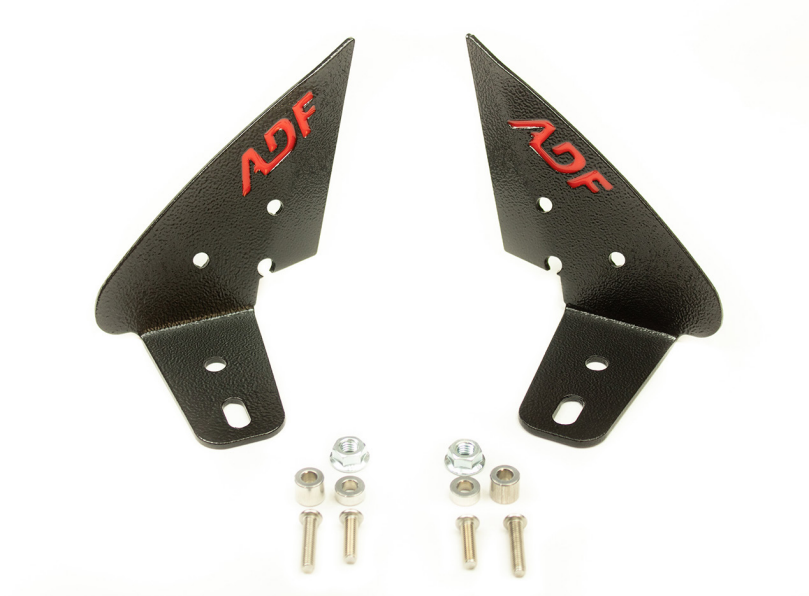

Tools Required:

- Screw driver
- Allen wrench
- 10mm socket
- 10mm end wrench

Hardware Provided:

- Left and Right Ditch Light Brackets
- 2 x Long button Allen head bolt
- 2x Short Button allen head bolts
- 2x M6 Flange nut
- 2 x Large Aluminum spacers
- 2 x Small Aluminum spacers

1. Open door, use your screw driver to something adequate to pry and pop off the factory plastic trim section before the door.



2. Once the plastic trim is popped off, use a 10mm socket to remove the fender mounting bolt.



3. Grab the new Ditch light bracket and the correct side. Slide the longer allen bolt through the rear wards hole, and the smaller allen bolt through the forwards hole.
4. Slide the aluminum spacers onto the hardware on the back side of the bracket. Larger on the rearwards bolt and the shorter on the forwards bolt.



5. Bring the bracket and the hardware up to its mounting location and slowly apply it to its new location. At this point you can finger tighten the rear allen bolt into its hole where we remove the other fender bolt.



6. Once its finger tight, you will need a 10mm end wrench and some tape. Put a little tape on the back of the wrench and put in the new nut that is provided. You will need to snake this up behind the fender to mount that forwards allen bolt to.





7. Adjust the bracket to where it fits the best and the door trim closes nicely. Then you can use the allen wrench to tighten down the two allen bolts. Make sure these are nice and tight.
8. Install your lights, and adjust wiring down the slot in the bracket.

If you have any questions please contact us, 5035750034 Adnfab@gmail.com