


VZ 2.0: The Next Generation Garden Bed Material

VZ 2.0 is a specially developed metal by Vego Garden for the unique planting environment with high level of compost, fertilizer, and humidity. VZ 2.0 is made with patent Zinc Alloy coating on top of steel substrate, finished with food safe agriculture paint to further seal the metal.

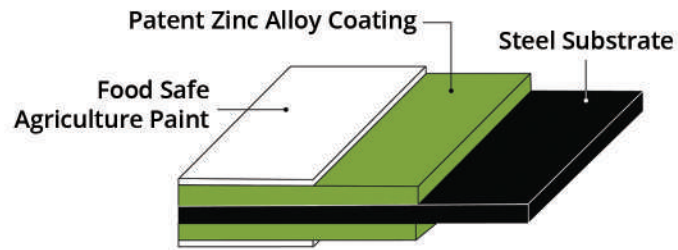


- Extremely Corrosion Resistant: Lab tests proved 4-6 times more durable than Aluzinc or Galvanized Steel.
- Super Heat Reflection: Maintain optimal soil temperature.
- Healthy Soil: No harmful substance leaching.
- 100% Green Material: Recyclable material manufactured by green-process.

Dimensions

Item Dimensions:
Length: 42" | Width: 42" | Height: 32"

Top Part Dimensions:
Length: 42" | Width: 24" | Height: 17"

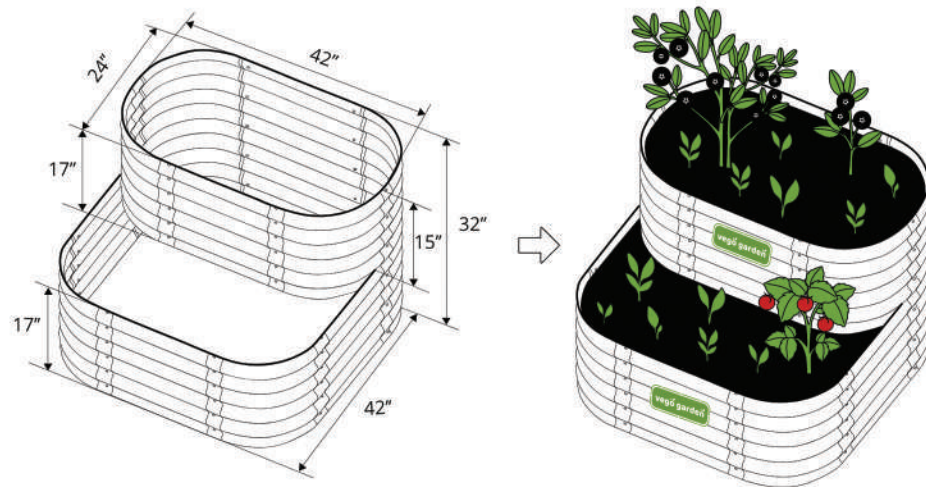

Contact Us

- 📞 (866) 597-1888
- ✉️ hello@vegogarden.com
- 🌐 www.vegogarden.com
- 📍 Houston, TX 77023



M01VBCA3535

vegō garden



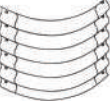




CASCADING METAL RAISED GARDEN BED




Caution

Please be aware that there are sharp edges in metal panels that may cause injury. The use of protective equipment such as gloves and closed toe shoes is recommended.

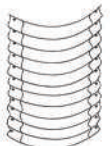Packing List


A: Corner Panel 32"		X2
B: Side Panel 32"		X1
C: Corner Panel 17"		X4
D: Side Panel 17"		X4
E: Cap Nut Fastener Set		X20
F: Standard Fastener Set		X40
G: Safety Edging Cover		X1

3 Tighten Nuts & Bolts

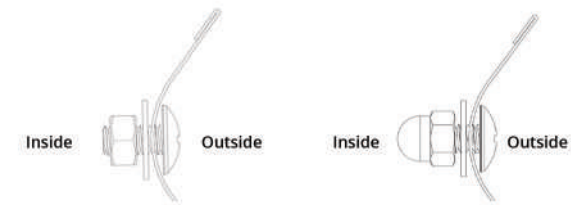


Assemble nuts and bolts as shown above, the nuts should be outside. Make sure to tighten each nut and bolt for reinforcement of garden raised bed.

4 Bottom Panels

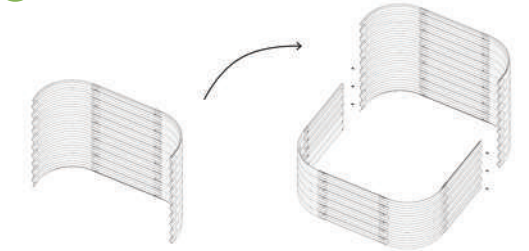


Assemble 3 pieces of 32" straight & corner panels first, then assemble 5 pieces of 17" straight and corner panels.

5 Assemble Bottom Parts

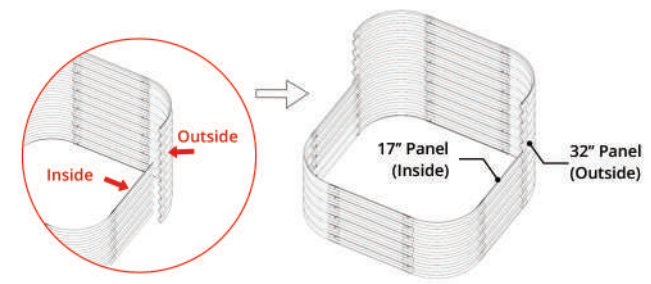

Assemble the two bottom parts together from step 4. Make sure the 32" panels are attached outside of the 17" panels.


6 Top Panels

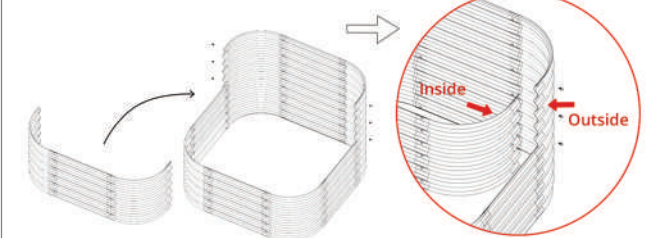

Assemble the rest of 3 pieces of 17" straight & corner panels, this part will be the top part of the cascading bed. Assemble the top part and bottom part by using the same method. Make sure the 32" panels are attached outside of the 17" panels.


Assembly Guide

1 Remove Protective Films

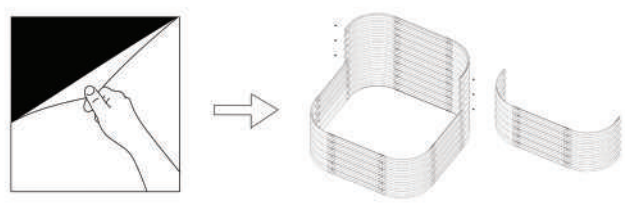


Remove protective films from all panels, and lay panels on a soft flat surface according to the chosen configuration. A soft surface such as grass will protect the paint from scratching.

2 Nuts Usage

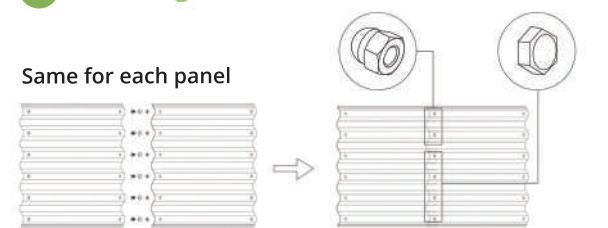


For each panel, cap nuts are used for top two holes, standard nuts are used for lower four holes. Assemble all panels: initially attach all bolts, washers and nuts loosely, and then tighten up using the wrench tool (as supplied) with a screwdriver/cordless drill.

7 Assemble Top Parts

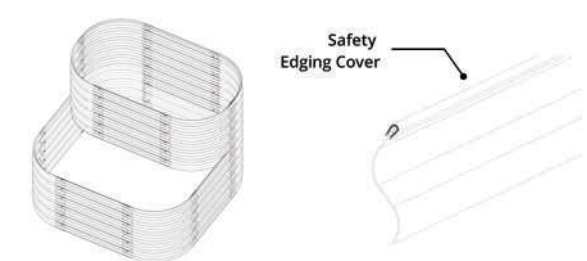

Push the safety rubber edging to the top rolled steel edge and cut the extra length off. Make sure edging is attached securely.

8 Finish & Enjoy

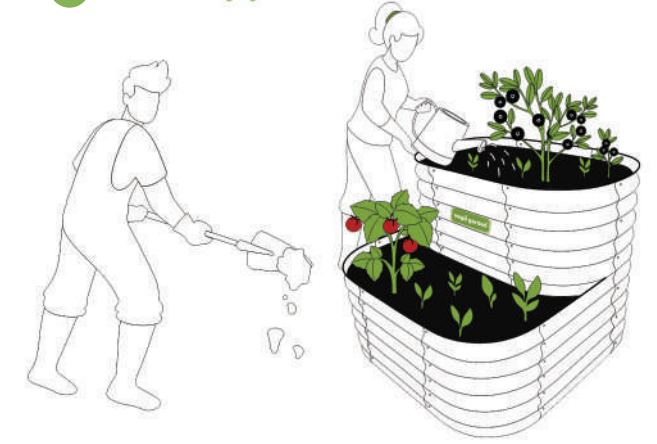

Follow Us On Social Media

 @vegogarden
  @vego_garden
  #vegogarden / #raisedbedgardening / #metalgardenbed