


VZ 2.0: The Next Generation Garden Bed Material

VZ 2.0 is a specially developed metal by Vego Garden for the unique planting environment with high level of compost, fertilizer, and humidity. VZ 2.0 is made with patent Zinc Alloy coating on top of steel substrate, finished with food safe agriculture paint to further seal the metal.

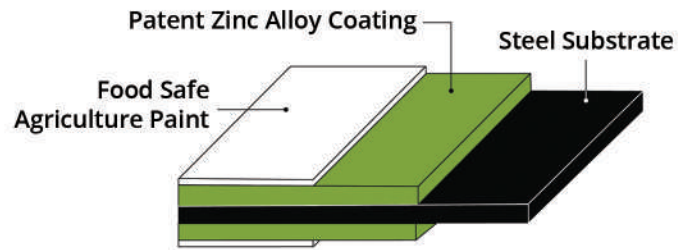


- Extremely Corrosion Resistant: Lab tests proved 4-6 times more durable than Aluzinc or Galvanized Steel.
- Super Heat Reflection: Maintain optimal soil temperature.
- Healthy Soil: No harmful substance leaching.
- 100% Green Material: Recyclable material manufactured by green-process.

Dimensions

Length: 42"

Width: 24"

Height: 17"

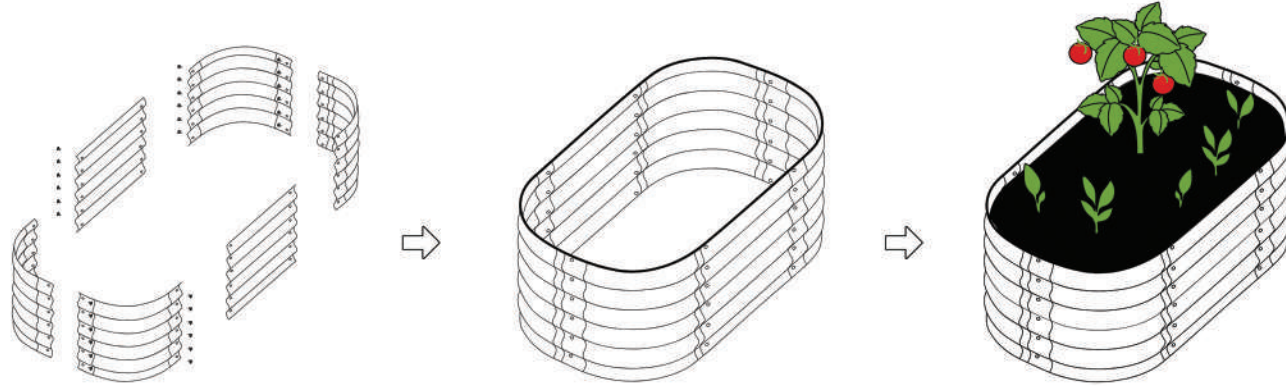

Contact Us

 (866) 597-1888

 hello@vegogarden.com

 www.vegogarden.com

 Houston, TX 77023



vegō garden


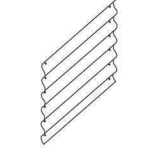



KIDS FIRST RAISED BED



Caution


Please be aware that there are sharp edges in metal panels that may cause injury. The use of protective equipment such as gloves and closed toe shoes is recommended.

Packing List

- A: Corner Panel  X4
- B: Side Panel  X2
- C: Cap Nut Fastener Set (For Top 2 Rows Use)  X12
- D: Standard Fastener Set (For Lower 4 Rows Use)  X24
- E: Safety Edging Cover  X1


Assembly Guide

1 Step One

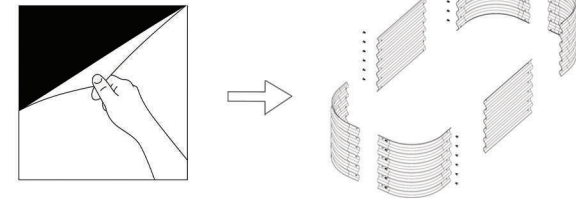


Remove protective films from both sides of panels, and lay panels on a flat surface according to the above configuration.

2 Step Two

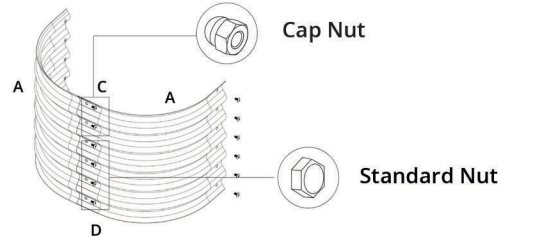


Cap nuts are used for top 2 rows, standard nuts are used for lower 4 rows. Assemble all corner panels: initially attach all bolts, washers and nuts loosely, and then tighten up using the wrench tool (as supplied) with a screwdriver/cordless drill.

3 Step Three

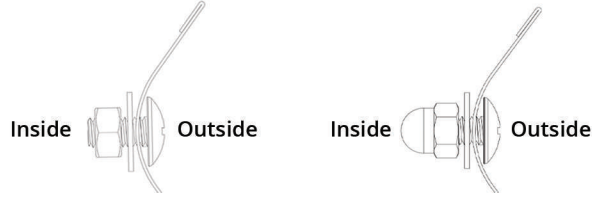


Make sure to tighten each nut and bolt for reinforcement of garden raised bed.

4 Step Four

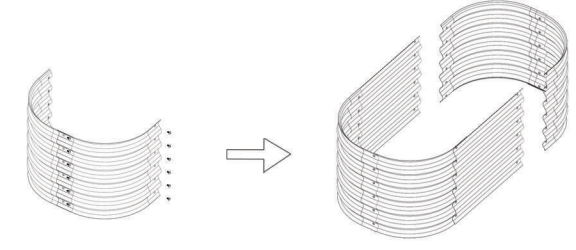


After corner panels are assembled, attach straight panels with corner panels using the same method. Make sure corner panels are attached outside of the straight panels.

5 Step Five



Push the safety edging cover to the top rolled steel edge and cut the extra length off. Make sure edging is attached securely.

6 Step Six

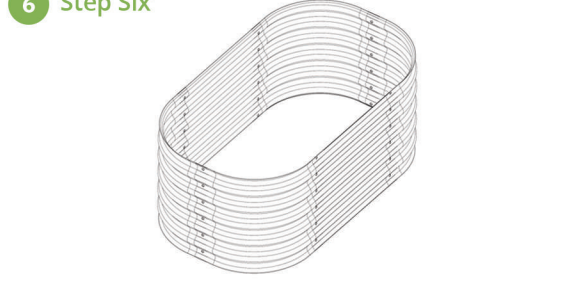

Congratulations on completing the assembly! We are sure there are more configurations that you can do with your great imagination!

Follow Us On Social Media

 @vegogarden
  @vego_garden
  #vegogarden / #raisedbedgardening / #metalgardenbed

