





Or

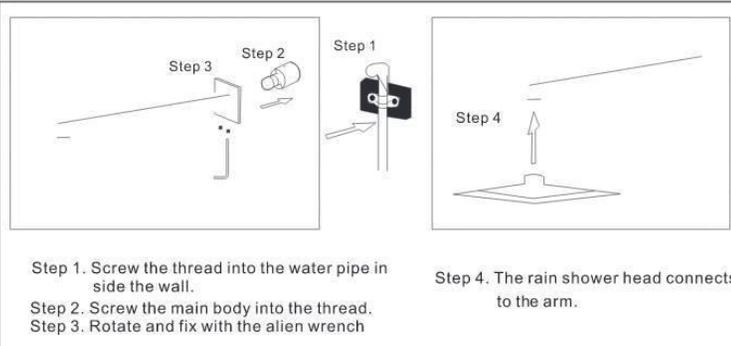

◆ Install the handheld shower head

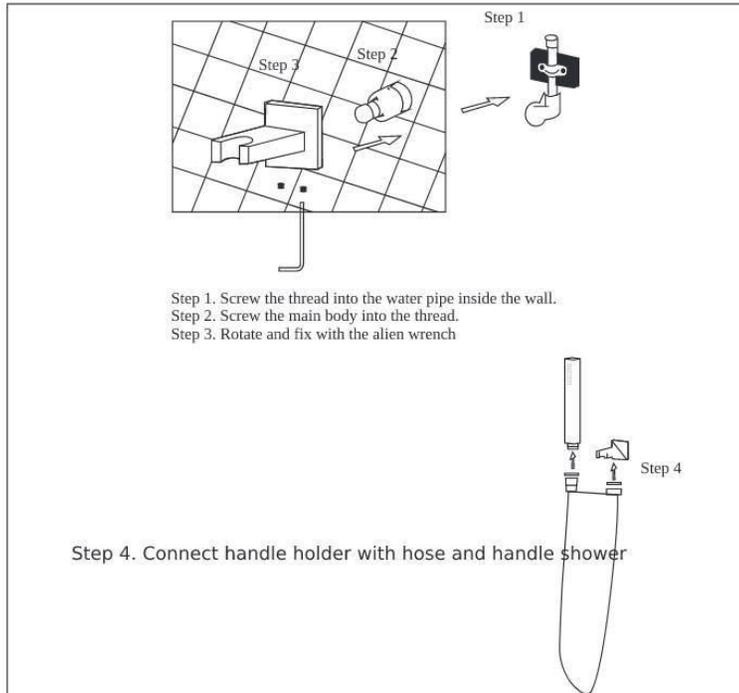


THERMOSTATIC SHOWER MANUAL

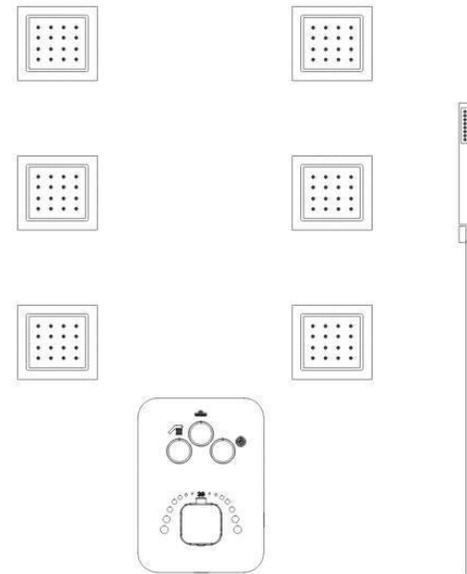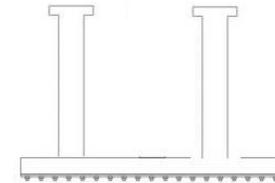

Product List

Please check the accessories with following table, if there is anything missing please contact customer service immediately.

Ceiling mounted shower items

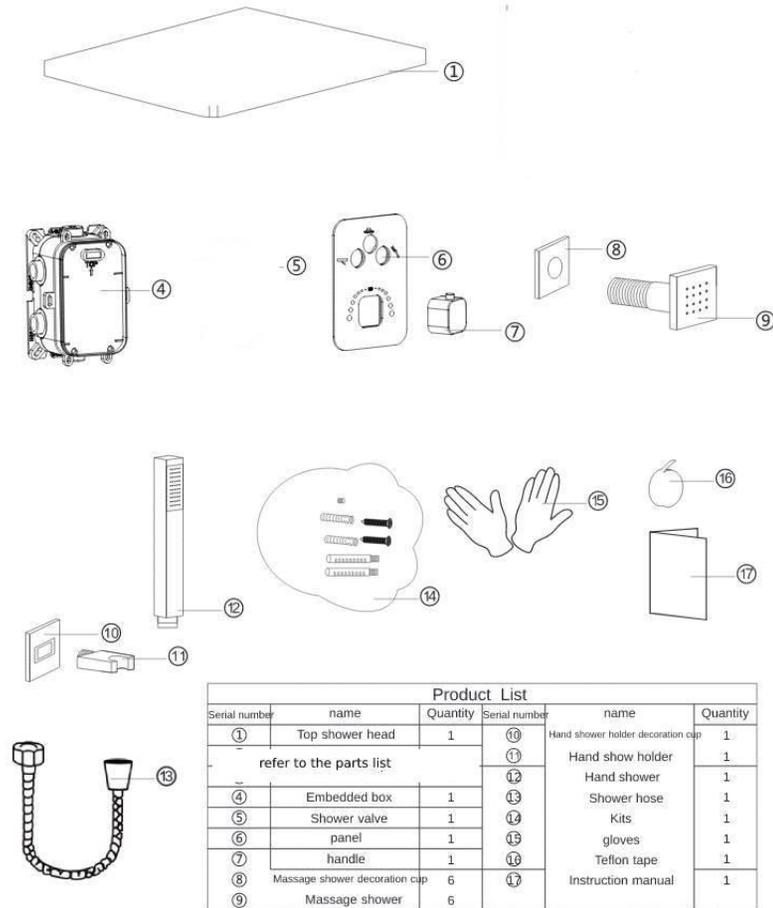

Showerhead Installation

INSTALLATION MANUAL Tools You Will Need:



Adjustable Wrench



Hexagon wrench



Phillips Screwdriver


Before the Installation

1. Check the package and confirm all parts are included. If any part is missing or damaged, please contact us.
2. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
3. Shut off the main water supply prior to beginning installation.
4. Do flush the water supply lines to remove any dirt and debris before installation (**IMPORTANT**).
5. Make sure to connect the hot/cold inlet pipe correctly. If standing in front, connect hot water pipe to the left and cold water pipe to the right.
6. After the installation, check for leaks and make sure every joint is safely sealed.

Cleaning and Maintenance


1. Rinse with clean water and dry with a soft cloth.
2. Do not use any detergent, acid, polisher, abrasives, or harsh cleaners.
3. Do not use cloth with a coarse surface.

Parts List

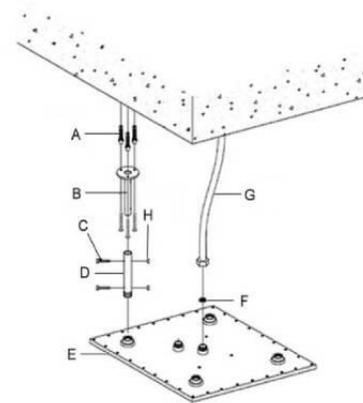

Part	Name	Quantity
A	anchors	16
B	mounting bar	4
C	screws	24
D	shower bar	4
E	shower head	1
F	screen washer	1
G	shower hose	0
H	nut	8

the customer need buy two hoses for rain head and one tee. please call 909 662530 or email sales@showerwonder.com if need further assistance.

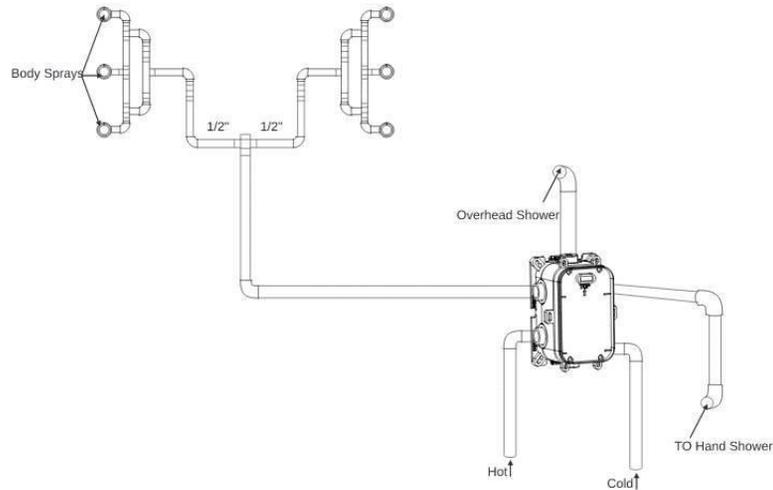

1/2inch water pipes

don't connect hot water pipe and cold water pipes to the inlets of valve incorrectly so it will cause valve not work.

Before finish your tile wall, please test your water temperature as below

- (1) you should always get hot water after you turn temperature knob all the way the left side end and run water for 1 min and then test water temperature;
- (2) you should always get cold water after you turn temperature knob all the way the right side end and run water for 1 min and then test water temperature;


if not, it indicates incorrrct hot and cold water pipelines connections to valve body.



Note: Do not disassemble this product under non-professional guidance. Pictures are for reference only. All the spare parts are subject to the actual product.


①

Basic Size

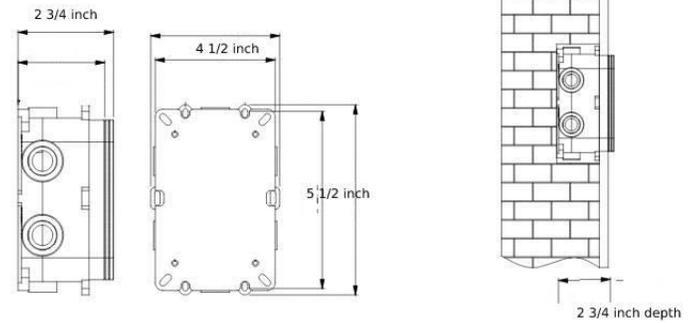

the correct depth for gray box is from 2 1/2 inch to 1 3/4 inch in the finished tile wall.

②



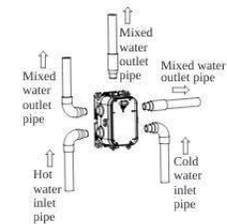


As shown in the figure, the inlet and outlet pipes are embedded. Pay attention to the correct direction of installing the embedded box. Be sure to mark the ^{TOP} of the baffle upward, and the vertical direction of the embedded box. The lower left interface is connected to the hot water pipe. The interface is connected to the cold water pipe, the upper left interface is connected to the top spray pipe, and the upper right interface is connected to the handheld pipe.





Note: Please strictly follow the cold and hot water pipes shown in the diagram to connect the main body cold water and hot water to the correct position to avoid reverse installation.

installation steps for 20 inch rain head (non-flushed on ceiling style)

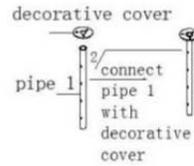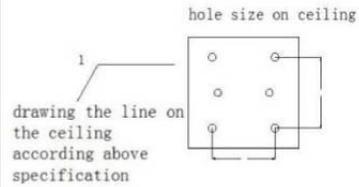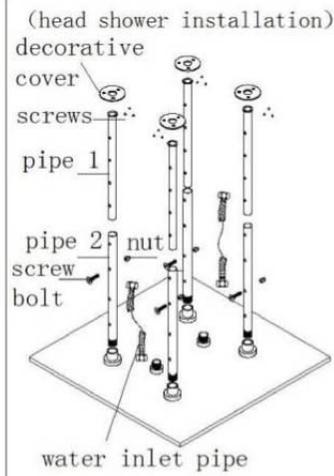


3
Drill the holes on the ceiling according to above hole specification and install 4 pipes.

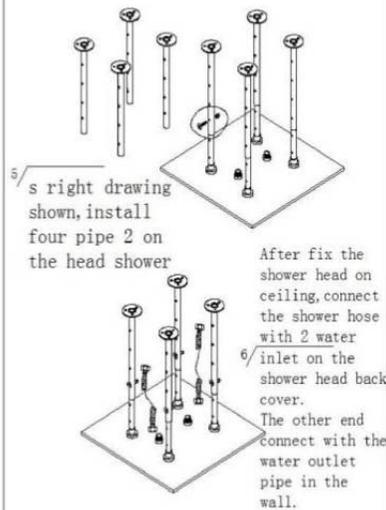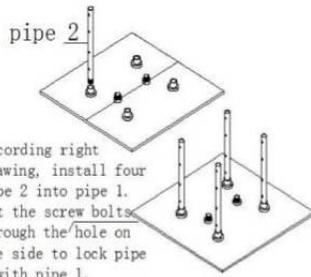


installation steps for 20 inch rain head (just for flushed on ceiling style)


Installation Guide

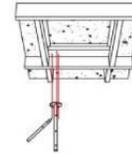


1. Make the fixing positions to ceiling.

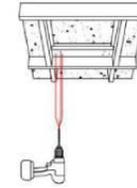

2. Drill holes to suit the anchors.

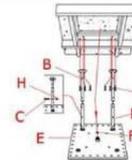

3. Add the screen washer (F). Screw shower hose (G) (not included) to the water inlet on the shower head (E) and then to the water outlet in the ceiling. Install the anchors (A) and fix the mounting bar (B) to ceiling with screws (C). Screw shower bars (D) into the shower head (E) tightly. Attach the shower bar (D) to the mounting bar (B) and fix screws (C) and nut (H) to lock shower bars (D) with mounting bar (B) at the desired height.




4. Finish the ceiling as shown.


Troubleshooting

Problem	Possible Cause	Corrective Action
Water does not shut off completely.	1. O-ring is not seated correctly or worn. 2. Cartridge may be defective.	1. Reseat or replace O-ring. 2. Replace cartridge.
Leaks at waterline connection.	1. Worn or broken washer. 2. Faucet body may be defective.	1. Replace washer. 2. Replace faucet (contact us for the replacement).
Leaks from handle.	1. Cartridge may come loose. 2. Cartridge may be defective.	1. Reseat cartridge tight. 2. Replace cartridge.
Leaks at hose connection.	1. Hose connection is loose.	1. Tighten hose. 2. Replace hose.
Leaks at shower valve connection.	1. Connection may come loose or not sealed completely. 2. Defective shower valve inlet or outlet connector.	1. Check connections. 2. Replace valve body.
Diverter knob does not work.	1. Diverter cartridge may be defective.	1. Replace cartridge.
LED light does not Light or noisy LED showerhead.	1. Defective LED generator.	1. Replace LED spray head (for kitchen faucet). 2. Replace LED threaded pipe (for separate faucet spout). 3. Replace LED generator (for others).
Low flow.	1. Check for water pressure problems. 2. Aerator may be dirty or clogged.	1. Clean or replace the aerator. 2. Remove waterflow restrictor if available. 3. Install booster or pump (if applicable).


7 installation steps for rain head (water pipeline)

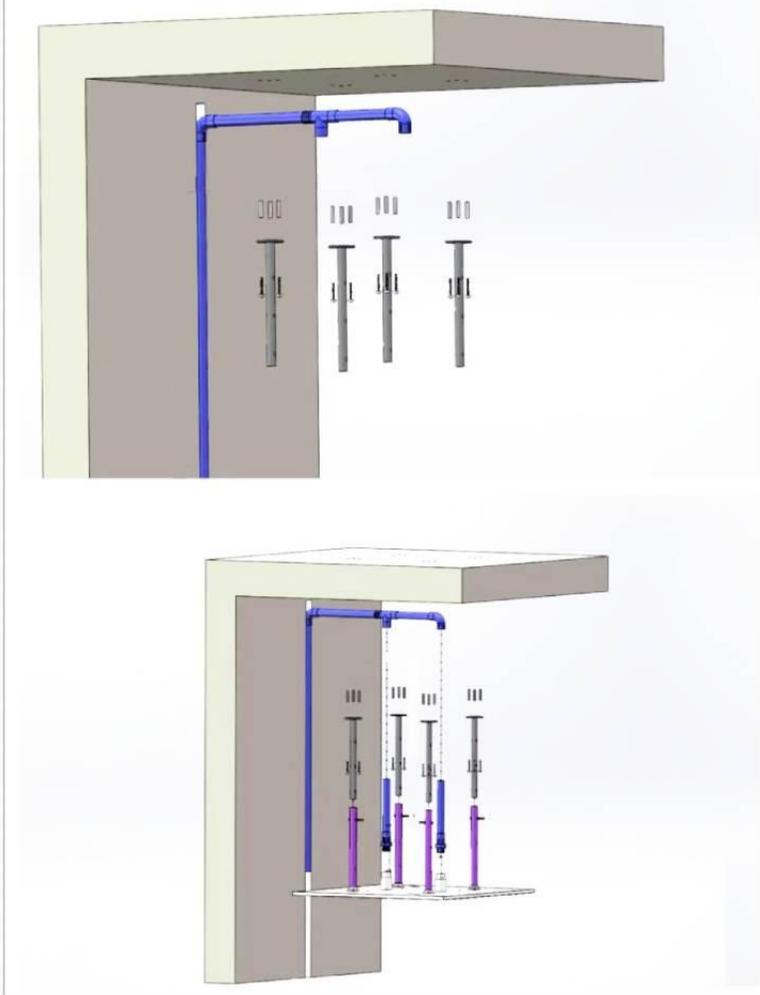


8

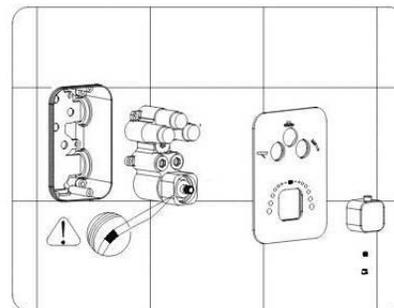

After finish tile wall, remove the clear cover for valve body and then put on face plate as picture.

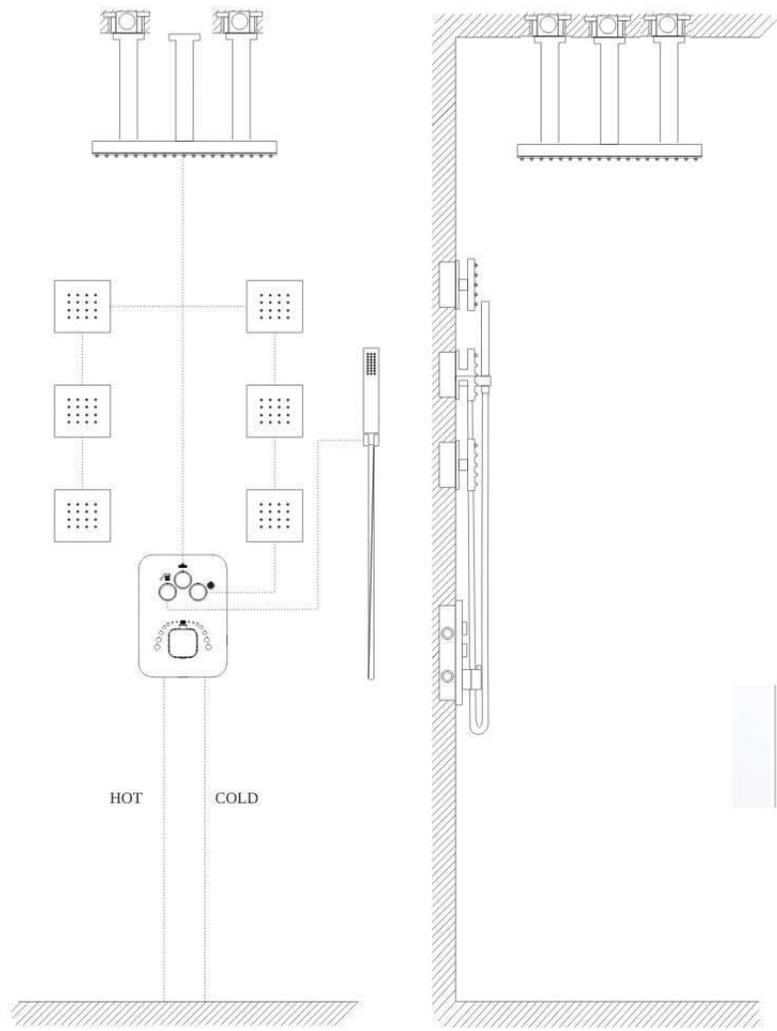

◆ Install the massage shower

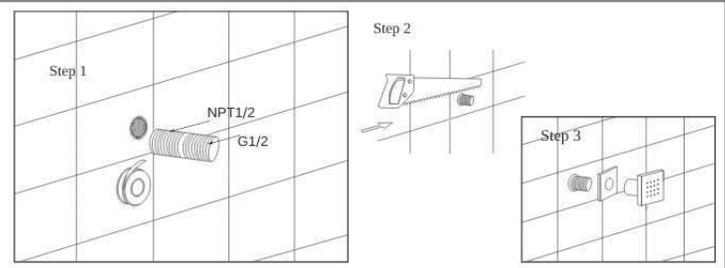

Step 1, Wrap the tooth tube NPT1/2 with teflon tape and screw into the wall
 Step 2, Cut off excess part with a saw
 Step 3, Cover the decoration cup, then screw the massage shower in

