


# 404-18BB



## INSTALLATION INSTRUCTIONS

### Step 1: Drill Ø9/16" Holes into Glass Door

Determine your desired location for installation and make 2 marks for the location for mounting.. Drill Ø9/16" hole at each of the marks.

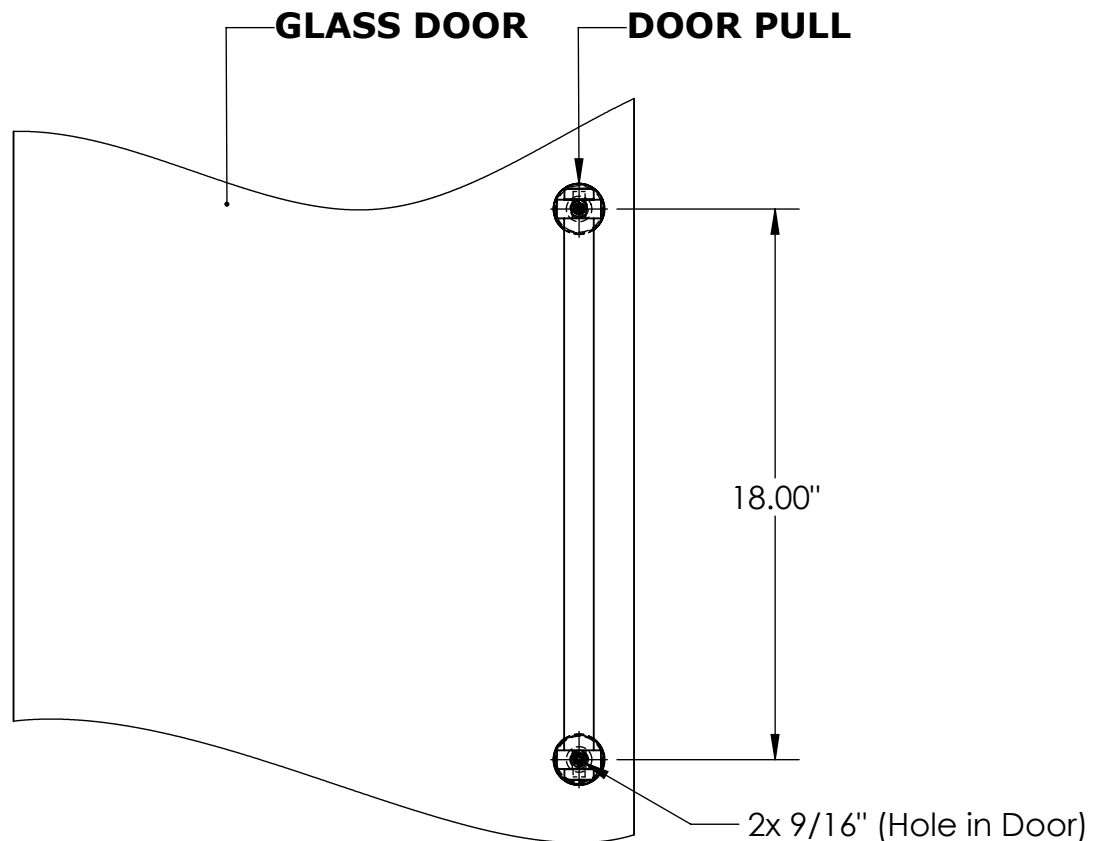

### Step 2: Shower Door Pull Mounting

Mount Door Pull to Door as below.

