


INSTALLATION INSTRUCTIONS

Step 1: Drill $\varnothing 9/16$ " Holes into Glass Door

Determine your desired location for installation and make mark for the location for mounting.. Drill $\varnothing 9/16$ " hole on the mark.

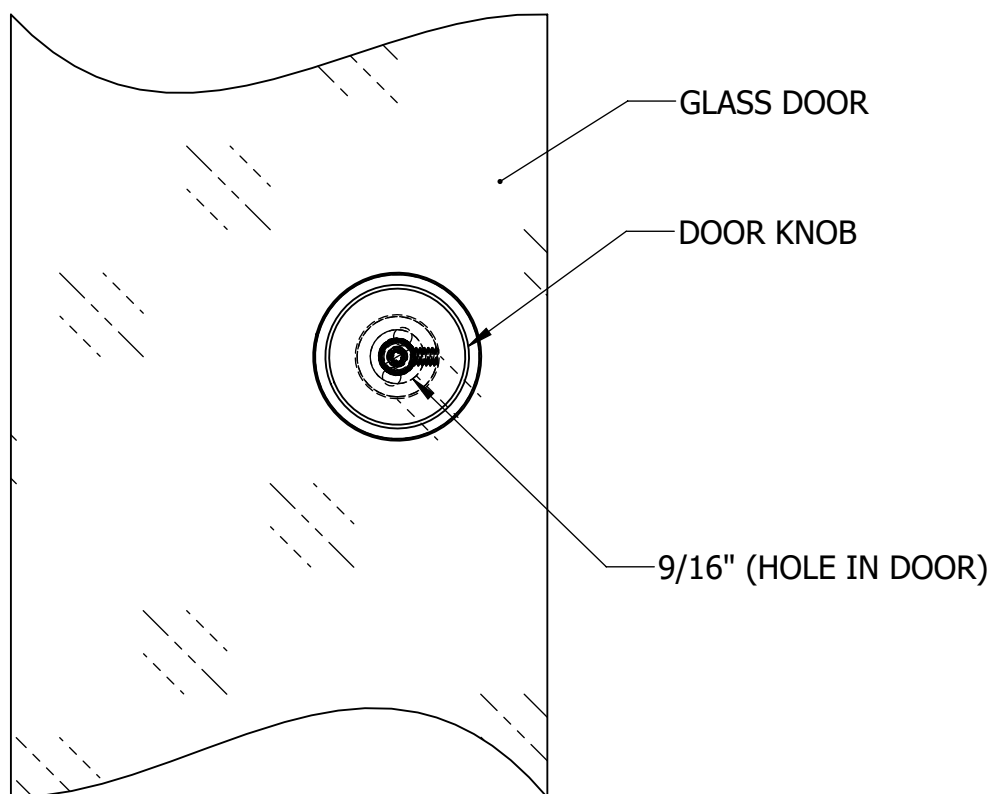

Step 2: Shower Door Knob Mounting

Mount Door Knob to Door as below.

