
FT-21

INSTALLATION INSTRUCTIONS


Step 1: Drill holes in Wall for Backplate Mounting

Determine your desired location for installation and make a mark for the location . Make 2 marks where mounting screws will be placed as shown below. Mark for location of installation.Drill hole at each end of the marks.

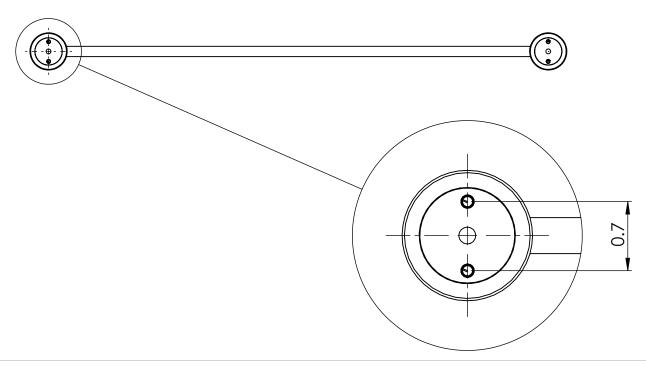

Step 2: Attach Towel Bar to Backplate

Mount Backplate to desired location and screw them in placed. Then insert Tissue Holder into Backplate and tighten with Set Screw provided.

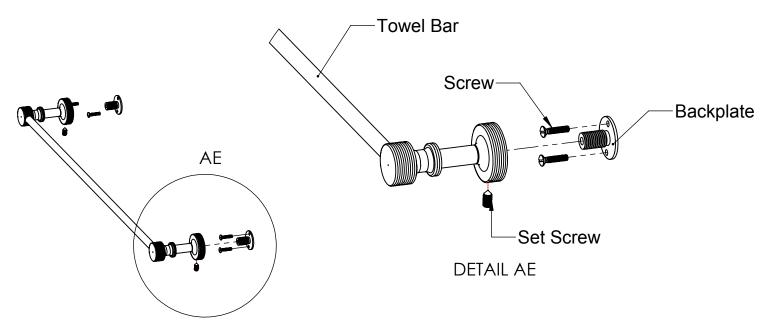

No portion of this document or any artwork contained herein should reproduced in any way without the written conset of ALLIED BRASS INC.