


PahaQue Wilderness, Inc Little Guy ScreenRoom™ SETUP INSTRUCTIONS




How to set up your Little Guy ScreenRoom by PahaQue Wilderness

- **SET-UP**----Your tent can be easily set-up in 5 minutes or less by two people, if you follow the basic sequence detailed below. If time allows, we would recommend that you read through these instructions in their entirety and do a practice set-up at home before taking the tent into the wilderness. Then you can be sure all components are present & functional, and proceed through the set-up sequence at a leisurely pace to learn the most efficient techniques.
- **TAKE DOWN** --- For the take down, simply reverse the set-up sequence.
- **LONG TERM STORAGE** --- Your ScreenRoom is more likely to be damaged by mold, mildew or bacteria during storage than by elements while set up and in use. Make sure that all food or other organic material is removed and that your tent is thoroughly dry before packing into the stuff bag. If you have to pack up and leave the campsite while your tent is damp, set it up later at home & allow it to dry thoroughly for long-term storage.
- **ALUMINUM POLES** --- Take care in handling the poles during set-up and take down when they are most vulnerable to accidental damage. The poles, especially the long "arch poles", will take a slight bend or "set" after use. This is normal and does not impair their function. **Never** use the poles for anything other than to support the tent.

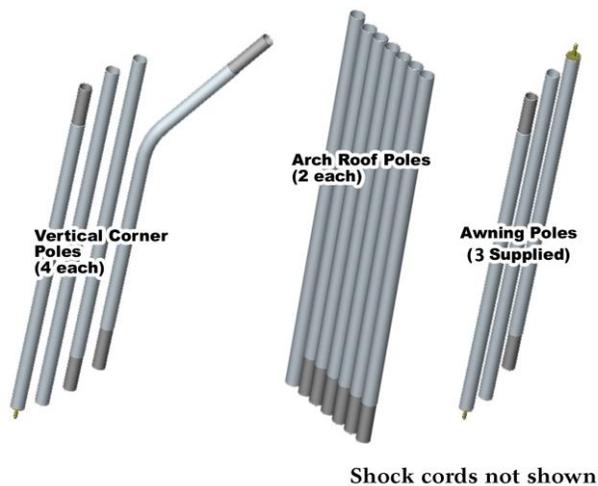

To set up the tent body:

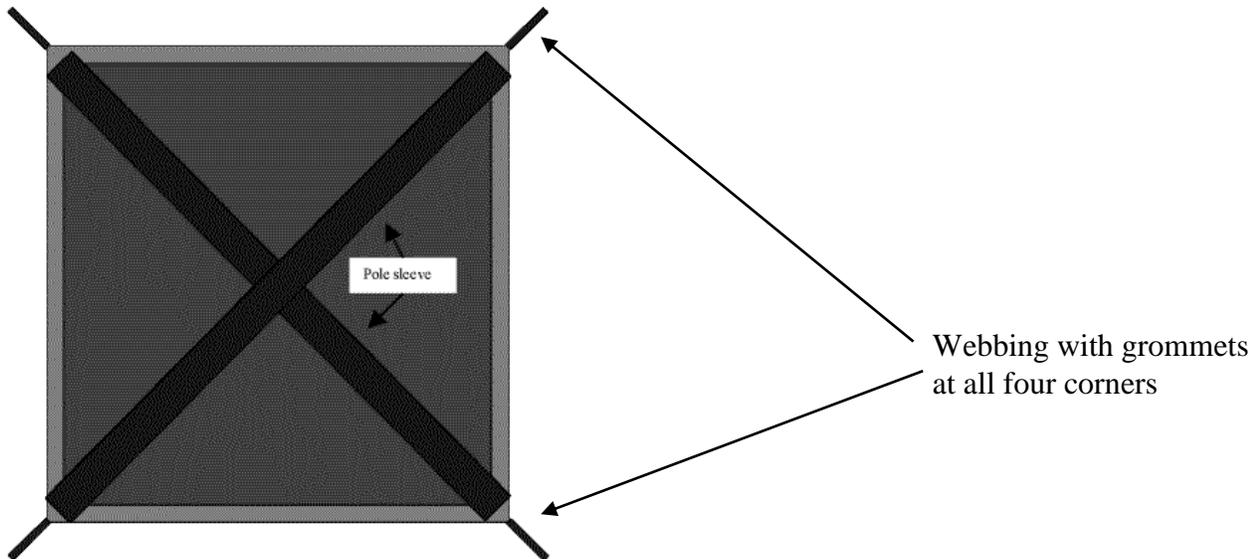

1. Unpack the tent & lay it out with the teal green top facing up on a level site on the ground.
2. Locate the lower corner webbing with the grommets and stretch the four corners so the tent lays square on the ground.
3. Unfold and assemble the 8 poles. Be sure sections are fully engaged. This is very important.
4. Locate the 2 mesh pole sleeves sewn into the roof. The sleeves cross at the center of the roof.
5. Insert the 2 long "arch" poles through the continuous pole sleeves.
6. With the tent remaining on the ground, engage the elbow-end of the vertical corner poles into the ends of the "arch" poles at 4 corners. Be sure sections are fully engaged.
7. With 2-people, simultaneously lift any 2 adjacent corner poles & seat pole tips into floor corner grommets, use inside grommets. Repeat this at the other 2 corners.
8. Once the tent is erect, it can be repositioned & the corners staked out to smooth out the wrinkles.
9. The 3 awning poles are used for the awning flap that extends over the roof of trailer. Additional Awning Pole Kits and be purchased at www.teardropshope.com for the remaining awning flaps.

NOTE: Download additional copies of these instructions at www.pahaque.com

***Avoid prolonged exposure to the sun! UV damage is considered normal wear and tear, and is not covered by your lifetime warranty.**


Attaching the Little Guy ScreenRoom to your Trailer:

NOTE: Beginning in 2013, Little Guy is installing a gutter rail above and below the trailer door (see photo at right), for use in attaching the ScreenRoom to the Trailer. If you have an older model Little Guy trailer, you will need to purchase LGSR10A Mounting Kit in order for your ScreenRoom to attach to your trailer. You can call us toll-free at 888.700.TENT (8368) or visit www.pahaquecustom.com for further information.



Gutter Rail installed above and below trailer door

On the latest version of the Little Guy ScreenRoom, there have been a number of improvements, such as the use of a separating door collar which simplifies attachment of the ScreenRoom to your trailer, and provides a very strong connection.

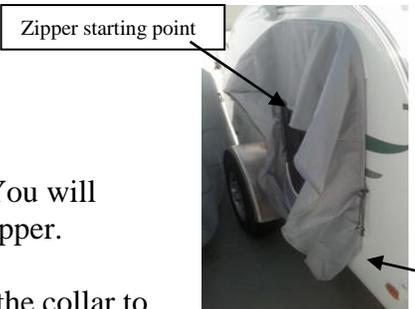

Steps for attaching the ScreenRoom to the Trailer:

1. Locate the door collar sleeve that is included with your ScreenRoom. You will notice that one edge of the collar has two drawstrings, the other has a zipper.
2. Start by slightly tightening both drawstrings. This will make attaching the collar to the door gutter mount a bit easier.
3. Place the door collar onto the trailer by placing the drawstring edge into the gutter around the trailer door perimeter. *ALSO, make sure the zipper starting point is positioned at the top. This will position the drawstrings on either side of the door, NOT at the top and bottom.*
4. Once the collar is properly positioned, tighten both drawstrings until the collar is securely in place in the gutter around the door.
5. Now you can slide your ScreenRoom next to the trailer, and position it so that the door opening on the tent body correctly aligns with the trailer door and tent collar.
6. From the inside, use the zipper to attach the tent body to the collar connector.
7. That's it! Your Little Guy ScreenRoom by PahaQue is now securely attached to your Little Guy trailer.

Collar installed on trailer gutter rail. Note drawstrings are on both sides.

**You can also view a video of this setup procedure by visiting the PahaQue YouTube channel at www.youtube.com/PahaQueCamping*