


PADHOLDER PRO SERIES AIR

APPLE IPAD AIR • APPLE IPAD AIR 2

STEP 1

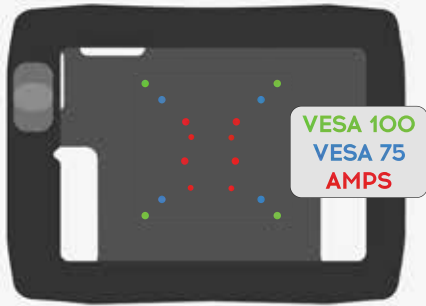

Determine which mounting pattern you are going to use with your mount. For VESA mounting use the tapered screws, installing them through the front of the back plate facing outward. If you're using the AMPS pattern, use the pan-head screws to install the mount on the back of the holder

STEP 2

If you are not using a case with your holder, skip to step 4.

To change the spacers:

- Remove the 4 bolts from the front of the faceplate.
- Loosen the 2 bolts on the back of the lock (DO NOT REMOVE THE LOCK). (Fig. 2A)
- Remove all of the spacers from the front and back plates.
- Select the set of spacers that is slightly thicker than the case you wish to use with your iPad.
- Install the 4 corner spacers on the backplate.
- Loosely install the 5 spacers that go on to the screws in the slotted holes of the backplate. (Fig. 2B)

(Fig. 2A)



(Fig. 2B) 5 Slotted Holes

