

SFR XJ TRANSMISSION MOUNT INSTALLATION GUIDE



Our new version 2.0 transmission mounts replace both offset and centered Jeep Cherokee transmission mounts. To change from one to the other simply remove the 1/2" cross bolt and rotate the upper mount section 180 degrees as shown. The lower half should always be mounted to the crossmember with the taller side forward.

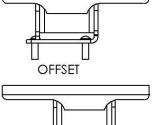


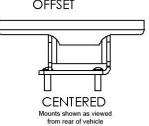


DO NOT OVERTORQUE MOUNTING STUDS.


The 4 mount to crossmember studs should be torqued to 18ft.lbs. Overtorquing will void warranty. Cross bolt torque 80ft.lbs.

SFR XJ TRANSMISSION MOUNT INSTALLATION GUIDE

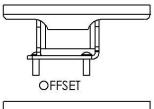

Our new version 2.0 transmission mounts replace both offset and centered Jeep Cherokee transmission mounts. To change from one to the other simply remove the 1/2" cross bolt and rotate the upper mount section 180 degrees as shown. The lower half should always be mounted to the crossmember with the taller side forward.

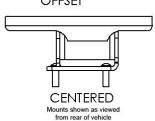


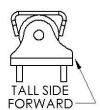


DO NOT OVERTORQUE MOUNTING STUDS.

The 4 mount to crossmember studs should be torqued to 18ft.lbs. Overtorquing will void warranty. Cross bolt torque 80ft.lbs.

SFR XJ TRANSMISSION MOUNT INSTALLATION GUIDE



Our new version 2.0 transmission mounts replace both offset and centered Jeep Cherokee transmission mounts. To change from one to the other simply remove the 1/2" cross bolt and rotate the upper mount section 180 degrees as shown. The lower half should always be mounted to the crossmember with the taller side forward.





DO NOT OVERTORQUE MOUNTING STUDS.

The 4 mount to crossmember studs should be torqued to 18ft.lbs. Overtorquing will void warranty. Cross bolt torque 80ft.lbs.