

# ASSEMBLY INSTRUCTIONS:

Product Code : EM300

Product Name: EM300 Mesh Back Operator Chair

## TIME REQUIRED:

10 minutes

## TOOLS REQUIRED:

Screwdriver, Electric Drill, Pencil, Measuring tape/Ruler

\*Tools are not included.

## SKILL REQUIRED:

Easy ●●○○○ Hard

The Assembly Skill Rating is a 5-point system that shows the degree of effort needed in assembling a specific product. With 1 being easy for the average person and 5 requiring an expert. For most products, two persons are recommended.

### NOTE

- As this is a commercial product, some intermediate skills may be required.
  - No pre-drill holes or markings are provided on our table or desk tops.
  - Please check you have all hardware before assembling.
- If you are missing any hardware, please contact your Rapidline reseller. Please ensure you have the name of the item, required hardware part and quantity.
  - Please retain your receipt as proof of purchase to validate your warranty.
- Assemble on a clean, flat, smooth surface such as a rug or carpet to avoid parts from being scratched.
  - Remove all wrapping materials, including staples and packing straps before you start to assemble
    - Keep all hardware parts out of reach of children.

### CAUTION

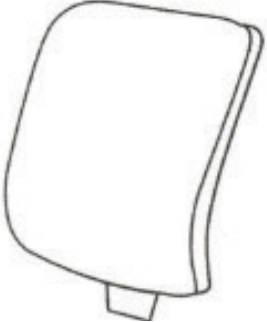
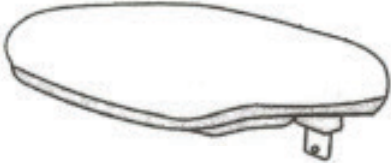




- Heavy product. Do not attempt to lift or move without help
- Do not tighten screws and bolts until completely assembled.
- Do not use this product unless all bolts and screws are firmly secured and tightened.

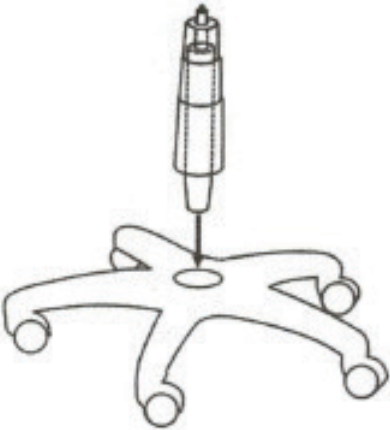
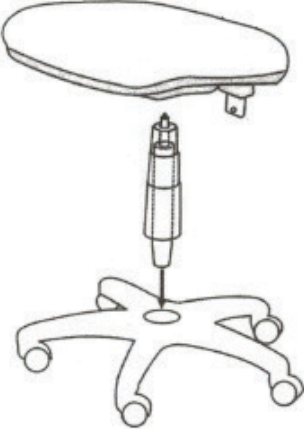

### WARNING

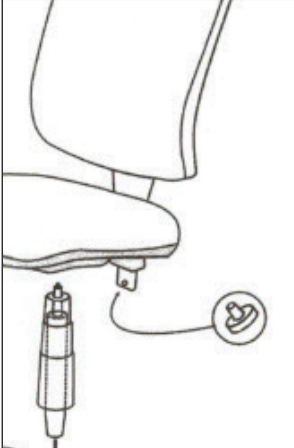
- If parts are missing, broken, damaged or worn stop using the product until all repairs are made.
  - Failure to follow these warnings could result in serious injury.

The logo for Rapidline, featuring the word "rapidline" in a lowercase, sans-serif font. The "i" in "rapid" has a small orange dot above it. The logo is set against a light blue rounded rectangular background.

# EM300

			
<p>A. Back</p>	<p>B. Seat</p>	<p>C. Castors</p>	<p>D. Plastic Lug</p>
			
<p>E. Bellows</p>	<p>F. Gas lift</p>		

		
<p>1.</p> <ul style="list-style-type: none"> <li>• Insert gas lift into the base with castors</li> <li>• Place the bellows over the gas lift and press down</li> </ul>	<p>2.</p> <ul style="list-style-type: none"> <li>• Fit the seat on top of the gas lift</li> </ul>	<p>3.</p> <ul style="list-style-type: none"> <li>• Slide the bar of the back into the insert slot of the mechanism at the back of seat, but first pull out the plastic lug then slide the bar in</li> </ul>

	<p>4.</p> <ul style="list-style-type: none"> <li>• Place the plastic lug back into place</li> <li>• Tighten the knob once reached the desired height</li> </ul>
--	---

