

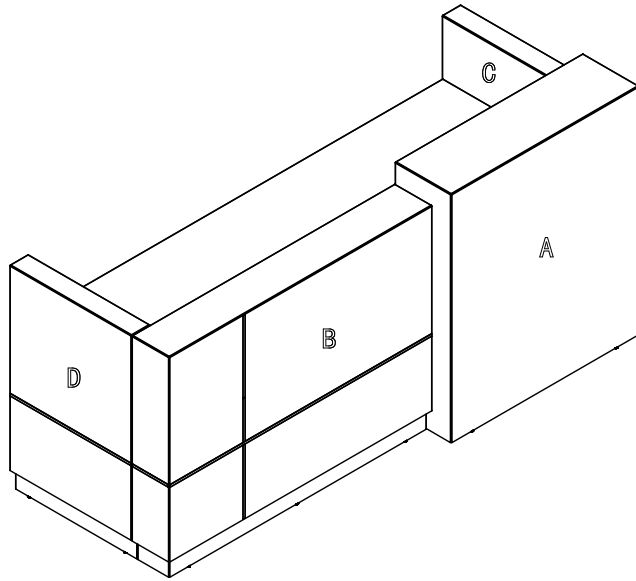
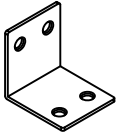



Assembly Instructions


MODEL NO:SEMPRE NO/NW SEMPRE NO/BL




Bracket	08
	1
8PCS	
Wood Screw 4x16	
	2
32PCS	
Wood Screw 4x20	
	3
12PCS	

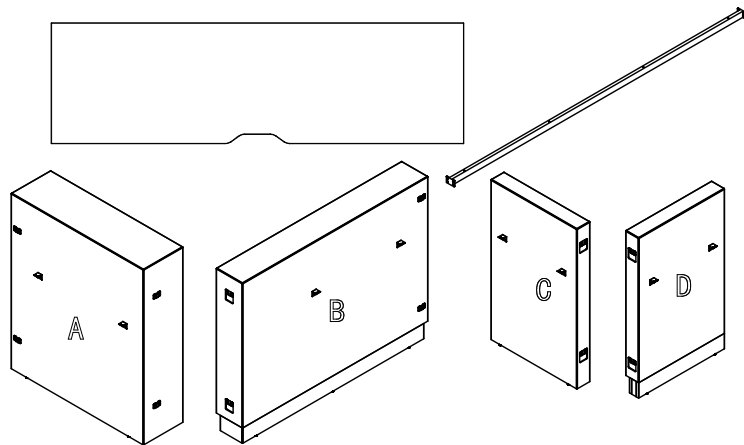


STEP1

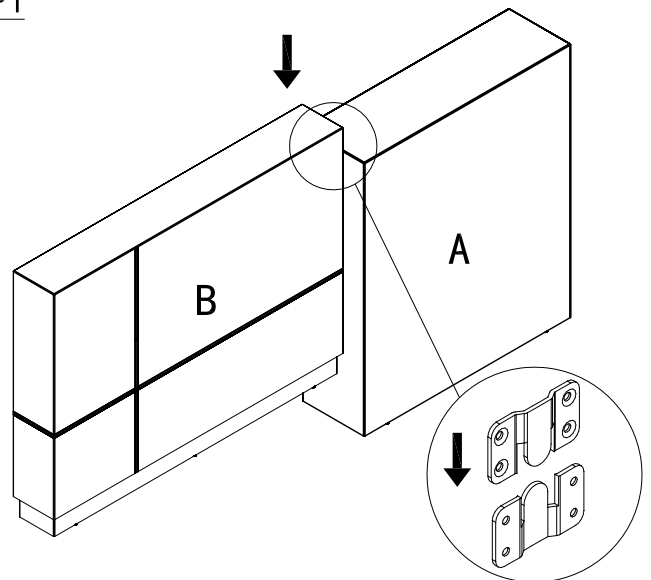

STEP2

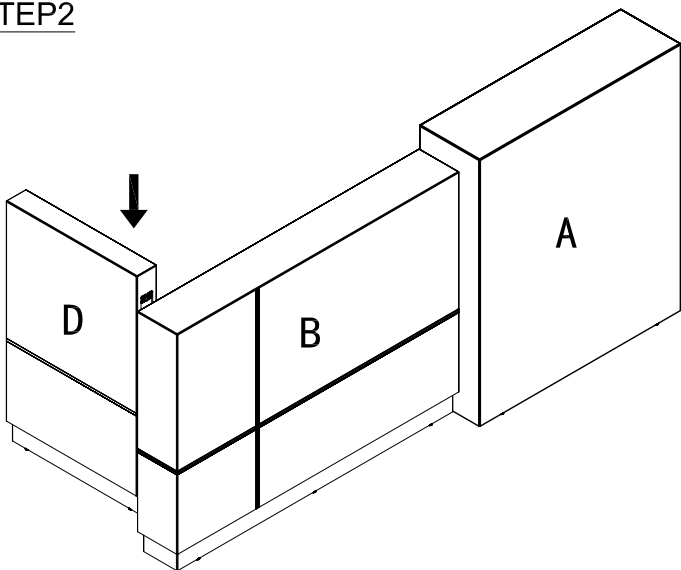


STEP3

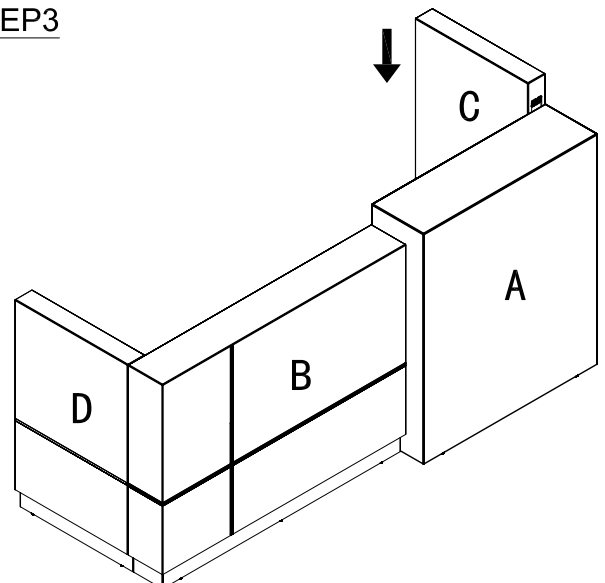

IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




Assembly Instructions

MODEL NO:SEMPRE NO/NW SEMPRE NO/BL

STEP4

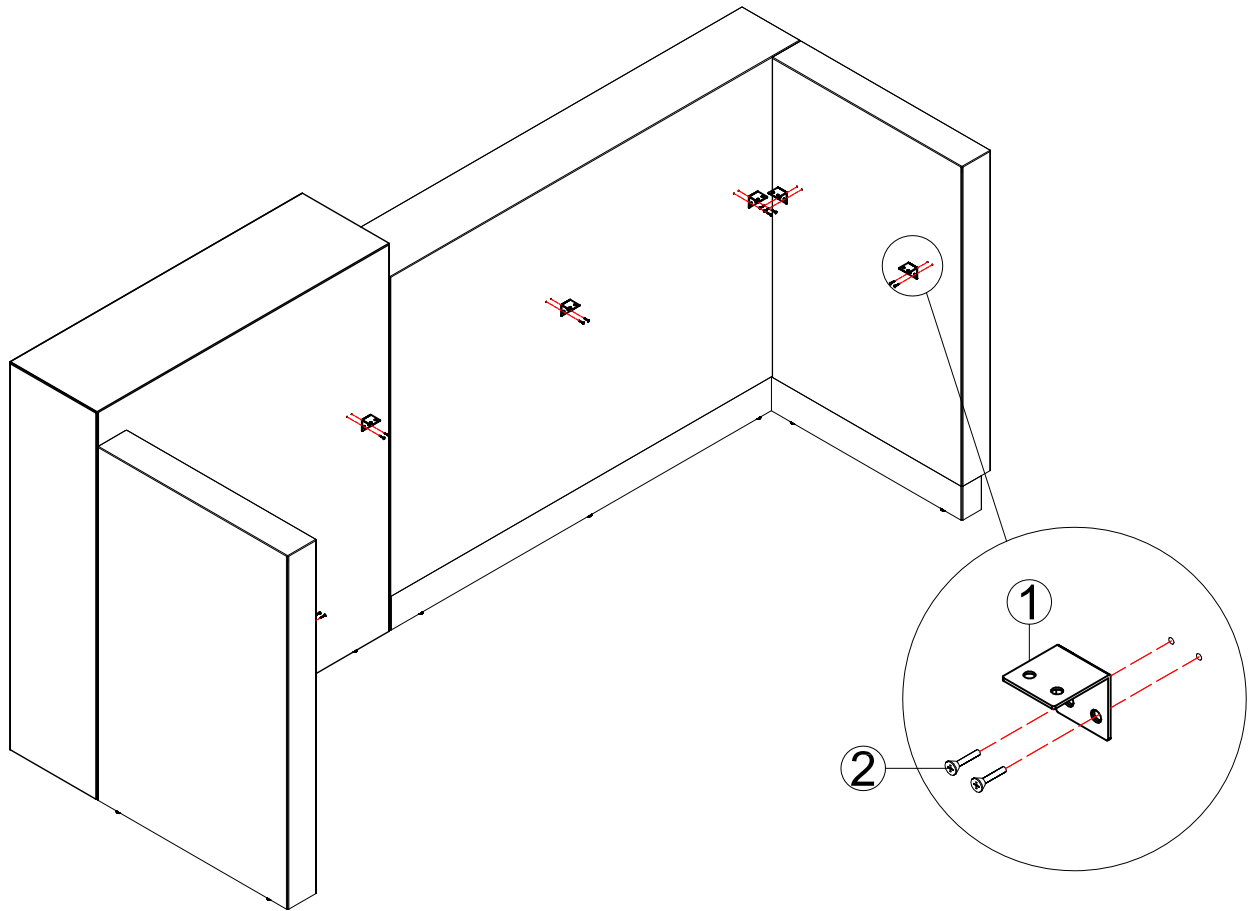

STEP5

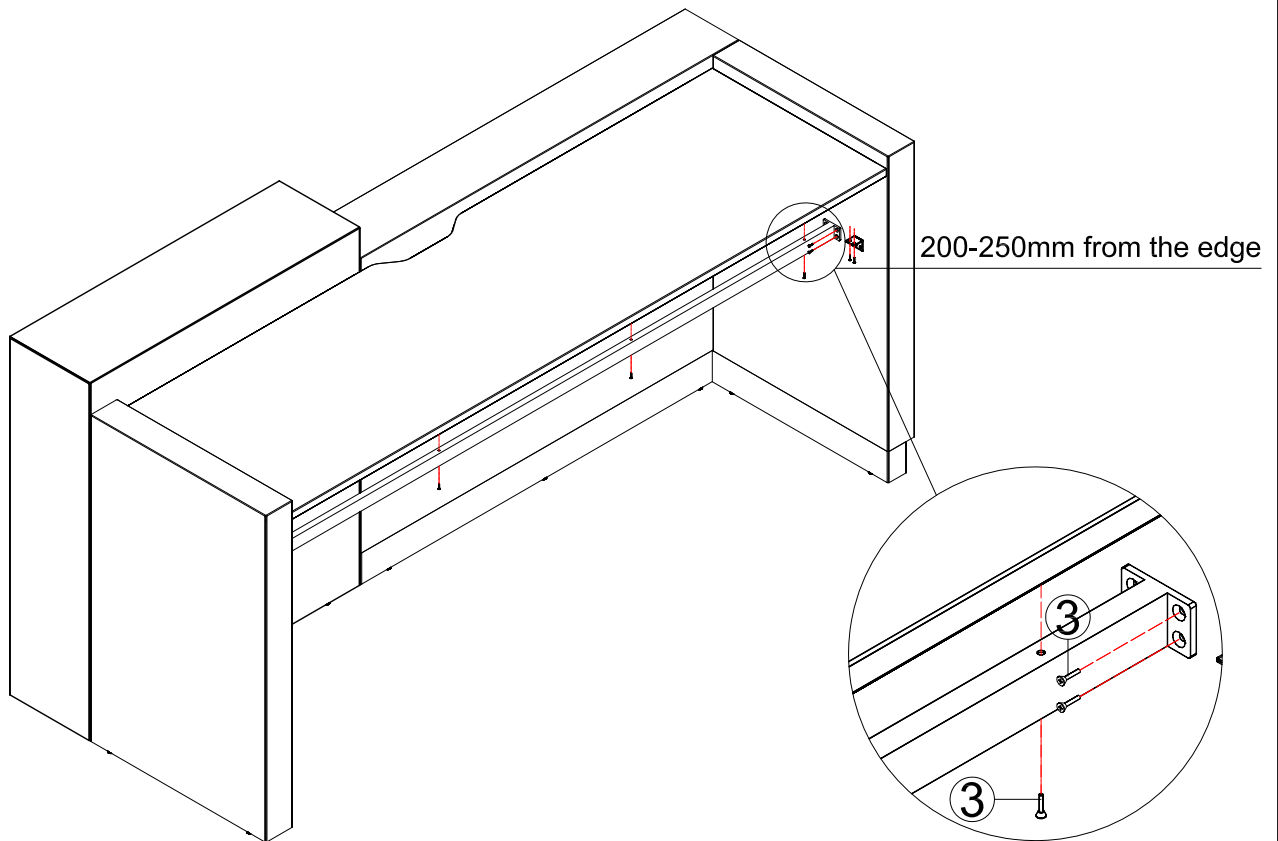

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

