


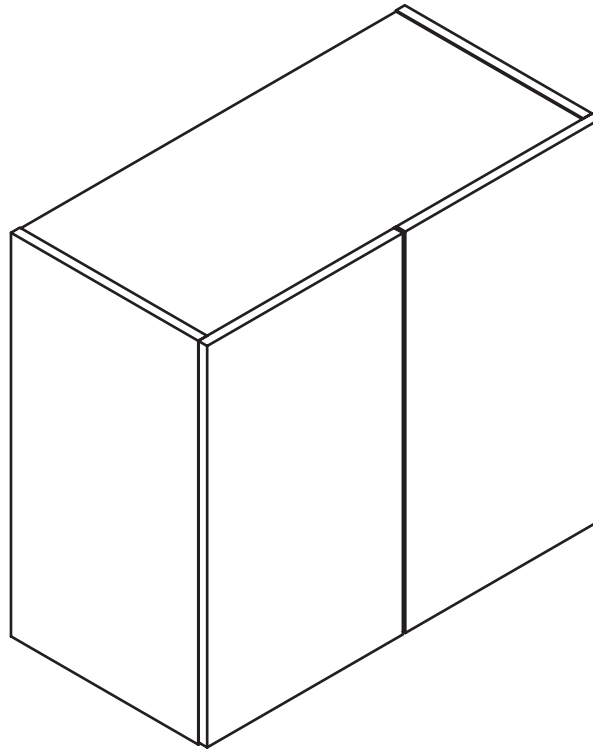

Rhodes Modular Shelving (50-MSCUBB8070)

Assembly Instructions

Rhodes Modular Shelving (50-MSCUBB8070)

Components List



22 x 6x35mm
Cam Bolt

C1



38 x 4x16mm
Screw

S1



4 x 3.5x25mm
Screw

S2



22 x 8x30mm
Dowel Pin

D1



22 x 5/8"
Cam Cover

C2

Pre Installed Parts:



4pcs Hinge
Body

G4



4pcs Hinge
Stand

G1




8pcs Threaded
Dowel Pin

P1



Cam

C5



2pcs Lock

L


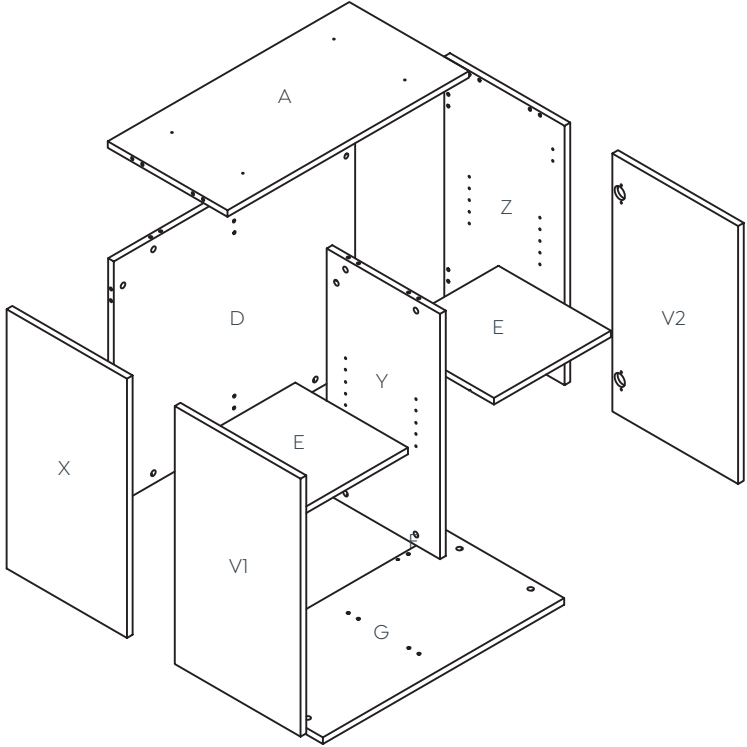


Diagram illustrating the assembly of the Rhodes Modular Shelving unit, showing the arrangement of panels (A, D, E, G, X, Y, Z, V1, V2) and the placement of various components like hinges, locks, and dowel pins.


STEP 1:

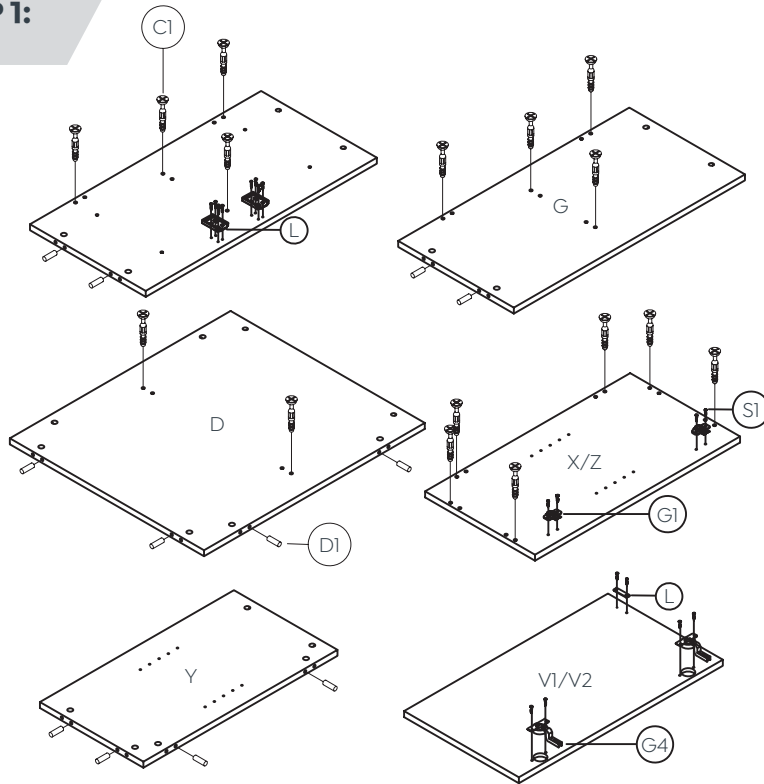

Preparation for panels A, G, X, Z, D, Y, V1 and V2.

1. Insert cam bolts C1 into panels A, G, D, X and Z as illustrated above.
2. Insert dowel pins D1 into panels A, G, D and Y as illustrated above.
3. Fix hinge stands G1 to panels X, Z with screws S1 as illustrated above.
4. Fix hinge body G4 to panels V1, V2 with screws S1 as illustrated above.
5. Locate the trim ring on lock and set aside. Insert cylinder of lock L through hole in A and secure with S1 screws. Add trim ring to lock on outside of V1, V2.

STEP 2:

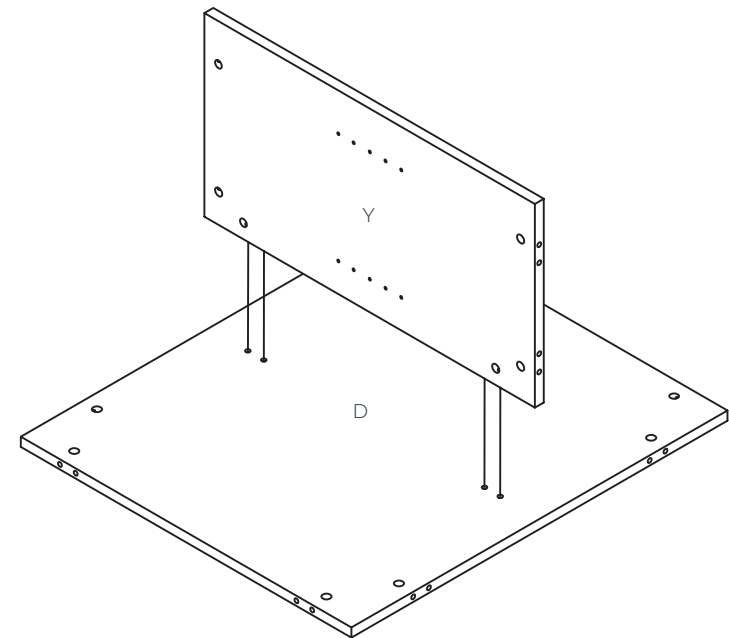


Panel Y and D assembly.

1. Insert cam bolts C1 and dowel pins D1 on panel Y into cams on panel D and tighten in a clockwise direction as illustrated above.

Rhodes Modular Shelving (50-MSCUBB8070)

Assembly Instructions


STEP 3:

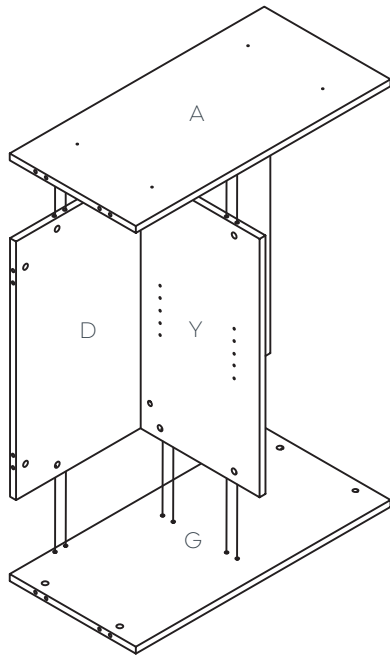

Panel A and G assembly.

1. Insert cam bolts C1 and dowel pins D1 on panel A, G into cams on panel Y, D and tighten in a clockwise direction as illustrated above.


STEP 4:

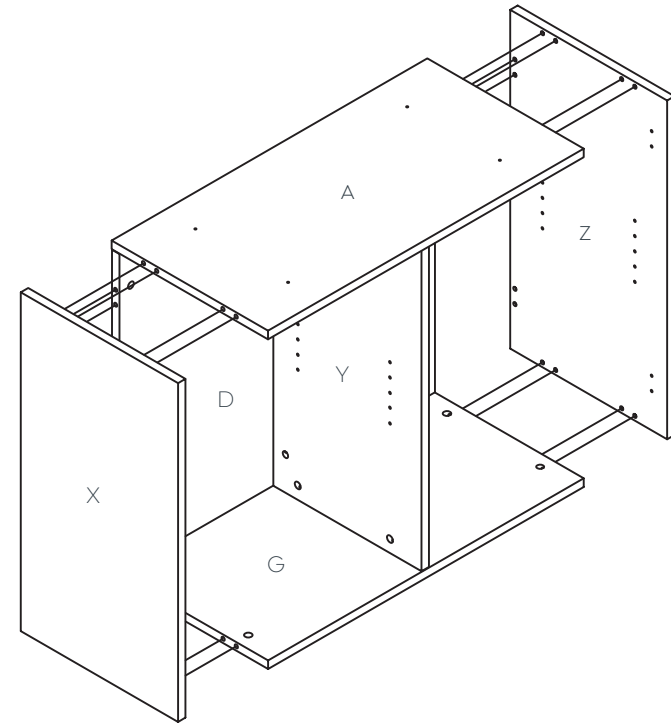

Panels Y and D assembly.

1. Insert cam bolts C1 on panel X and Z into cams on panels A, D, G and tighten in a clockwise direction as illustrated above.

STEP 5:

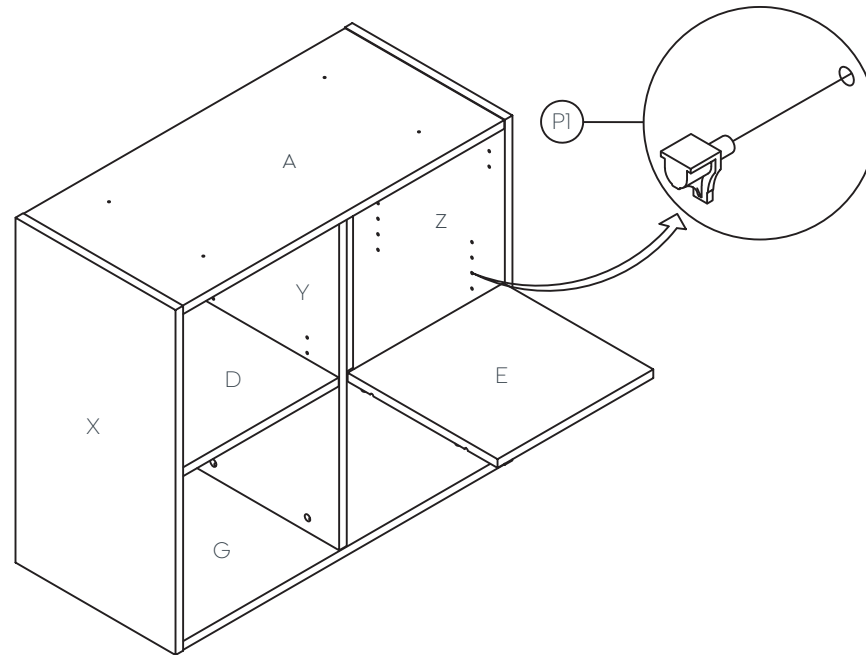





Moveable shelf E assembly.

1. Insert threaded dowel pins P1 into panels X, Y and Z as illustrated above.
2. Put the panel E on the top of threaded dowel pins P1 as illustrated above.

Rhodes Modular Shelving (50-MSCUBB8070)

Assembly Instructions


STEP 6:

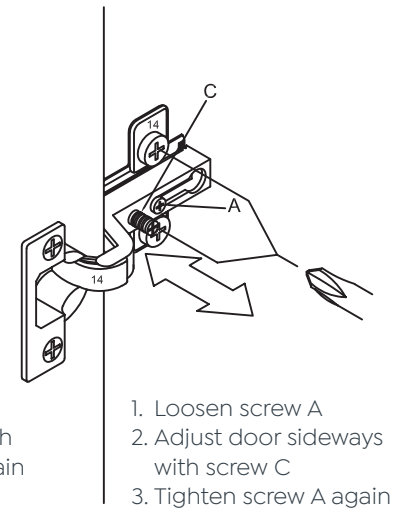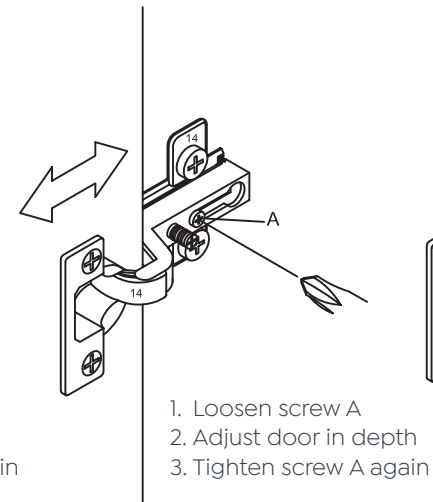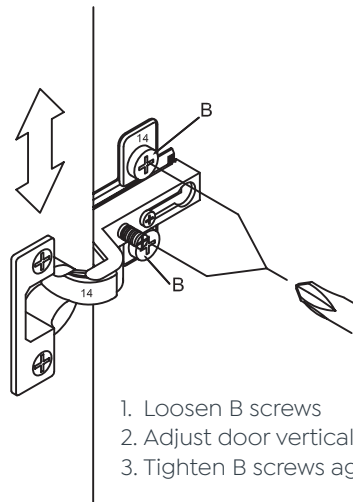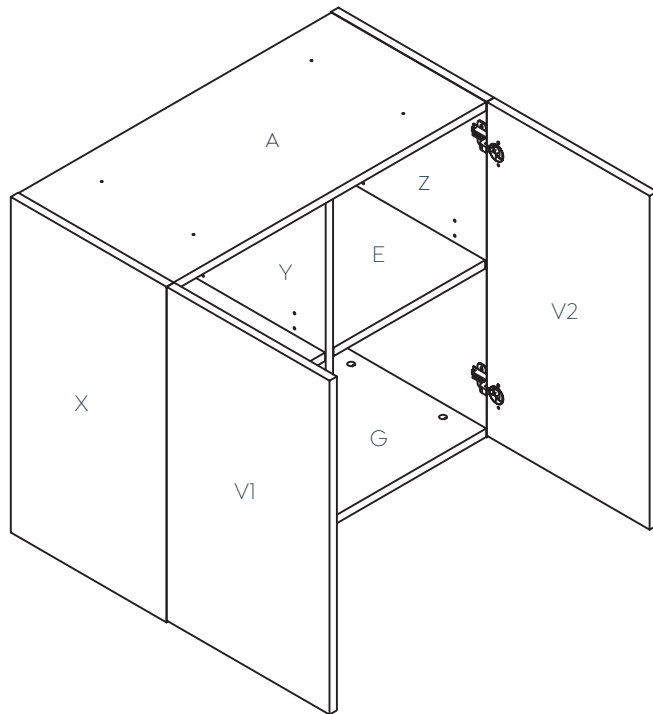

Rhodes Modular Shelving (50-MSCUBB8070)


Assembly Instructions

STEP 7:

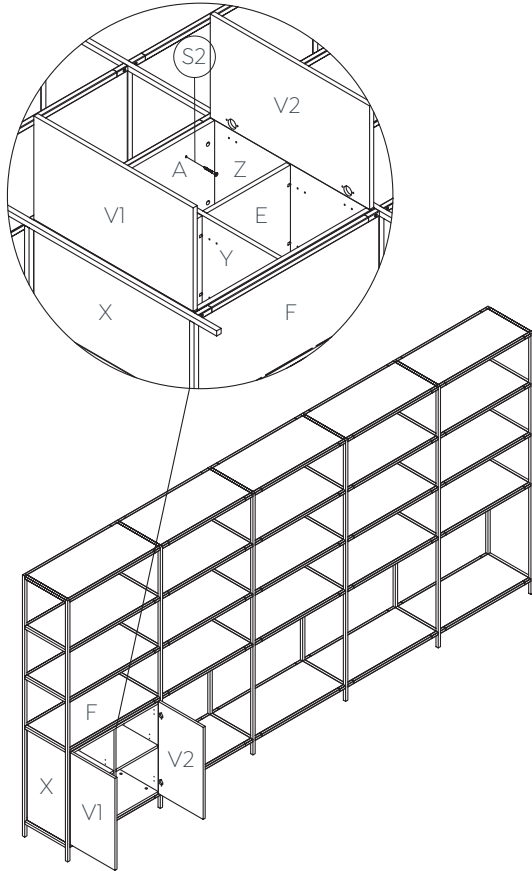

1. Put the cabinet on the shelf.
2. Fix the cabinet on top of shelf using screws S2.

Complete:

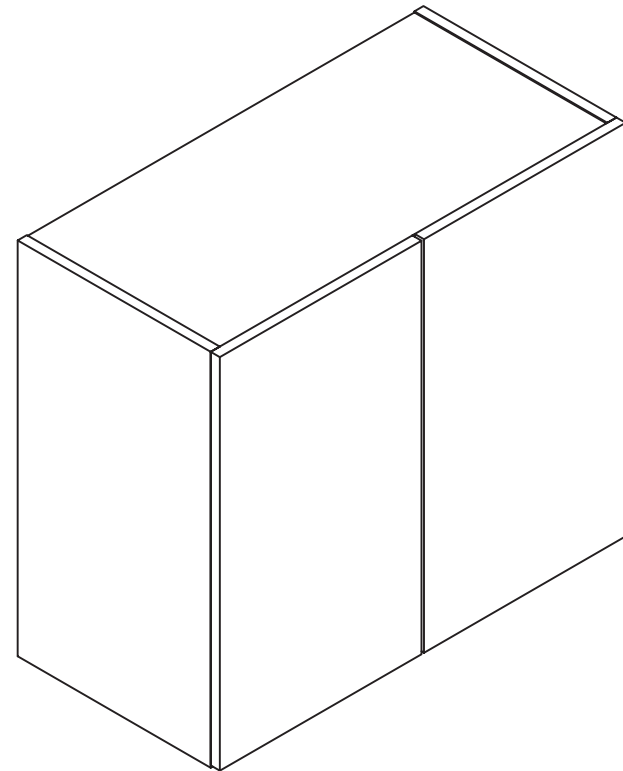

Remove all QC and panel labels and wipe clean using a damp cloth and general household cleaner.

ELITE OFFICE FURNITURE

Western Australia 1300 686 666
hello@eliteofficefurniture.com.au

eliteofficefurniture.com.au