


# ASSEMBLY INSTRUCTIONS

## SPBC16

**rapidline**  
FURNITURE FOR TODAY  
2011-8-25

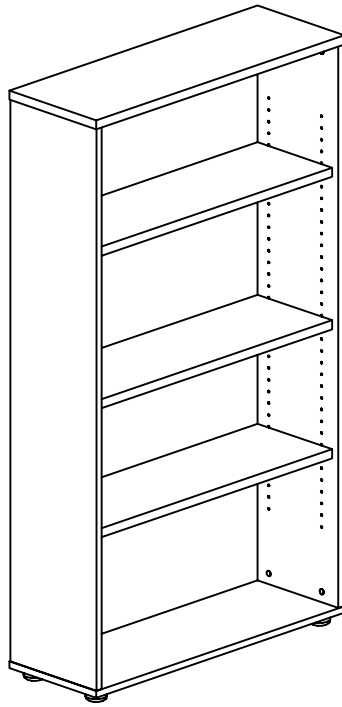

pin 6x35		1	20PCS
CAM		2	20PCS
Cam Cover		3	20PCS
Box Minifix		4	12PCS
CUSHIOA 25Hxφ52		5	4PCS
Screw 4x30		6	4PCS

