


D8 and D9-MST2010 Connections

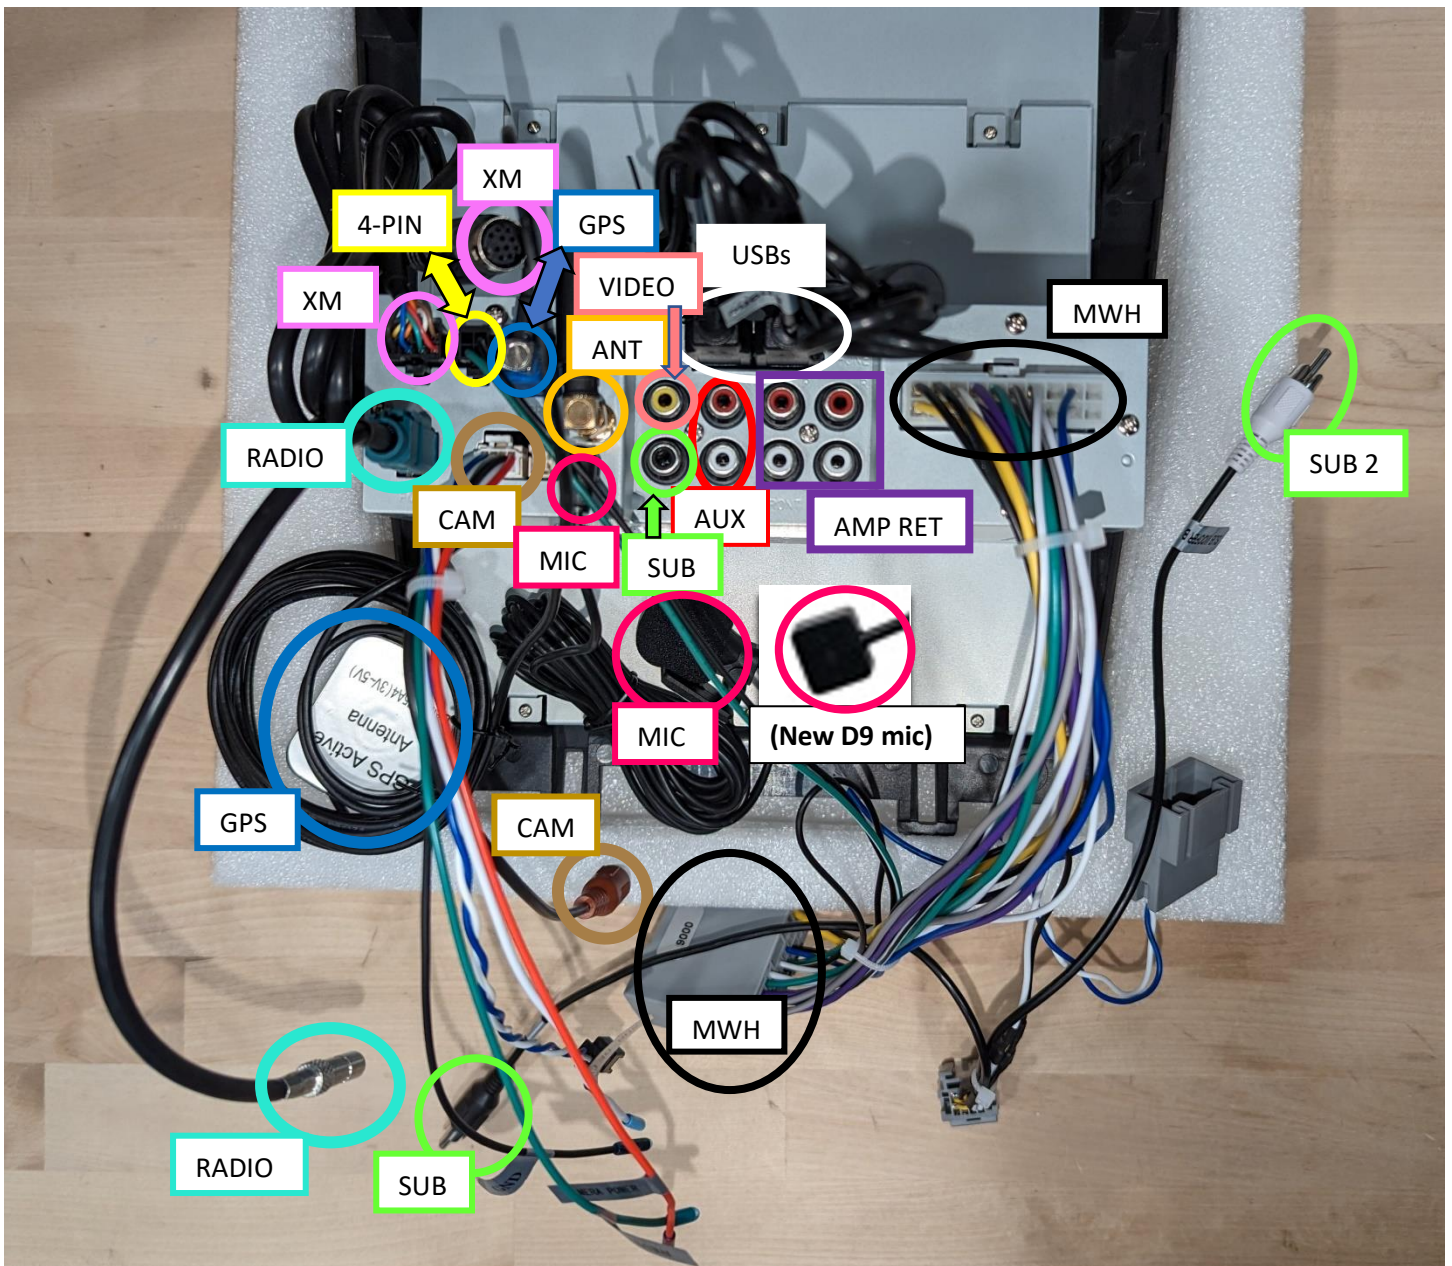

(XM) SiriusXM Adapter Cable: For use only when installing the SiriusXM SXV300 tuner for built-in satellite radio only.

(4-PIN) 4-PIN Plug: Located on the main wire harness (MWH). Plug in here for factory steering wheel control integration.

(USBs): “Phone” and “MDI/CP” USB ports: Plug in the included 3ft USB extension cables as labeled. From this view, “MDI/CP” is on the left, “Phone” is on the right. The “MDI/CP” USB is for wired Apple CarPlay and wired Android Auto (and for firmware updates via USB drive). The “Phone” USB is used for fast charging.

(ANT) Bluetooth/WiFi Antenna (for Bluetooth and wireless CarPlay/Android Auto): Thread BT/WiFi Antenna onto the back of the Dynavin.

(VIDEO) Video Input: Commonly used with a front camera. Yellow RCA on the front camera plugs in here.

D8 and D9-MST2010 Connections

(GPS) GPS Navigation/Clock Antenna: Is magnetic so can be mounted inside the dash on top of anything metal positioned forward in the dash. If reception is not adequate, can be mounted on the inside corner of the windshield or anywhere with good reception. Even if you don't plan on using the GPS navigation, it is necessary to install for the time to display on the Dynavin screen.

(RADIO) AM/FM Radio: Plug in the provided AM/FM radio antenna adapter to the back of the Dynavin then plug in the car's factory radio plug into the other end.

(CAM) Camera RCA Harness: For use with an aftermarket camera. The brown RCA labeled "CAMERA" is plugged into the yellow RCA on the backup camera. [Click here details about the D9 camera harness.](#)

(MIC) Microphone: Must be installed for Bluetooth calling and voice command functionality. Can be mounted on the steering wheel column or A pillar. Test before finishing the installation. Note: The D9 mic style is different from the D8.

(AUX) Factory Auxiliary Integration: If your car is equipped with an auxiliary plug, you will plug in these RCAs from the MWH (main wire harness).

(MWH) Main Wire Harness: The black end plugs into your car's factory plug.

(AMP RET): These red and white RCAs are used with some OEM amplifiers and with aftermarket amps. [Click here for details.](#) These are not used with base models unless an aftermarket amp is installed.

(SUB) Subwoofer: If your car has a factory subwoofer, plug in the black "SUBWOOFER" RCA plug here or the white "SUBWOOFER" RCA plug if the black does not work. For an aftermarket sub, plug in the RCA from the aftermarket sub here. [Click here for details.](#)