

# N7 - MST2010 INSTALLATION GUIDE




1. Pry up on shifter trim to remove.



2. Remove the console trim panel by prying up, starting at the rear of the panel and working forward. Unplug wire harnesses underneath.





3. Use a pry tool to unclip radio trim panel.

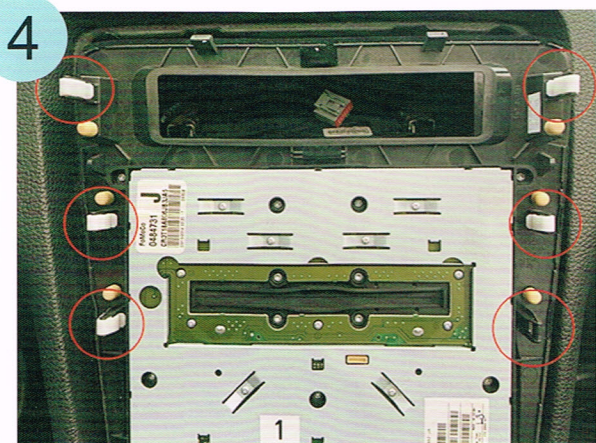


4. Remove the clips from stock radio trim and install them on the new Dynavin.




5. Remove screws, unplug and remove the factory display and radio

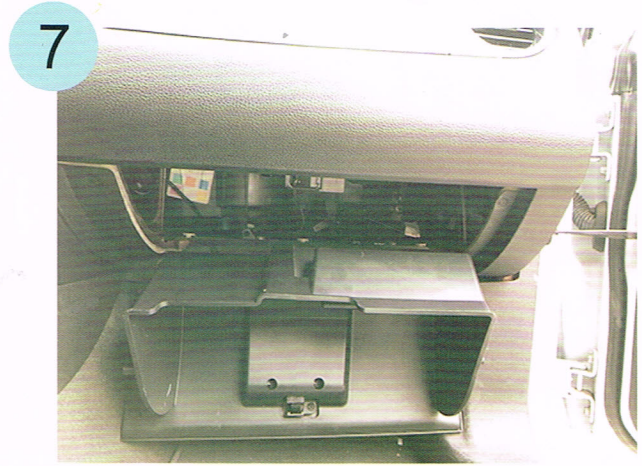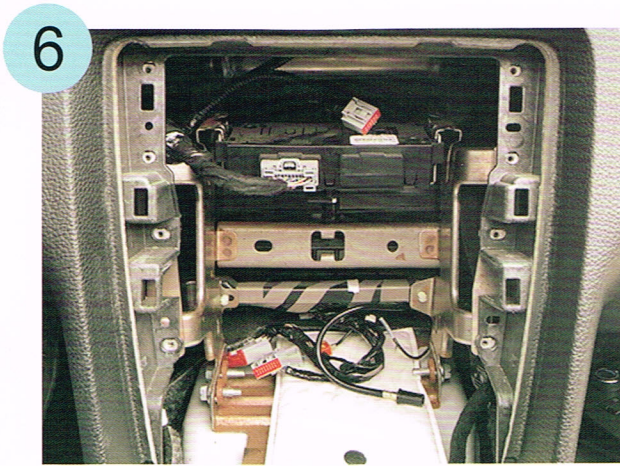

7. Remove the glovebox to access the Sync module above the glovebox area

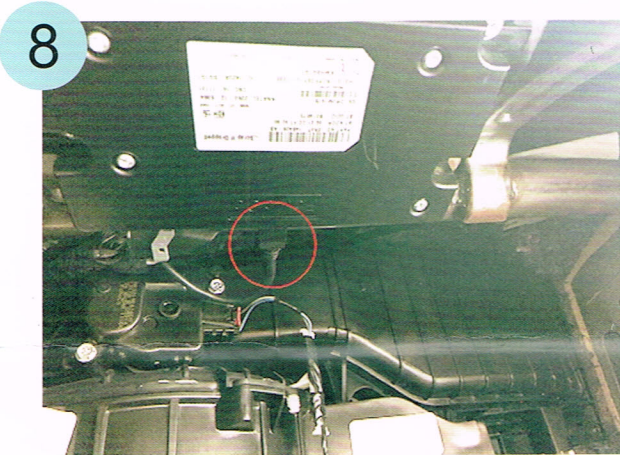


8. Locate the USB connector on the Sync module

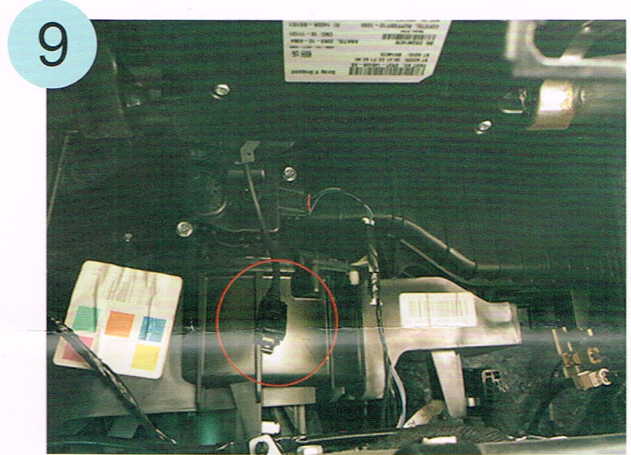

9. Remove the USB cable from Sync module



10. Connect Dynavin USB adaptor cable to the factory USB cable

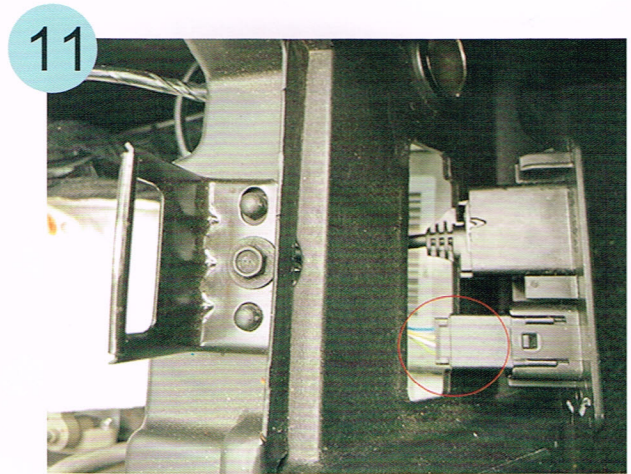

11. Find the AUX input socket from the armrest box