


Wiring Diagram of the Universal Camera to the Dynavin N6

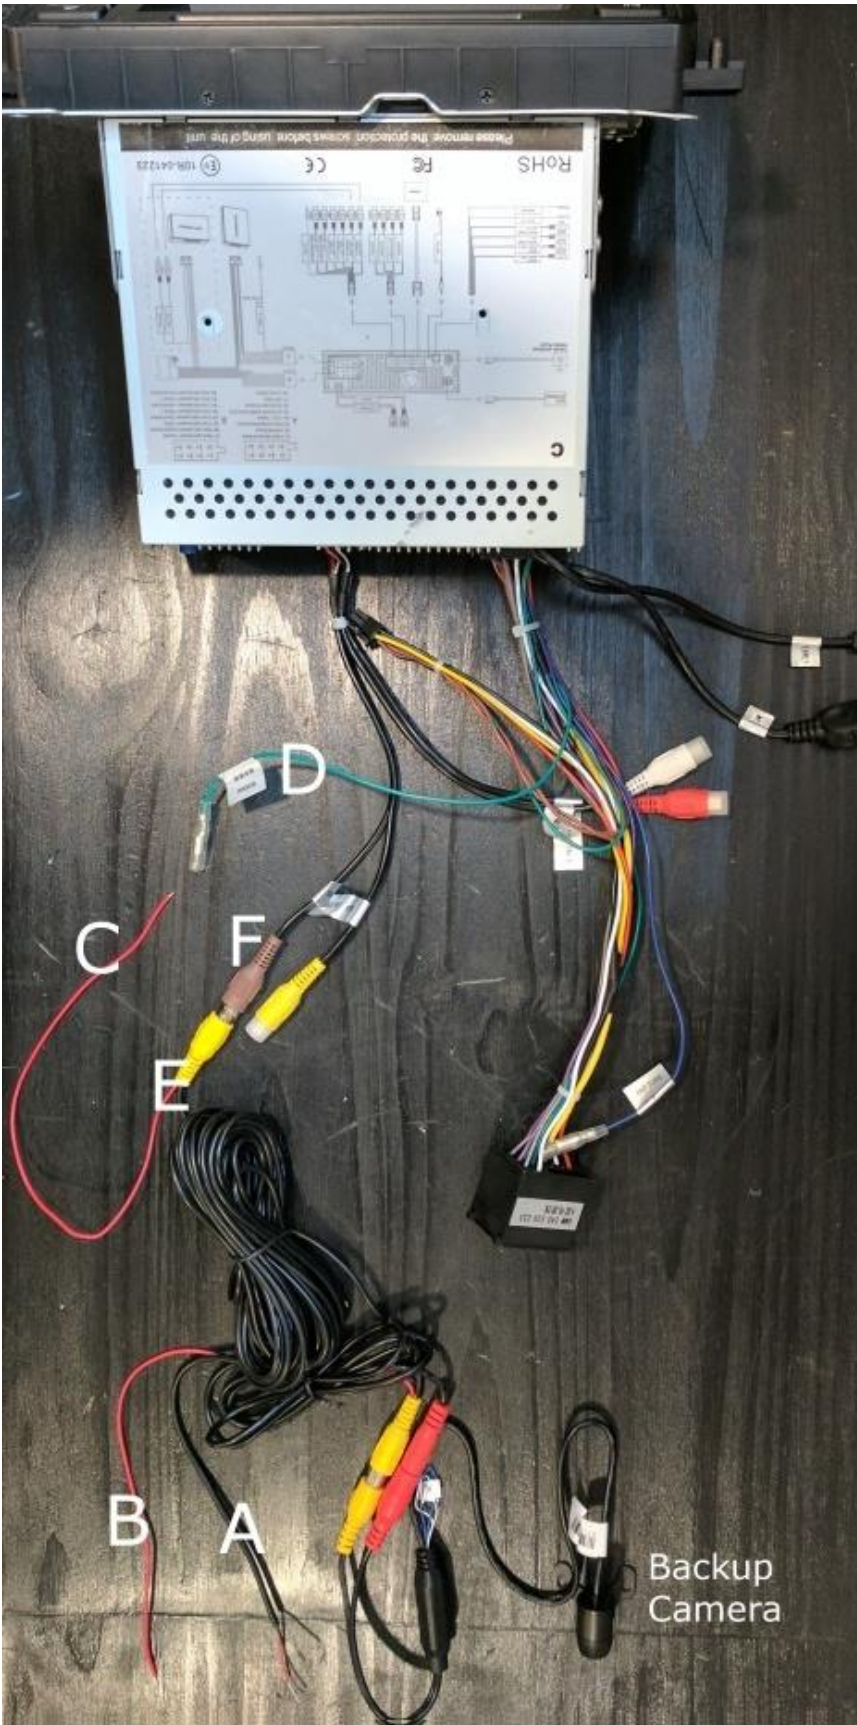

1. **BLACK** wire (A) to ground point on the chassis.
2. **RED** power wire (B) to reverse light circuit in the trunk area.
3. **RED** power wire (C) to **GREEN** "Reverse" trigger wire (D) on the Dynavin wire harness.
4. Connect the **YELLOW** RCA (C) from the camera wire to the **BROWN** RCA labeled "Camera" on one of the three RCA wire harnesses included with the Dynavin. This is your video connection.
5. From the Dynavin's main menu (SRC/MODE), go to "System" and under "Reverse" make sure that "CAM" or "CAM+PDC" is enabled.

The universal camera can be installed as a front and/or reverse camera. Reverse wiring is depicted here.

Most universal cameras will follow the same install instructions.

