



TODDLER BED



A. QTY1

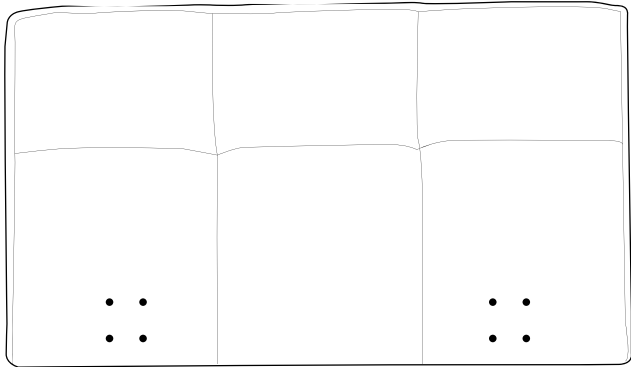


J. QTY3

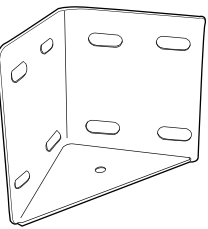

F. QTY2



G. QTY2

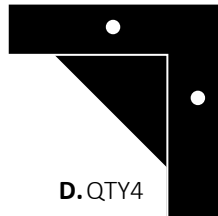

D. QTY4




L. QTY8




K. QTY28



E. QTY2

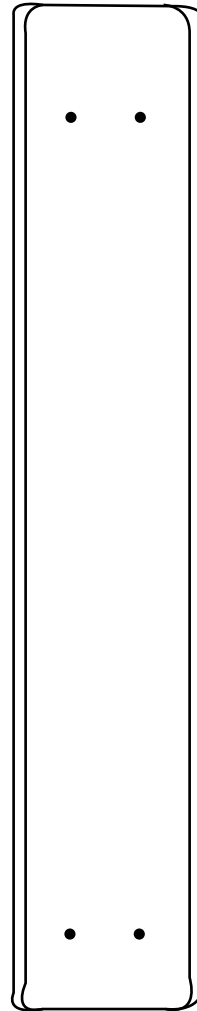


B. QTY1

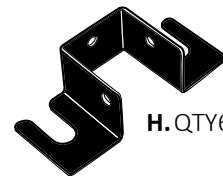

H. QTY6



M. QTY1

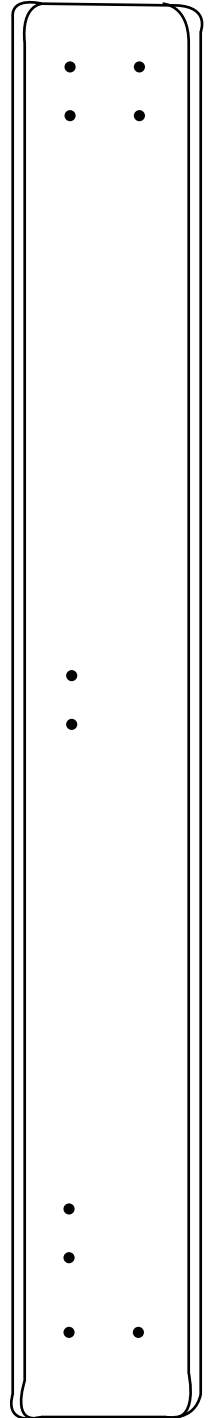

C. QTY2




I. QTY2

BOX CONTENTS



SECOND
STORY
HOME

- | | |
|-------------------------|-------------------------|
| A. HEADBOARD x1 | I. BOTTOM PANELS X2 |
| B. FOOTBOARD x1 | J. WOODEN STABILIZER x3 |
| C. SIDE PANEL x2 | K. ALLEN BOLT 1" x28 |
| D. LEGS x4 | L. ALLEN BOLT 2.25" x8 |
| E. MIDDLE LEG x2 | M. ALLEN WRENCH x1 |
| F. HEADBOARD BRACKET x2 | |
| G. FOOTBOARD BRACKET x2 | |
| H. SUPPORT BRACKET x6 | |

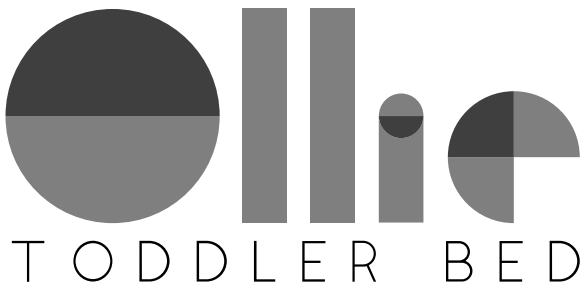

TODDLER BED

WHAT YOU WILL NEED

- B. FOOTBOARD x1
- C. SIDE PANEL x2
- F. HEADBOARD BRACKET x2
- G. FOOTBOARD BRACKET x2
- H. SUPPORT BRACKET x6
- K. ALLEN BOLT 1" x12
- M. ALLEN WRENCH x1

STEP: 01

SEE FIGURE 1


INSTALL HEADBOARD BRACKET AND FOOTBOARD BRACKET ON SIDE PANEL. REPEAT.

STEP: 02


SEE FIGURE 2

INSTALL ALL 6 SUPPORT BRACKETS (H) ON BOTH SIDE PANELS BY USING THE WASHER AND SCREW IN THE PREDRILLED HOLES. DO NOT TIGHTEN. SLIDE BRACKETS AND TIGHTEN SCREWS. .

FIGURE 1



HEADBOARD BRACKET

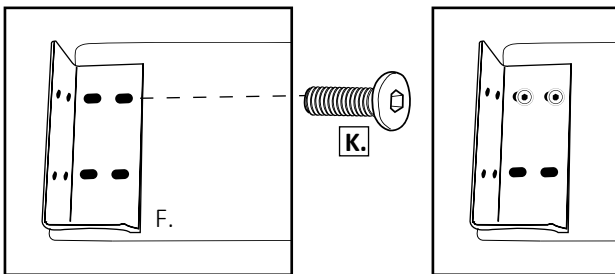

FOOTBOARD BRACKET



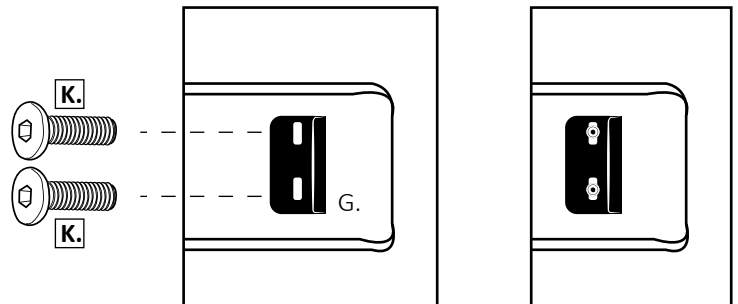


FIGURE 2

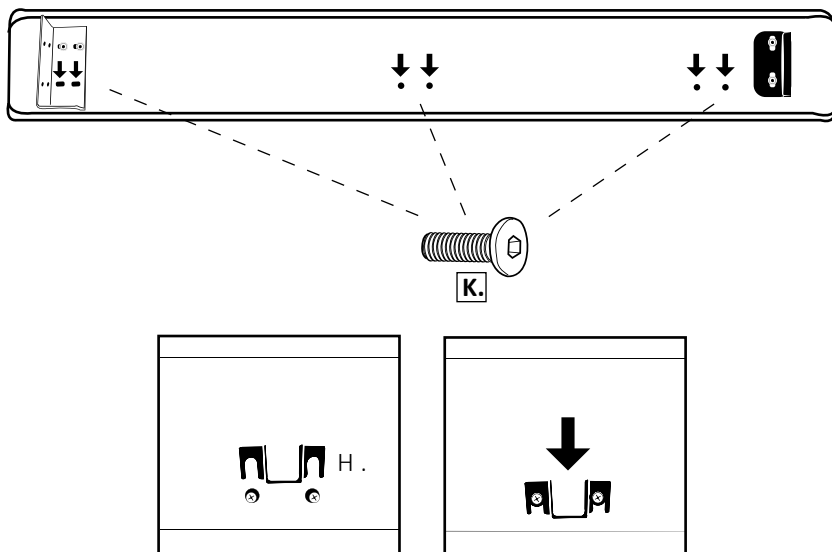

STEP 03

ATTACH FOOTBOARD TO FOOTBOARD BRACKETS, USING 2 OF THE SMALL BOLTS PROVIDED. REPEAT.

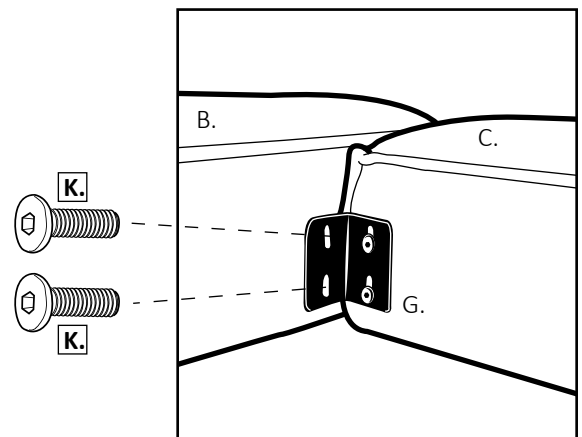





TODDLER BED

STEP 04


- WHAT YOU WILL NEED
- A. HEADBORD x1
 - D. LEGS x4
 - E. MIDDLE LEG x2
 - K. ALLEN BOLT 1" x16
 - L. ALLEN BOLT 2.25" x8
 - M. ALLEN WRENCH x1

ATTACH HEADBOARD (A) TO HEADBOARD BRACKET, USING 4 OF THE 1" ALLEN BOLTS (K). REPEAT ON OTHER SIDE OF HEADBOARD.

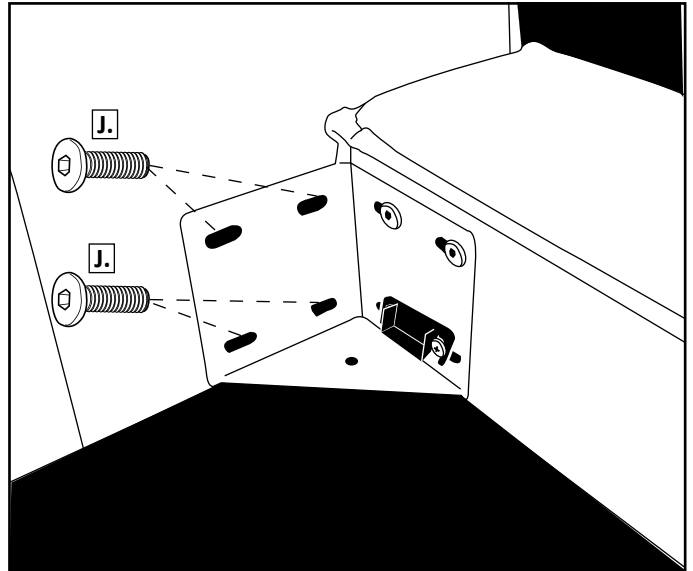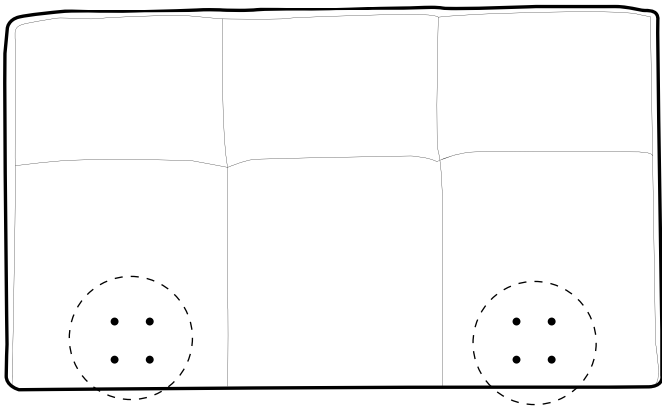

STEP 05

FLIP BED AND SCREW LEGS (D) INTO BOTH THE HEADBOARD AND FOOTBOARD WITH 1" ALLEN BOLT (K). SCREW IN MIDDLE LEGS (E). CAREFULLY FLIP BED BACK.

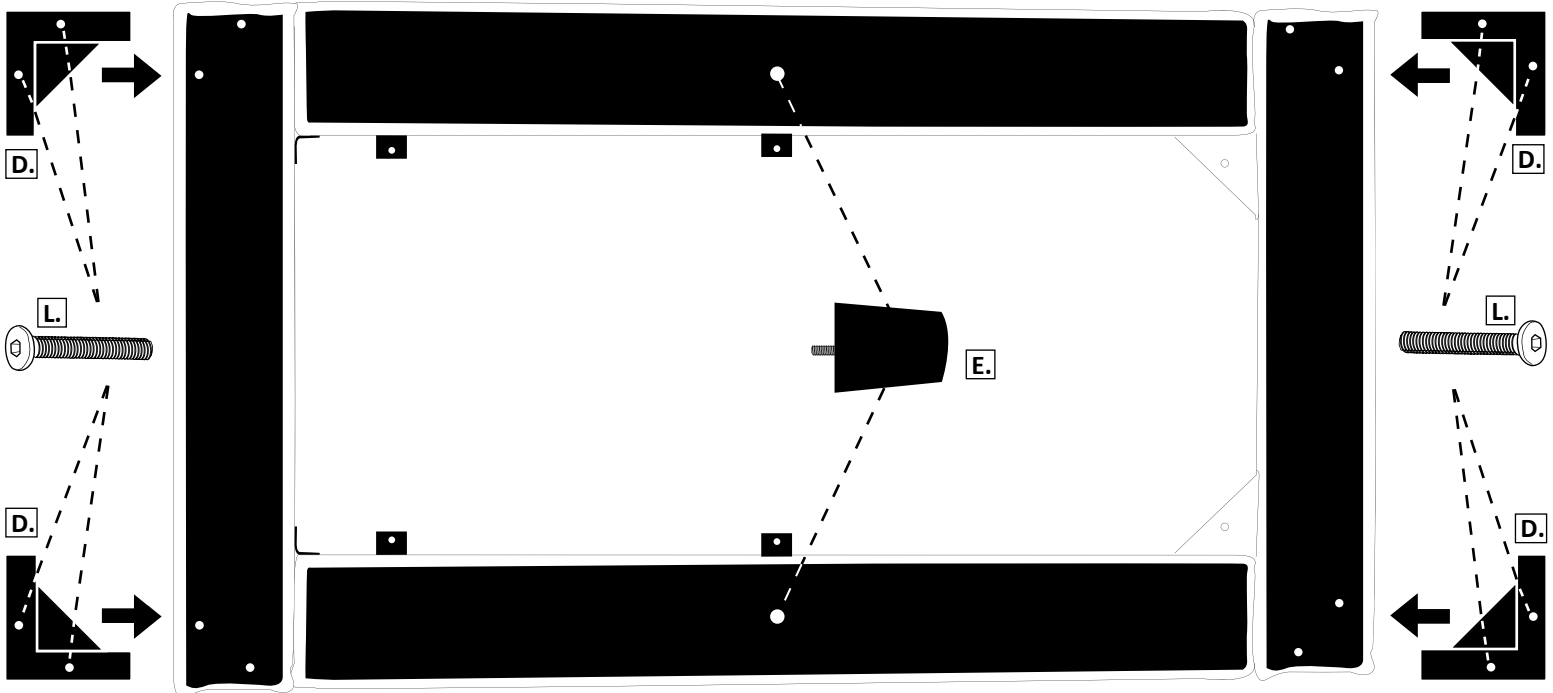

TODDLER BED

WHAT YOU WILL NEED


- I. BOTTOM PANEL X2
- J. WOODEN STABILIZERS X3

STEP 07A

INSTALL THE 3 WOODEN STABILIZERS IN THE SUPPORT BRACKETS.

STEP 07B

PLACE BOTH BOTTOM PANELS DOWN ONTO SUPPORTS.

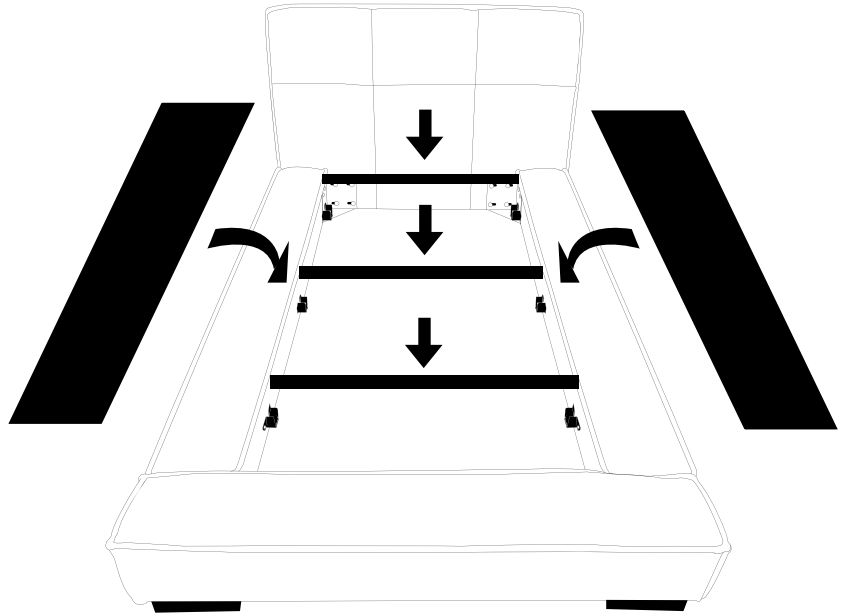

CARE AND MAINTENANCE

PERIODICALLY CHECK YOUR BED FOR ANY LOOSE BOLTS AND SCREWS AND TIGHTEN WHERE NEEDED. IF BED IS DAMAGED, DO NOT USE. CONTACT US FOR REPLACEMENT PARTS. SPOT CLEAN ONLY. AVOID EXCESS MOISTURE.

ONE YEAR LIMITED WARRANTY

DEFECTIVE PARTS WILL BE REPLACED WITH A ONE YEAR PERIOD FROM DATE OF ORIGINAL PURCHASE. MISSING PARTS WILL BE REPLACED WITHIN 30 DAYS FROM THE DAY OF ORIGINAL PURCHASE. SECOND STORY HOME WARRANTS ONLY NEW UNITS PURCHASED IN IT'S ORIGINAL PACKAGING. THE WARRANTY DOES NOT COVER USED, SECOND HAND OR DEMOS AND IS NON-TRANSFERABLE.

ANY DAMAGED OR DEFECTIVE PART THAT RESULTS FROM NORMAL WEAR AND TEAR, ABUSE, NEGLIGENCE, IMPROPER USE OR ALTERATION TO THE FINISH, DESIGN AND HARDWARE OF THE BED, OR THE ASSEMBLY OF THIS PRODUCT ARE NOT COVERED. THE SPECIFIC LEGAL RIGHTS OF THIS WARRANTY MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW ANY EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS.

CONTACT US

PLEASE VISIT OUR WEBSITE AT WWW.SECONDSTORYHOME.COM THERE, YOU CAN FIND MORE PRODUCT INFORMATION, REGISTER YOUR PRODUCT, CONTACT US OR REQUEST REPLACEMENT PARTS.

YOU CAN EMAIL OR WRITE
SUPPORT@SECONDSTORYHOME.COM

SECOND STORY HOME
1477 DAVRIL CIR
CORONA, CA 92878



SECOND
STORY
HOME