


Full Canopy Substrate Instructions


Parts List:

- Side Bracket x 6
- Large End cap x 2
- Rail x 2
- M3 Screw x 22
- M4 Screw x 4
- Nut x 18
- Hanging Kit x 1 (Optional)


1. Attach one large end cap to two rails. It's easiest to begin with the larger bottom holes first using M4 screws. Once connected, attach two M3 screws to the two smaller top holes.

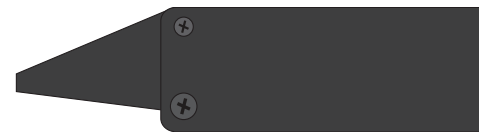


2. Attach a side bracket to each small end cap on the existing rails you have built previously. Use three M3 screws and nuts per side. Note the orientation of the bracket in the picture.

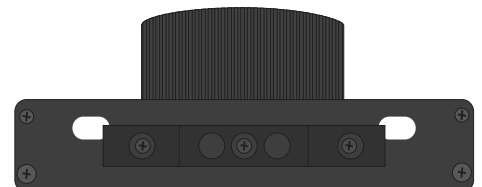

3. Insert the side brackets you have just connected into the slots on both rails. It's often easier to do this with someone holding the larger frame in place.

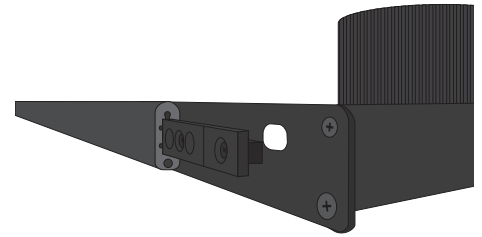

4. Attach the opposite large end cap in the same manner as step 1.

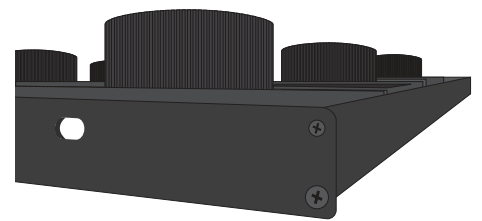

5. *If you are not using our hanging kit please skip this step.* Insert one clip into each open hole on the large end cap. Fasten the opposite end to your canopy or ceiling securely using the included screws and anchors.

