




INSTALLATION INSTRUCTIONS

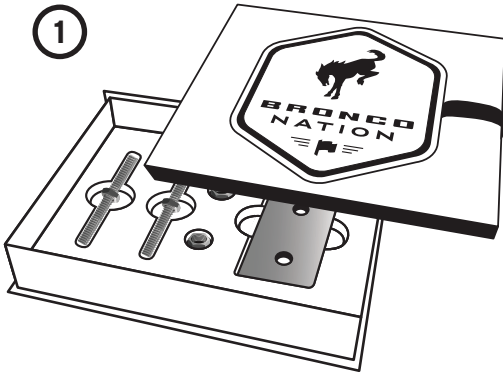


1 Remove foam to see all mounting mechanisms.

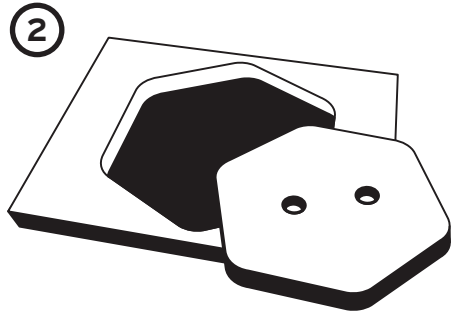


2 Place the medallion upside down.

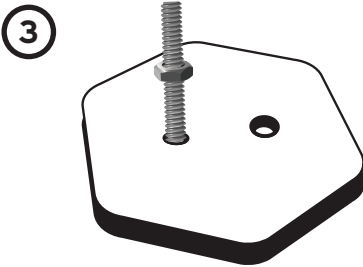

3 Take one double-sided threaded screw rod and hand tighten into back of badge.

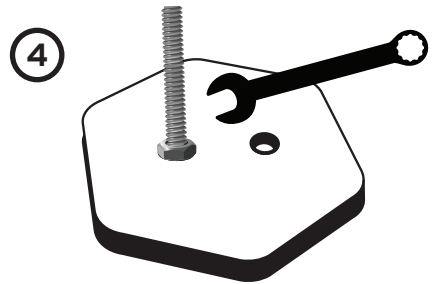


4 Thread existing nut down rod towards center.

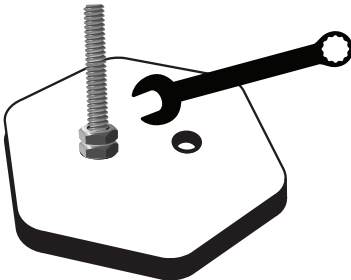


5 Grab 2nd nut and thread down towards 1st nut. Grab a 5/16 wrench and wrench down existing nut towards base. Lightly tighten for extra support. That will allow your screw to be fastened to the badge.

6 Complete steps 3-5 with 2nd double-sided threaded screw rod and remove both top nuts.


INSTALLATION INSTRUCTIONS

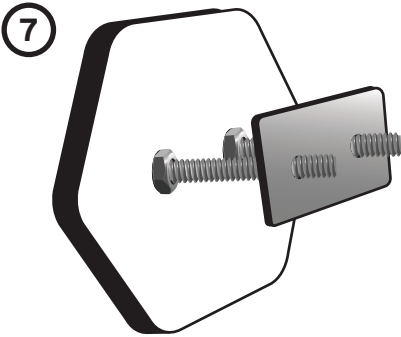

Take back plate and insert into 2 rods while holding grill badge from front side.

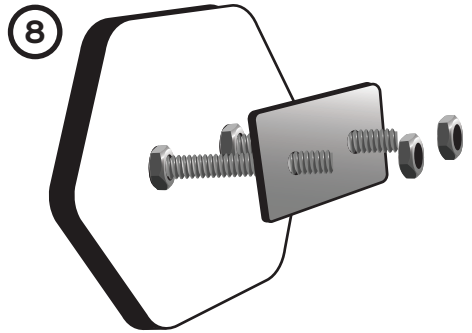

Place the 2 provided nuts from your insert onto each of your rods, tensioning evenly.

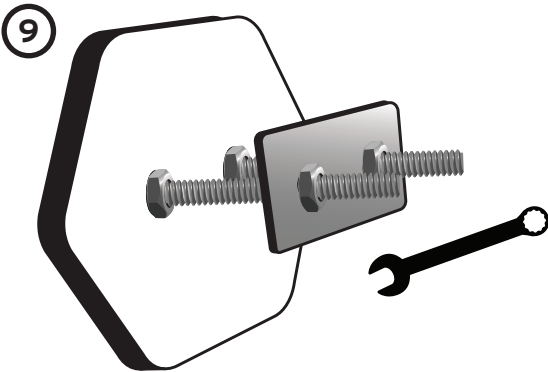

Take 5/16 wrench and tighten evenly. Be cautious not to over tighten and damage your grill.