



INSTALLATION INSTRUCTIONS



MWL-156T-18 RIGID MOUNT Sissy BAR UPRIGHT

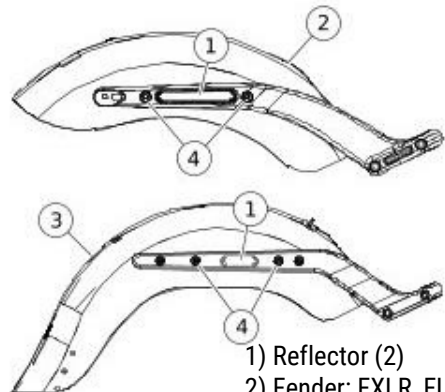

- 1) Reflector (2)
- 2) Fender: FXLR, FLSL, FXBB
- 3) Fender: FLDE, FLHC/S
- 4) Screw (4)

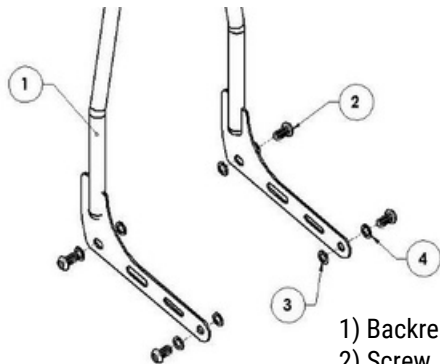

- 1) Backrest support (1)
- 2) Screw, 3/8-16 Button head (4)
- 3) 3/8 Nylon Washers (4)
- 4) 3/8 Stainless Washers (4)

FITMENT:

2018-UP FLDE, FLHCS, FLDE, FLSL, FXBB

MOUNTING PROCEDURE:

1. Remove OEM reflector (1) from each side of fender strut.
 - a. Saw behind reflectors with mono-filament fishing line or waxed dental floss.
 - b. Use GENERAL PURPOSE ADHESIVE REMOVER to remove remaining foam backing tape and adhesive from mounting surface.
 - c. Clean surface with a mixture of 50 percent isopropyl alcohol and 50 percent distilled water.
2. Remove screws (4) from fender (2, 3).
3. Install Nylon washers (3) to backrest assembly (1) Install backrest assembly (1) Apply threadlocker. Install screws (2) Tighten screws (2) Torque: 28-37 N·m (21-27 ft-lbs)

Great Rides Start With Motherwell

Motherwell Products USA, Inc
7074 Portal Way #140
Ferndale, WA 98248
Toll Free (877) 703-7118
www.motherwellproducts.com