


INSTALLATION INSTRUCTIONS

DOC#M610-K

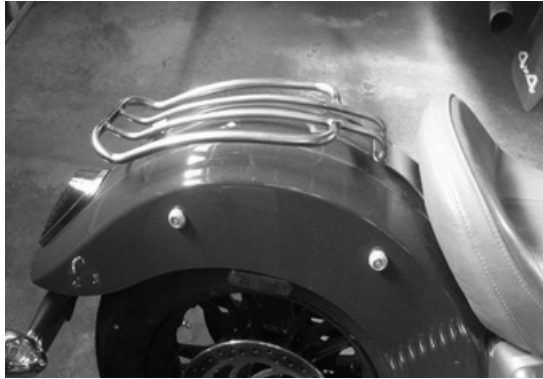

MWL-610 / 610B / 610GB

FITMENT:

2015 Indian Scout

MAX CAPACITY: 10 lbs

MATERIAL: 3/8" Solid steel & 1/2" tubing outside

TECHNICAL SPECS:

Fits 2015 Indian Scout.

Carrying surface is 17" long and 7" wide

WELCOME: These instructions describe the procedure for properly installing the Motherwell Products Solo Luggage Rack.

ATTENTION INSTALLER (if other than owner):

Please forward this instruction sheet to the purchaser of this product as it contains valuable information necessary to the end user.

CAUTION: Start screw carefully to avoid cross threading.

USE AND CARE:

Wash your accessories with the same care you use when washing your motorcycle. Use mild soap and water. DO NOT use abrasive chemicals, cleaners.

WARNING:

Never carry more than 10 lbs. on rack, and always secure cargo properly. Failure to do so can affect handling. Make sure neither cargo straps are loose and come in contact with moving parts, i.e., wheels, brakes, etc...

TOOLS REQUIRED:

#2 Phillips Screw Driver

PARTS INCLUDED:

Luggage Rack
3 8mm Pan head screws
1 Nylon Washers
3 Stainless Steel Washers
1 Foam Tab

MWL Part #:

FAS-037, FAS-039, FAS-038, FOAM-AFT

MOUNTING PROCEDURE:

1. Attach foam to rear mounting point on rack
2. Lift up seat and align front mounting points
3. Screw in 2 screws w/ stainless steel washers for the front mounting points
4. Screw in 1 screw with stainless steel washer and a nylon washer with the stainless steel washer on top
5. Once all 3 screws with washers are installed tighten down all screws
6. Replace seat over top of the front tab of rack

Great Rides Start With Motherwell

Motherwell Products USA, Inc
7074 Portal Way #140
Ferndale, WA 98248
Toll Free (877) 703-7118
www.motherwellproducts.com