






# BR32003

## SPITFIRE COCKPIT UPGRADE SET


Designed for the 1/32 Tamiya Spitfire series.  
Kit contents as shown plus 2.5" black wire.

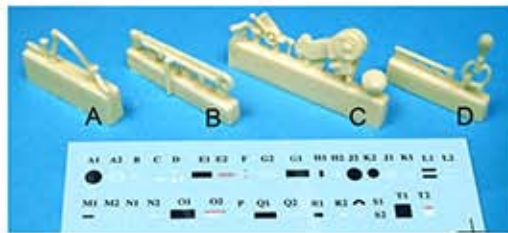

- 1) Detach all parts from casting blocks by careful cutting with a hobby blade and/or saw, Remove any flash and clean up with sandpaper.
- 2) Carefully drill out holes in lower control column with #80 drill bit. Assemble stick as shown. Paint stick. When finished, cut supplied wire into thirds, and thread through holes and attach to fittings on upper control, mcolumn. Attach with PVA or Superglue. Pushrod from casting block D attaches same as part F4 in step 5 of kit instructions
- 3) Attach gear retract quadrant handle as shown in top image of figure 1. Drill out 4 hydraulic connectors and add hydraulic lines from soft wire such as fine solder.
- 4) Throttle and compass are direct kit part replacements. paint both parts as shown. Yellow indicator on compass faces pilot. Apply decals as shown. Apply black decal first.
- 5) Assemble and paint instrument panel as shown in kit but when applying instrument decals, delete the two middle kit instrument decals. They are modern instruments.
- 6) Apply white decals J1 and K1 face down FIRST to back of panel!! When dry, cover them with black discs J2 and K2. If reversed, white details will be invisible.
- 7) Paint and finish rest of cockpit per kit instructions, or using below photos as a guide.
- 8) A gloss coat will aid in application of cockpit stencil decals. For rest of decals, apply black elements first. When dry apply white details over top. Apply decal O1 and O2 to thin card. Trim card to size and apply as shown. Apply final flat coat to seal decals.
- 9) Paint Oxygen hose brown and attach as shown. Hose goes through hole in bulkhead

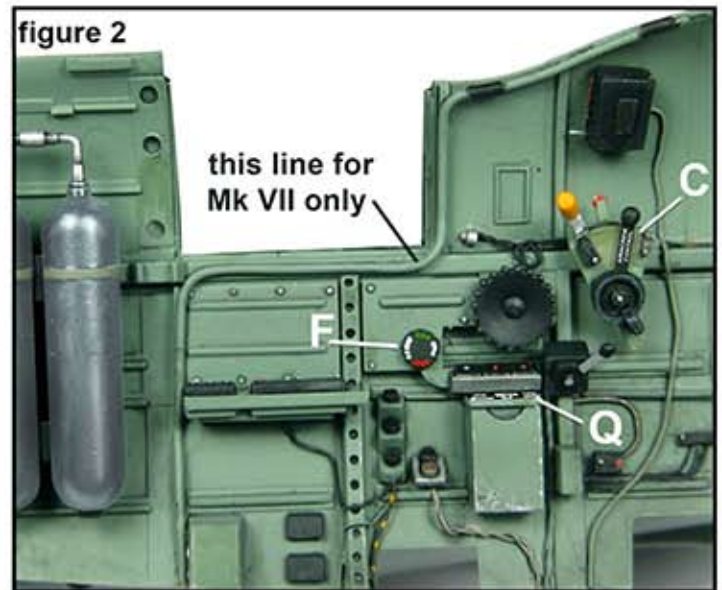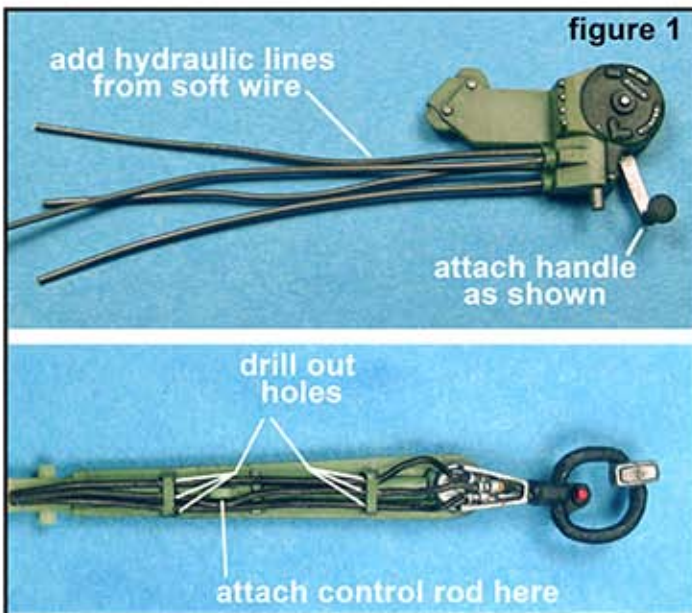


Note: Placard T may be a post war or warbird only fit.

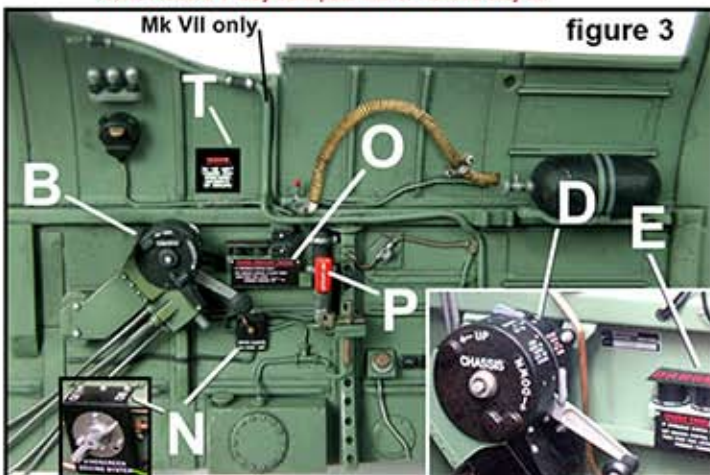




# BR32003 Spitfire cockpit stencil addendum

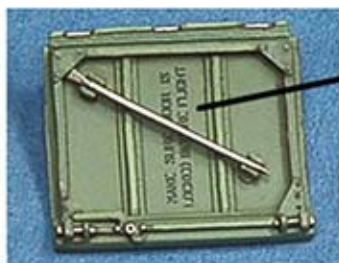


34

or

31

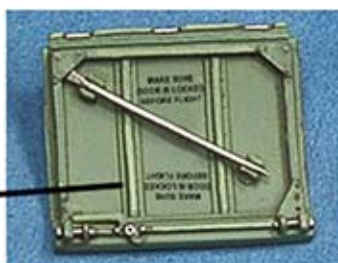


W\*

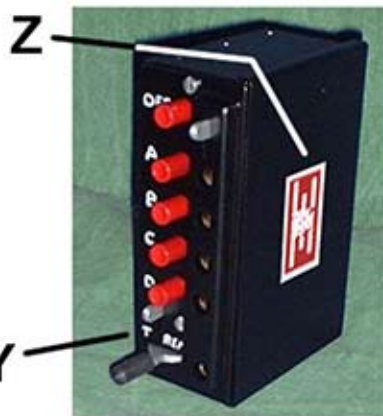

Z

Y

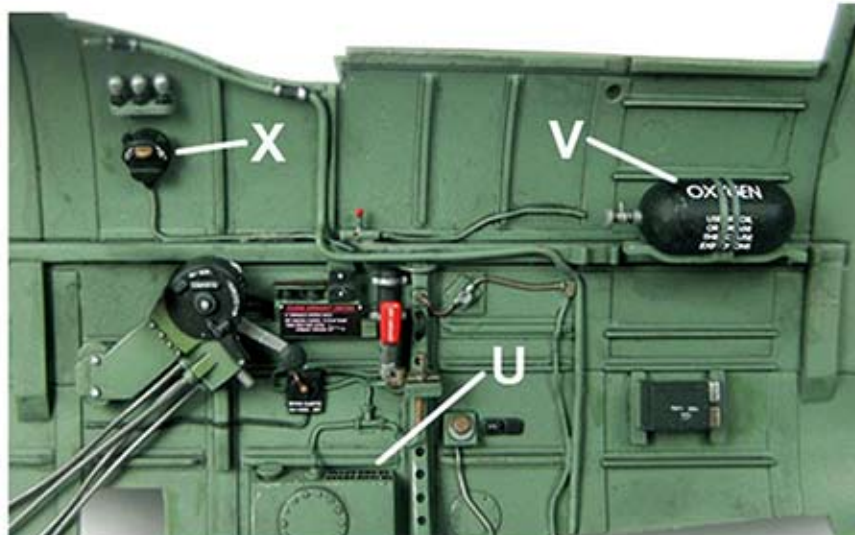

\*Remote Contactor can be found in BC32008 Spitfire Starboard cockpit sidewall. For more details, go to: [www.barracudacals.com](http://www.barracudacals.com)