




BR32380 BR32381
P-51 Mustang Wheels
Diamond, Block Tread




Designed for the 1/32nd new tool Revell P-51D Mustang, but will be a nice upgrade for all other 1/32 Mustang kits.

Remove casting wings by careful scoring then snapping free with pliers. Carefully saw wheels free from casting block. Block sand wheels, checking to see they sit square to the ground. Remove resin hubs and cleanup. Open hub slots and holes (if desired) by carving away flash with sharp hobby blade. The real hubs are see-through. Test fit wheels to gearleg axles. Drill out more if needed.

Happy modelling!

www.barracudacals.com

Master Patterns by Master Mike and Roy Sutherland

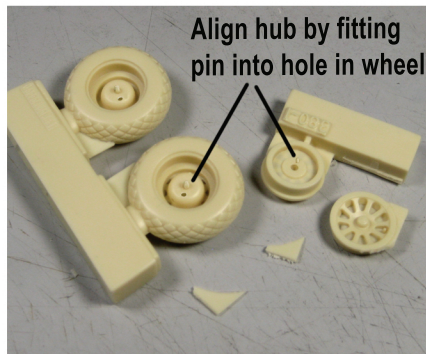

Saw part from sprues. Trim excess from hubs with nippers. Cleanup with a sanding stick. Test fit to wheel as you go.

