



BR32460

## Spitfire Mk IX Early Under Cowling with Unfiltered Intake


Designed for the 1/32 new tool Revell Spitfire Mk IX kit.

This set replaces the kit supplied undercowling with its late style, large Aeroevee carb intake, with the early style small carburettor intake. A simple installation that allows you to build early Spitfire Mk IXs.


- 1) Remove undercowling casting base, sawing off with hobby saw.
- 2) Carefully cut away casting flash on the intake casting and intake throat as shown in the images. Test fit to lower wing & fuselage and clean up with files and sandpaper.
- 3) Remove casting rib by cutting away most of it in small sections with nippers, or by grinding with a motor tool to make it flush. Remove highlighted section of raised rib on fuselage as shown to allow new cowling to fit.
- 4) Tape fuselage halves and lower wing together, test fit resin cowling and adjust as necessary. When the fuselage and wing are assembled, attach cowling with CA.

Happy modelling!


[www.barracudacals.com](http://www.barracudacals.com)

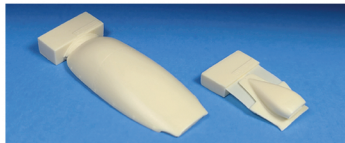

Master pattern by Roy Sutherland

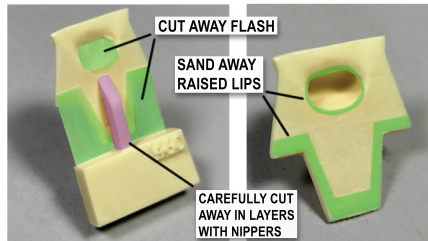

REMOVE SECTION OF RAISED RIB

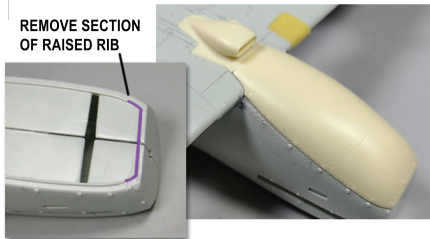

A larger version of these instructions is available to print from the product page on our website.