

For experienced modelers ages
14 and up - Contains small parts

BR48235

B-1B Engine Intake Set

Designed for the Revell 1/48 B-1B



Made with Pride in the U.S.A.

For more information about all of our product lines, go to:
www.barracudacast.com

For experienced modelers ages
14 and up - Contains small parts

BR48235

B-1B Engine Intake Set




Designed for the Revell 1/48 B-1B



This set contains 2 engine pod intake castings and 4 separate intake covers. The intakes are much more accurately shaped and represent the auxiliary intake lips in the open position. Some hand work with epoxy putty or filler of your choice will be required to blend these new parts into the kit nacelles.

1. Carefully saw intake castings from mold blocks. Cleanup edges. Remove the small block that protects the point at the apex of the intake.
2. Fit the intakes to the nacelles. The cross sections are quite different. The kit nacelle will need to be built up to match the cross section of the new intakes. We suggest using epoxy putty such as Magic sculpt or Milliput.
3. Remove the intake covers by sawing off the block then removing the rib with nippers. Test fit and sand as needed. Make sure there is a little play to allow for the thickness of paint on the intake and intake covers. Intake covers are usually painted red. Some covers have the aircraft's number painted on them. Others may have squadron badges. See references.

Happy modelling!

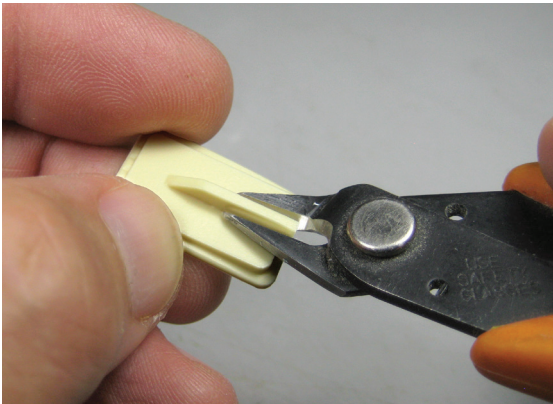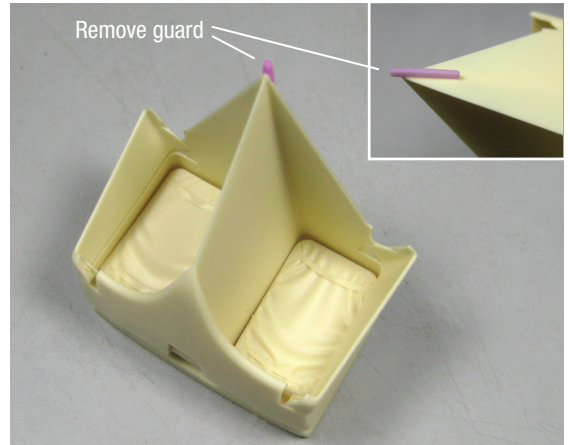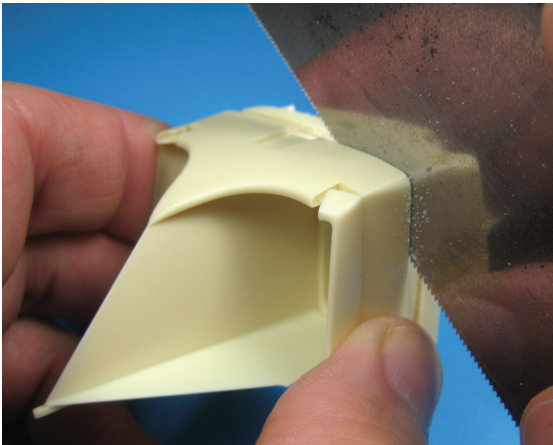

Mike Valdez photo