




E I C H H O L T Z


103184 COATRACK HUDSON L

ASSEMBLY INSTRUCTION

**PARTS**

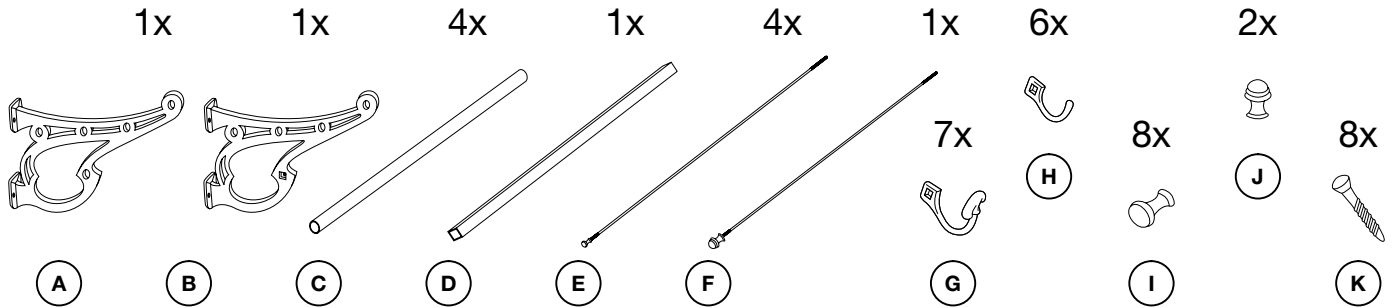


**1** Put left bracket A and the right bracket B on the floor standing on their base. Insert square pipe D loaded with hooks G and hangers H to the square slots in both the brackets.

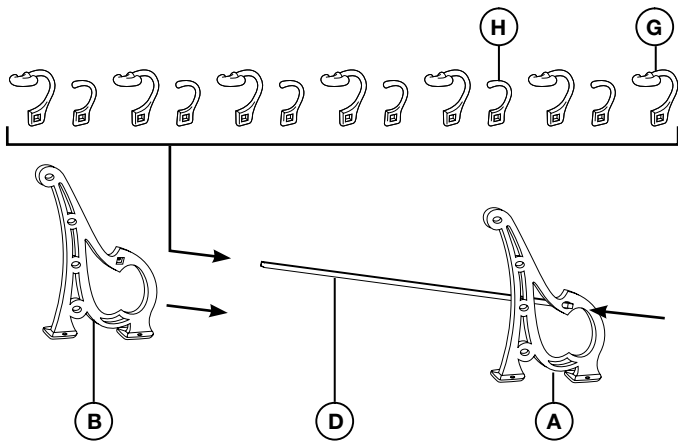

**2** Take first iron bar F and insert it from other side starting from one bracket and continue till the other end is visible from the other side of bracket into square pipe through slots in the both sides of brackets. Loosely fasten screw nuts J on the end of bar which is visible from outer side of bracket.

Take four round pipes E and insert them into the slots in both the brackets one by one. Take first iron bar E and insert it from other side starting from one bracket and continue till the other end is visible from the other side of the other side of bracket  
Screw and loosely fasten nut I on the end of the bar which is visible from outer side of the bracket. Now once all the pipes and nuts are in place, tightly fasten all nuts on all ends.

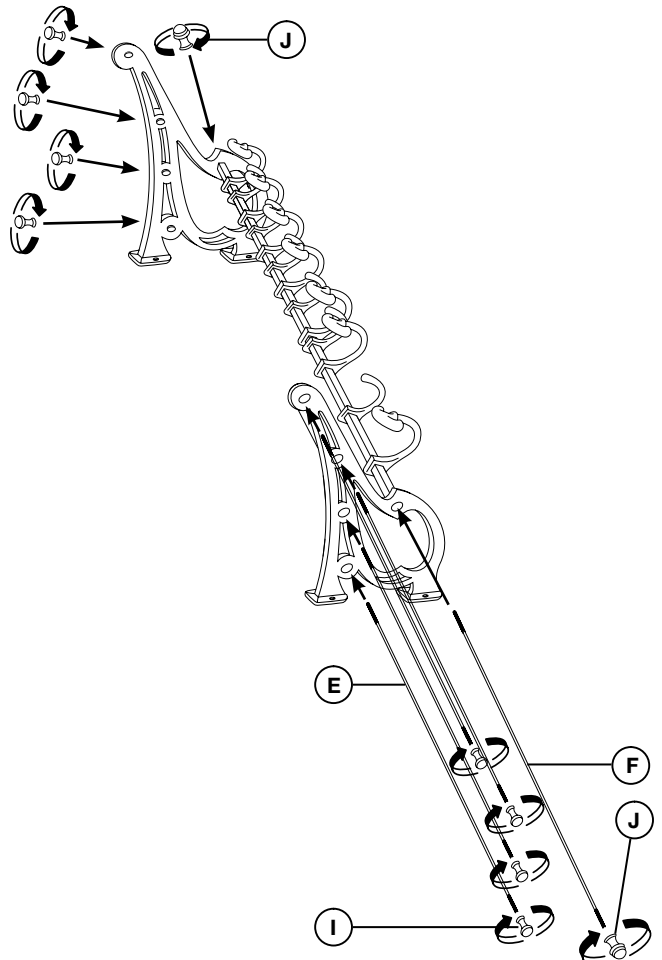

**FINAL**

The assembly is now complete and can be mounted on the wall with the help of 8 screws K provided in the components.

